

REPORT NO. CG-M-6-79



USER MANUAL FOR PROGRAM STATIC
—FIRST PART OF COAST GUARD
SHIP MOTION PROGRAM.

70 Thomas E./Zielinski

Hoffman Maritime Consultants

14) HM2-79141 2017-04-7410-51

11)-----

33

C C

AD A 1



DOCUMENT IS AVAILABLE TO THE U.S. PUBLIC THROUGH THE NATIONAL TECHNICAL INFORMATION SERVICE SPRINGFIELD, VIRGINIA 22161



PREPARED FOR

U.S. DEPARTMENT OF TRANSPORTATION
UNITED STATES COAST GUARD
OFFICE OF MERCHANT MARINE SAFETY
WASHINGTON, D.C. 20593

81 10 2 113

1111829

TIE COPY

NOTICE

This document is disseminated under the sponsorship of the Department of Transportation in the interest of information exchange. The United States Government assumes no liability for its contents or use thereof.

The contents of this report do not necessarily reflect the official view or policy of the Coast Guard; and they do not constitute a standard, specification, or regulation.

This report, or portions thereof may not be used for advertising or sales promotion purposes. Citation of trade names and manufacturers does not constitute endorsement or approval of such products.

(

الرائح يوفين الرافهمين المعارضين المعارضين

Technical Report Documentation Page

	•		· · · · · · · · · · · · · · · · · · ·		
1. Report No.	2 Government Acces	ien Ne.	3. Recipient's Catalog No.		
CG-M-6-79	AD-A105.	227			
4. Title and Subtitle	/	5. Report Date			
User Manual for Program ST	ATIC		. July 1979		
First Port of U.S.C.G. Ship Motion Program			6. Performing Organization Code		
	8. Performing Organization Report No.				
7. Author's)		70.4.			
Thomas E. Zielinski			79141		
9. Performing Organization Name and Addres			10. Wark Unit No (TRAIS)		
Hoffman Maritime Consultan	ts Inc.	-	11. Contract or Grant No.		
9 Glen Head Road		1	CG-74080-B		
Glen Head, New York 11545			13. Type of Report and Pariod Covered		
12 Spansoring Agency Name and Address					
Commandant (G-MMT-4/13)					
U.S. Coast Guard		[Final Manual		
2100 2nd Street, S.W.			14. Spensoring Agency Code		
Washington, D.C. 20593		ļ			
SCORES program is presented data input and output format containership is included format. The program has perties of a vessel and profor the ship motion program moment, grounding, intact other calculations can be	ram STATIC, the with the theological the two major functions of the two majors. The stability, balance for the ladded mass are calculated for the stability.	e first part of retical basis, A sample computations; calculate dimensional hecurves of formuncing of buoya with still water and damping for each sections.	f the input and output ing the hydrostatic pro- ydrodynamic properties , shear force and bending ncy and weight forces and r and quasi-static con- heave, sway, roll and n using either a multi-		
17. Key Words Hydrostatics, curves of for force, bending moment, grow stability, balancing, quasi dimensional added mass and formal mapping, Frank Close 19. Security Classif. (of this report) Unclassified	nding intact -static, two damping, con-	public throug Information S 22161	is available to the U.S. h the National Technical ervice, Springfield, Virginia 21. No. of Popos 22. Price 81 Text		

		Page
	ABSTRACT	
1.	INTRODUCTION	1
II.	OUTLINE OF THEORY	
	A. Hydrostatic Calculations	3
	B. Hydrodynamic Calculations	6
III.	DESCRIPTION OF INPUT SCHEME	
	A. Physical Description of Ship	
	1. Geometry	23
	2. Weight	27
	B. Condition Information	31
	C. Data Card or Data File Input Description	36
	D. Sample Input	54
	1. TERMINAL	56
	2. UNITS	57
	3. OFFSETS	59
	4. DRAFT	60
	5. GROUNDING	65
	6. INTACT STABILITY	68
	7. COEFFICIENT	71
IV.	DESCRIPTION OF OUTPUT SCHEME	73
v.	TIMING AND ERROR MESSAGES	77
VI.	REFERENCES	80
	APPENDIX A - Sample Output A1	- A54
	ADDUNDIY R - Joh Control Files	R1

:

STATIC Program - User Manual Record of Changes

Date	Module/ Subroutine	Page	Description
	Subroutine		W-7
		'	
		,	
	'		
!			
Í			
	!		
	}		
	ļ		
	1		

ABSTRACT

A description of program STATIC, the first part of the revised SCORES program, developed by Hoffman Maritime Consultants (HMC) for use by the U.S. Coast Guard, is presented. This program has two major functions; calculating hydrostatic properties of a vessel and preparing data for the ship motion computations. The curves of form, shear force and bending moment, grounding, intact stability, balancing of buoyancy and weight forces and other calculations can be performed for both static and quasi-static conditions. The two-dimensional added mass and damping for heave, sway and roll are calculated for each ship's section and stored as input for the ship motion program SCOMOT. Program theory, organization and structure, data input and output format are described. A sample computation is included to aid in the understanding of input and output formats.

I. INTRODUCTION

Program STATIC is a two part procedure that first calculates geometric quantities and then two-dimensional hydrodynamic data required for the new modified SCORES program (1)*. The first part of this program has similar capabilities to the Ship Hull Characteristics Program (SHCP) (2) but can perform many other tasks of specialized nature. Hydrostatics, curves of form, shear force and bending moment, grounding, intact stability and balancing of the vessel are specific tasks that can be performed. The quasi-static case, that is the ship poised in an oblique sea of any amplitude, wave length and phase as well as still water case for these calculations can be handled. Preparation of geometric description files for the Springing (3) and Motion (1) programs is also done by the first part of Program STATIC.

The primary calculation of the second part of STATIC is of two-dimensional hydrodynamic properties using the conformal mapping approach (4)(5)(6) and the Frank close fit technique (7)(8). The two-dimensional added mass and damping for heave, sway, roll and sway-roll cross couplings are calculated for each section at twenty-five frequencies. This program thereby separates the lengthy calculations of two-dimensional added mass and damping from the motion calculations by storing these results in a two-dimensional properties (TDP) file which is read by motions program SCOMOT.

Program STATIC is a separate program in the modified SCORES procedure, with a standalone capability. STATIC's greatest asset is that its operation is very simple. The command language used in its input scheme does not require strict formatting or remembering of lengthy input sequences and resembles a conversational type input.

STATIC is written in the FORTRAN IV language, checked out and run on the United Computing Services (UCS) CDC-6600

^{*}Numbers in parentheses refer to list of references at end of this report.

computer system.

The method of analysis is outlined below in Section II. The type of inputting scheme, which facilitates the running of the hydrostatic and two-dimensional hydrodynamic quantities will be described in Section III.

Typical runs showing input and output will be shown in Section IV. Section V will contain error messages and their meaning as well as typical running times for various tasks.

II. OUTLINE OF THEORY

The basic analysis used in STATIC can be divided into two topics:

- A) Hydrostatic properties and static shear force and bending moment
- B) Hydrodynamic calculations using either conformal mapping or Frank close fit techniques.

The two areas will be discussed in the next two sections.

A. Hydrostatic Calculations

Since the first topic is extensively covered in most naval architecture textbooks (9)(10) only a short summary and explanation of unique calculations will be given in this section.

Table 1.1 shows a typical hydrostatic output for a vessel at an even keel draft. Using several of these tables for various drafts enables the drawing of a curve of form, Figure 1.1

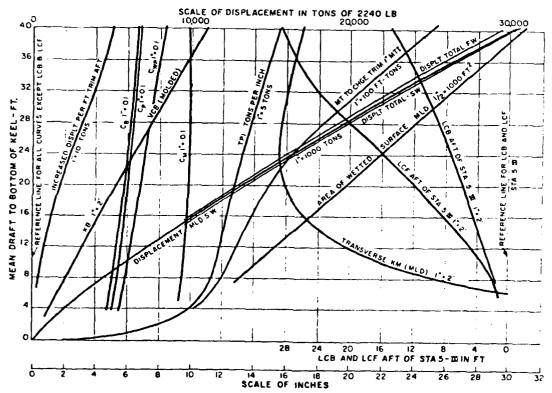


Figure 1.1 Displacement and other curves of form (8)

	EAN DRAFT (FEET) 32.0000	BEAM (FEET) 0.0000 2.0828 2.9063 5.8277 9.6732 15.4857 21.4840 44.2626 59.9864 74.5544 96.7617 103.4558 105.5000 105.5000 105.5000 105.5000 105.3572 102.8140 82.5322 60.6923 74.6923 54.3116 82.7778 30.3031 23.9115 16.9388	AREA (FEET **2) 223.395 254.595 276.908 334.682 398.797 486.653 584.891 702.126 1013.900 1389.990 1803.131 2237.807 2638.511 2949.063 3149.362 3194.614 3152.395 3049.651 2857.579 2537.426 2101.474 1576.490 1301.971 1024.554 767.438 464.400 231.897 125.920 60.208	S.A. COEF. 1.00000 3.81988 2.97745 1.79468 1.28835 .98387 .850739 .71583 .72412 .75580 .80333 .85213 .89435 .93299 .94627 .93377 .90333 .84759 .77127 .69241 .596928 .52754 .44157 .51754 .49068 .58291 .61781	VCB (FEET) 10.2856 11.5951 12.1516 13.2493 14.3146 15.4487 16.4863 17.2378 18.4163 17.8366 17.4280 17.0969 16.8180 17.4280 17.6514 17.6514 17.6514 17.6514 17.6514 17.6514 17.6514 17.6514 17.6514 17.6514 18.34691 19.34691 19.34691 19.34691 19.34691 19.3413 20.88848 21.9455 24.3791 26.3954 28.4712 29.7100	HCB (FEET) 0.0000
BLOCK CO HALF-ARE MIDSHIP PRISMATI TRIM HEEL VCB (FRO HCB (FRO LCB (FRO BM,TRANS BM,LONGI MOMENT T L.TONS P AREA OF WATERPLA L.C.F. F CHANGE I	MENT (MLD EFFICIENT A MIDSHIP SECTION CC C COEFFIC M B.L.) M C.L.) M F.P.) VERSE TUDINAL O ALTER T: ER O.1 F: WATERPLANI NE COEFFIC ROM F.P.	(MLD.) SECTION OEFFICIENT IENT (MLD.) RIM O.1 FE EET IMMERS E CIENT (MLD.	ET ION	0.000 17.782 0.000 477.509 27.35 1471.064 7734.158 181.422 63497.560 .683650 499.798	L.TONS FEET **2 FEET OFEET FEET FEET FEET FEET FEET FEET FEET	0.0000

The cross curves of stability and bending moment and shear force calculations (9) are also performed.

One of the unique features of STATIC is the ability to analyze a ship in a quasi-static condition. A ship can be frozen in a wave, which is comprised of several sine waves of varying amplitude, wave length, phase and heading. This is extremely important in considering the fluctuations in bending moment due to the sea. It has also been shown by Paulling (11) that the ship's static stability is very sensitive to a seaway.

An additional calculation performed by program STATIC is grounding. When a vessel runs aground, the ocean floor exerts a force on the vessel which causes the vessel to rise and trim. The maximum bending moment is affected by the grounding force and is a subject of concern for the U.S.C.G.

One important point needs mentioning in the hydrostatic calculations; all integrations and interpolations are linear. Straight line interpolation and trapazoidal integrations are used.

The specific hydrostatic procedures and options of program STATIC are discussed in Chapter III.

B. Hydrodynamic Calculations

The choice of two methods of analysis in the hydrodynamic calculations was necessary to handle a wider variety of ship sections. Each method has its advantages as well as short-comings. Therefore, a brief description of each shall be given.

The conformal mapping technique involves the representation of a ship's section by a Fourier-like series whose coefficients are called mapping coefficients. Once the mapping coefficients are known, it is relatively a straight-forward procedure to obtain the hydrodynamic quantities; therefore, the basic problem is the mapping of the ship's section. Most normal ship sections can be adequately described by mapping coefficients but certain sections such as completely submerged sections and bulbous bows cannot be mapped.

A ship's section can be handled by the close fit method which utilizes the Green function to represent pulsating sources below the free surface. Most sections can be handled using this analysis, but a very serious drawback does exist. It can be shown that a set of discrete "irregular" frequencies in the Green's function-integral equation failed to give a solution. In the area around each of these frequencies, the results are also unreliable but they are usually at a high frequency and out of the range of interest. As the beam to draft ratio becomes large, these "irregular" frequencies approach the operating frequencies and seriously effect the accuracy of the results.

The conformal mapping technique does not have this problem, so that it was chosen as the preferable method of analysis. If a section could not be represented by mapping coefficients, the close fit method was chosen. It was found that both methods required approximately the same computation time for comparable accuracy. The conformal mapping technique discussion is divided into two parts; the mapping of a section and the hydrodynamic properties once the mapping coefficients are known. The close fit method will also be discussed.

1. Conformal Mapping Technique

The one-to-one correspondence between the points on two distinct planes expressed by a single analytical function is the basis of conformal mapping. It finds application to ship problems when shapes whose equations and properties are unknown, can be mapped into shapes whose equations and properties are known in another plane. Most ship sections can be conformally mapped onto a circle of unit radius. The flow about an infinite cylinder of unit radius is known, therefore, the ship's section flow can be determined from the mapping transformation.

a) The Representation of Ship Sections by Conformal Mapping

The particular method discussed below was originally developed in (4) and has since been modified and updated in (5) and (12). The method described here is from (4). It is desired to represent a ship's section by the following equations:

$$x(\theta) = a_0 \sin \theta - \sum_{m=1}^{N} a_{2m-1} \sin (2_{m-1}) \theta$$
 [1]

$$y(\theta) = a_0 \cos \theta + \sum_{m=1}^{N} a_{2m-1} \cos (2_{m-1}) \theta$$
 [2]

where a_0 , a_1 , a_3 ... a_{2n-1} are the mapping coefficients, θ is the angle in the plane of the circle (note it is not in the plane ship), and

N is the number of mapping coefficients. Figure 1 shows a typical ship's section.

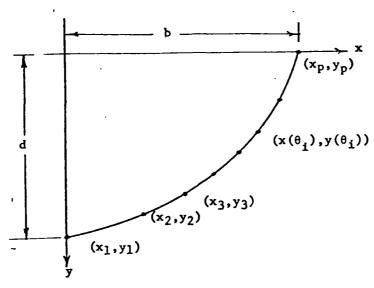


Figure 1.2

As can be seen from Equation 1 and 2, the unknowns are a_0 , a_1 : a_3 ... a_{2n-1} , and θ . It is not possible to obtain an analytic solution of N>2. Therefore, an iterative approach must be used. The values of x_i and y_i along the section contour are given to define the section.

The value of x and y for a specific value of θ and the mapping coefficients can be determined from the equation given above. However, x and y are the known quantities and the coefficients cannot be solved for directly, because the values of θ also depend on the coefficients. The first guess at the coefficients can be made rather arbitrarily, so long as the assumed curve does not deviate too far from the actual section shape. The better the guess, the fewer number of iterations to convergence. For this reason, a two-parameter mapping developed by Lewis (13) based

upon the beam, draft and section area in use. Once the mapping coefficients are known, it is necessary to find a θ_i that represents x_i and y_i . This is performed by assuming that the points $x(\theta_i)$ and $y(\theta_i)$ be on the same radial line as x_i and y_i (See Figure 2).

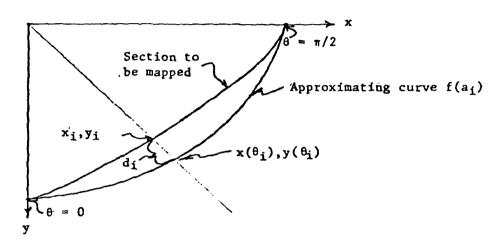


Figure 2

This can be re-stated as:

$$\frac{y(\theta_i)}{x(\theta_i)} = \frac{y_i}{x_i}$$
 [3]

which can be re-written as:

$$y(\theta_i) \times_i - x(\theta_i) y_i = 0.$$

This equation is solved using an iterative procedure based on a combination of the "secant" and "regular-falsi" methods. This procedure assumes the mapping coefficients (a_i) 's are known and solves for the angles (θ_i) 's).

Now a least squares technique is used to determine the mapping coefficients (a_i 's) assuming that

the angles (θ_i 's) are correct. First a set of linear equations in the coefficients a_n may be set up in the following manner. The squared distance between any two points on a radial line between the actual and calculated curve is as follows:

$$e_{i} = d_{i}^{2} = \left[x(\theta_{i}) - x_{i}\right]^{2} + \left[y(\theta_{i}) - y_{i}\right]^{2}$$
 [5]

or substituting equations [1] and [2] into [5]

$$e_{i} = \{ a_{0} \sin \theta_{i} - \sum_{m=1}^{N} a_{2m-1} \sin (2m-1) \theta_{i} - x_{i} \}^{2}$$

$$+ \{ a_{0} \cos \theta_{i} + \sum_{m=1}^{N} a_{2m-1} \cos (2m-1) \theta_{i} - y_{i} \}^{2}$$
 [6]

Taking the sum of the above distances for each input point along the curve gives:

$$E = \sum_{i=1}^{P} e_i$$
 [7]

where there are P input points. Minimizing this sum with respect to each of the coefficients a_m gives what is called a least squares fit to the curve ($\theta = \theta_i$ is considered constant).

$$\frac{1}{3a_{m}} = 0$$
 $m = 0, 1, 3, 5, 2N-1$ [8]

This will yield N+1 linear equations in $a_0, a_1, a_3...$ where N+1 is the number of coefficients.

The values of a_m can then be computed so as to provide a solution for each of the equations. A matrix solution was chosen to accomplish this. The matrix solution is of the form:

$$X = [A]^{-1} B$$
 [9]

Each component is as follows:

$$X = \left\{ \begin{array}{c} a_{0} \\ a_{1} \\ a_{3} \\ a_{5} \\ a_{7} \\ \vdots \\ a_{2N-1} \end{array} \right\}$$
 [10]

$$A = \begin{cases} P & \Sigma \cos 2\theta & \Sigma \cos 2\theta & \dots \sum \cos 2N\theta \\ \overline{\Sigma} \cos 2\theta & P & \Sigma \cos 2\theta & \dots \sum \cos 2(N-1)\theta \\ \overline{\Sigma} \cos 2\theta & \overline{\Sigma} \cos 2\theta & P & \dots \sum \cos 2(N-2)\theta \\ \vdots & \vdots & \ddots & \vdots \\ \overline{\Sigma} \cos 2N\theta & \Sigma \cos 2(N-1)\theta & \vdots & P \end{cases}$$

$$B = \begin{cases} \Sigma y \cos \theta + x \sin \theta \\ \Sigma y \cos \theta - x \sin \theta \\ \Sigma y \cos 3\theta - x \sin 3\theta \\ \vdots \\ [\Sigma y \cos (2N-1)\theta - x \sin (2N-1)] \theta \end{cases}$$
[12]

where all the summations are from 1 to P for each point on the curve.

b) Hydrodynamic Coefficients Using Conformal Mapping

The basic method used for the hydrodynamic portion was developed by Hoffman (4) for the case of vertical motions. It was later extended by van Hooff (6) based on the theory of Hoffman (4), Porter (14), and Ursell (15) for the case of lateral motions. HYDRO2D is based on the conformal mapping method (6) and the Frank close fit method (16).

Since a detailed development of the theory is given in (6), only a summary of the equations shall be given.

The section is defined by, as mentioned previously, the following equations:

$$x = x(\theta) = a_0 \sin \theta - \sum_{m=1}^{N} a_{2m-1} \sin (2m-1) \theta$$
 [13]

$$y = y(\theta) = a_0 \cos \theta + \sum_{m=1}^{N} a_{2m-1} \cos (2m-1) \theta$$
 [14]

whose derivatives are:

$$\frac{dx}{d\theta} = \frac{dx(\theta)}{d\theta} = a_0 \cos \theta - \sum_{m=1}^{N} (2m-1) a_{2m-1} \cos (2m-1) \theta$$
 [15]

$$\frac{dy}{d\theta} = \frac{dy(\theta)}{d\theta} = a_0 \sin \theta - \sum_{m=1}^{N} (2m-1) a_{2m-1} \sin (2m-1) \theta \quad [10]$$

The hydrodynamic calculations are divided into vertical and lateral motions for a frequency, ω , or wave number, $k = \omega^2/g$.

Vertical Motion

The added mass, $A_{33}^{'}$, and damping, $N_{z}^{'}$, at a specific frequency are given as follows:

$$A_{33} = 2\rho \int_{0}^{\pi/2} P_{aH}(\theta) \frac{dx}{d\theta} d\theta$$
 [17]

$$N_{z}' = 2\rho\omega_{0}^{\pi/2} P_{vH}(\theta) \frac{dx}{d\theta} d\theta$$
 [18]

where ρ is the mass density of the medium and ω is the wave frequency, $P_{aH}^{}(\theta)$ is the hydrodynamic pressure in phase with acceleration and $P_{vH}^{}(\theta)$ is in phase with the velocity as shown below:

$$P_{aH}(\theta) = b \frac{M_H (\theta) B_H + N_H (\theta) A_H}{A_H^2 + B_H^2}$$
 [19]

$$P_{vH}(\theta) = b \frac{M_H (\theta) A_H - N_H (\theta) B_H}{A_H^2 + B_H^2}$$
 [20]

where:

b = half beam of section

 A_{H} = stream function in phase with acceleration

$$= \psi_{cH} \left(\frac{\pi}{2}\right) + \sum_{m=1}^{\infty} p_{2mH} \psi_{2mH} \left(\frac{\pi}{2}\right)$$
 [21]

 B_{H} = stream function in phase with velocity

$$= \psi_{sH} \left(\frac{\pi}{2}\right) + \sum_{m=1}^{\infty} q_{2mH} \psi_{2mH} \left(\frac{\pi}{2}\right)$$
 [22]

 $M_{H}(\theta)$ = sine component of the velocity potential at an arbitrary point on the contour

=
$$\phi_{sH}(\theta) + \sum_{m=1}^{\infty} q_{2mH} \phi_{2mH}(\theta)$$
 [23]

 $N_{H}(\theta)$ = cosine component of the velocity potential at an arbitrary point on the contour

=
$$\phi_{cH}(\theta) + \sum_{m=1}^{\infty} p_{2mH} \phi_{2mH}(\theta)$$
 [24]

The cosine component of the multiple potential p_{2mH} and sine component q_{2mH} are found by a least squares involving the solution of the following matrix equations:

$$p_{2mH} = [x]^{-1} y_1$$
 [25]

$$q_{2mH} = [x]^{-1} y_2$$
 [26]

where:

$$X = X_{ij} = \sum_{\theta} D_{iH}(\theta) D_{jH}(\theta)$$
 [27]

$$Y1 = Y1_{j} = \sum_{\theta} D_{jH}(\theta) \left[\psi_{cH}(\theta) - (\frac{x}{b}) \psi_{cH}(\frac{\pi}{2}) \right] \qquad [23]$$

$$Y2 = Y2_{j} = \sum_{\theta} D_{jH}(\theta) \left[\psi_{sH}(\theta) - (\frac{x}{b}) \psi_{sH}(\frac{\pi}{2}) \right] \qquad [23]$$

$$D_{iH}(\theta) = (\frac{x}{b}) \psi_{2iH} (\frac{\pi}{2}) - \psi_{2iH} (\theta)$$
 [30]

The remaining equations are as follows: Stream Functions:

$$\psi_{cH}(\theta) = \pi e^{-ky} \sin(kx)$$

$$\psi_{sH}(\theta) = \pi e^{ky} \cos(kx) + \int_{0}^{\infty} e^{-\beta x} \left[\frac{k \cos(\beta y) + \beta \sin(\beta y)}{\beta^2 + k^2} \right] d\beta$$

$$\psi_{2mH}(\theta) = \cos(2m\theta) - \sum_{n=1}^{N} \frac{k(2n-3) a_{2n-3} \cos(2m+2n-3)\theta}{2m + 2n - 3}$$
[33]

Velocity Potential Functions:

$$\phi_{\text{cH}}(\theta) = \pi e^{-ky} \cos(kx)$$

$$\phi_{\text{sH}}(\theta) = \pi e^{ky} \sin(kx) - \int_{0}^{\infty} e^{-\beta x} \left[\frac{\beta \cos(\beta y) - k \sin(\beta y)}{\beta^2 + k^2} \right] d\beta$$
[35]

$$\xi_{2mH}(\theta) = \sin(2m\theta) + \sum_{n=1}^{N} \frac{k(2n-3) a_{2n-3} \sin(2m+2n-3)\theta}{2m+2n-3}$$
 [36]

Lateral Motion

The lateral motion calculations consist of added mass and damping for sway, roll, sway-roll cross coupling and roll-sway cross coupling. The equations for these values are given as follows:

Sway Added Mass =
$$2\rho \int_{0}^{\pi/2} P_{aS}(\theta) \frac{dy}{d\theta} d\theta$$
 [37]
Sway Damping = $2\rho \omega \int_{0}^{\pi/2} P_{vS}(\theta) \frac{dy}{d\theta} d\theta$ [38]
Sway-Roll Added = $2\rho \int_{0}^{\pi/2} P_{aS}(\theta) \left(x \frac{dx}{d\theta} + y \frac{dy}{d\theta}\right) d\theta$ [37]

Sway-Roll Damping =
$$2\rho\omega \int_{0}^{\pi/2} P_{vS}(\theta) \left(x \frac{dx}{d\theta} + y \frac{dy}{d\theta}\right) d\theta$$
 [40]

Roll Added Moment
$$2\rho \int_{0}^{\infty} P_{aR}(\theta) \left(x \frac{dx}{d\theta} + y \frac{dy}{d\theta}\right) d\theta$$
 [41]

Roll Damping =
$$2\rho\omega \int_{0}^{\pi/2} P_{vR}(\theta) \left(x \frac{dx}{d\theta} + y \frac{dy}{d\theta}\right) d\theta$$
 [42]

Roll-Sway Added =
$$2p \int_{0}^{\pi/2} P_{aR}(\theta) \frac{dy}{d\theta} d\theta$$
 [43]

Roll-Sway Damping =
$$2\rho\omega$$
 $\int_{0}^{\pi/2} vR (\theta) \frac{dy}{d\theta} d\theta$ [44]

where the pressures are defined as follows:

$$P_{aS}(\theta) = d \frac{M_S(\theta) B_S + N_S(\theta) A_S}{A_S^2 + B_S^2}$$
 [45]

$$P_{vS}(\theta) = d \frac{M_S(\theta) A_S - N_S(\theta) B_S}{A_S^2 + B_S^2}$$
 [46]

$$P_{aR}(\theta) = (\frac{d^2 - b^2}{2}) \frac{M_R(\theta) B_R + N_R(\theta) A_R}{A_R^2 + B_R^2}$$
 [47]

$$P_{VR}(\theta) = (\frac{d^2 - b^2}{2}) \frac{M_R(\theta) A_R - N_R(\theta) B_R}{A_R^2 + B_R^2}$$
 [48]

where d is the section draft and b the waterline half beam. For Sway:

A_s = stream function in phase with acceleration

$$= \psi_{cS} (\frac{\pi}{2}) + \sum_{m=1}^{\infty} p_{2mS} \psi_{2mS} (\frac{\pi}{2})$$
 [49]

 B_s = stream function in phase with velocity

$$= \psi_{sS} \left(\frac{\pi}{2}\right) + \sum_{m=1}^{\infty} q_{2mS} \psi_{2mS} \left(\frac{\pi}{2}\right)$$
 [50]

 $M_S(\theta)$ = sine component of the velocity potential at an arbitrary point on the contour

$$= \phi_{sS} (\theta) + \sum_{m=1}^{\infty} q_{2mS} \phi_{2mS} (\theta)$$
 [51]

 $N_{\rm S}(\theta)$ = cosine component of the velocity potential at an arbitrary point on the contour

$$= \phi_{cS}(\theta) + \sum_{m=1}^{\infty} p_{2mS} \phi_{2mS}(\theta)$$
 [52]

For Roll:

 A_{R} = stream function in phase with acceleration

$$= \psi_{cR} \left(\frac{\pi}{2}\right) + \sum_{n=1}^{\infty} p_{2nR} \psi_{2nR} \left(\frac{\pi}{2}\right)$$
 [53]

 B_{R} = stream function in phase with velocity

$$= \psi_{sR} \left(\frac{\pi}{2}\right) + \sum_{m=1}^{\infty} q_{2mR} \psi_{2mR} \left(\frac{\pi}{2}\right)$$
 [54]

 $M_R(\theta)$ = sine component of the velocity potential at an arbitrary point on the contour

=
$$\phi_{sR}(\theta) + \sum_{m=1}^{\infty} q_{2mR} \phi_{2mR}(\theta)$$
 [55]

 $N_R(\theta)$ = cosine component of the velocity potential at an arbitrary point on the contour

$$= \phi_{cR} (\theta) + \sum_{m=1}^{\infty} P_{2mR} \phi_{2mR} (\theta)$$
 [56]

The cosine components of the multiple potential p_{2mS} and p_{2mR} and sine components q_{2mS} and q_{2mR} are found by a least squares fit involving the solution of the matrix equations:

$$p_{2mS} = [X_S]^{-1} YI_S$$
 [57]

$$q_{2mS} = [x_S]^{-1} y_{2S}$$
 [58]

$$p_{2mR} = [X_R]^{-1} Y 1_R$$
 [59]

$$q_{2mR} = [X_R]^{-1} Y_{2R}$$
 [60]

where:

$$X_S = X_{ij} = \sum_{\theta} D_{iS}(\theta) D_{jS}(\theta)$$
 [61]

$$Y1_{S} = Y1_{j} = \sum_{\theta} D_{jS}(\theta) \{ \psi_{cS}(\theta) - \psi_{cS}(\frac{\pi}{2}) - (\frac{y}{d}) [\psi_{cS}(0) - \psi_{cS}(\frac{\pi}{2})] \}$$

$$[62]$$

$$Y^{2}_{S} = Y^{2}_{j} = \sum_{\theta} D_{jS}(\theta) \left\{ \psi_{sS}(\theta) - \psi_{sS}(\frac{\pi}{2}) - (\frac{y}{d}) \left[\psi_{sS}(0) - \psi_{sS}(\frac{\pi}{2}) \right] \right\}$$

$$\left[63 \right]$$

$$D_{jS}(\theta) = (\frac{y}{d}) \left[\psi_{2jS}(0) - \psi_{2jS}(\frac{\pi}{2}) \right] + \psi_{2jS}(\frac{\pi}{2}) - \psi_{2jS}(\theta)$$
[64]

[68]

$$X_{R} = X_{ij} = \sum_{\theta} D_{iR} (\theta) D_{jR} (\theta)$$

$$YI_{R} = YI_{j} = \sum_{\theta} D_{jR} \left\{ \left(\frac{d^{2} - b^{2}}{b^{2}} \right) \left[\psi_{cR} (\theta) - \psi_{cR} (\frac{\pi}{2}) \right] - \left(\frac{x^{2} + y^{2}}{b^{2}} - 1 \right) \left[\psi_{cR} (0) - \psi_{cR} (\frac{\pi}{2}) \right] \right\}$$

$$Y_{2R} = Y_{2j} = \sum_{\theta} D_{jR} \left\{ \left(\frac{d^{2} - b^{2}}{b^{2}} \right) \left[\psi_{sR} (\theta) - \psi_{sR} (\frac{\pi}{2}) \right] - \left(\frac{x^{2} + y^{2}}{b^{2}} - 1 \right) \left[\psi_{sR} (0) - \psi_{sR} (\frac{\pi}{2}) \right] \right\}$$

$$U_{jR} (\theta) = \left(\frac{x^{2} + y^{2}}{b^{2}} - 1 \right) \left[\psi_{2jR} (0) - \psi_{2jR} (\frac{\pi}{2}) \right] - \left(\frac{d^{2} - b^{2}}{b^{2}} \right)$$

The remaining equations are as follows:

 $\left[\psi_{2iR}\left(\theta\right) - \psi_{2iR}\left(\frac{\pi}{2}\right)\right]$

Stream functions:

$$\psi_{cR}(\theta) = \psi_{cS}(\theta) = \pi e^{-ky} \cos(kx)$$

$$\psi_{cR}(\theta) = \psi_{sS}(\theta) = \psi_{sH}(\theta) - \frac{y}{k(x^2 + y^2)}$$

$$= \tau e^{ky} \sin(kx) + \int_{0}^{\infty} e^{-kx} \left[\frac{b \cos(ky) - k \sin(ky)}{b^2 + k^2} \right] dx$$

$$- \frac{y}{k(x^2 + y^2)}$$

$$2\pi R(\theta) = \psi_{2\pi S}(\theta) = -\cos(2\pi + 1) \theta + \int_{0}^{\infty} e^{-ky} dx$$

$$= \frac{y}{k(x^2 + y^2)}$$

$$= \frac{y}{k(x^2 + y^2)}$$

$$= \frac{y}{k(x^2 + y^2)}$$

$$= \frac{y}{k(x^2 + y^2)}$$

 ψ_{2mR} (0) = ψ_{2mS} (6) = $-\cos(2\pi + 1) + \sum_{n=1}^{R}$

$$\frac{k(2n-3) \ a_{2n-3} \cos (2\pi+2n-2)\theta}{2\pi + 2n - 2}$$
 [71]

Velocity potential functions:

$$\phi_{cR}(\theta) = \phi_{cS}(\theta) = -\pi e^{-ky} \sin(kx)$$
 [72]

$$\psi_{sR}$$
 (θ) = ϕ_{sS} (θ) = $-\psi_{sH}$ (θ) + $\frac{x}{k(x^2 + y^2)}$

$$= \pi e^{ky} \cos(kx) + \int_{0}^{\infty} e^{-\beta x} \left[\frac{k \cos(\beta y) + \beta \sin(\beta y)}{\beta^2 + k^2} \right] d\beta + \frac{x}{k(x^2 + y^2)}$$

$$\phi_{2mR}(\theta) = \phi_{2mS}(\theta) = \sin(2m+1)\theta - \sum_{n=1}^{N} \frac{k(2n-3) a_{2n-3} \sin(2m+2n-2)\theta}{(2m+2n-2)\theta}$$
[74]

The accuracy of the least square fit for the description of \mathbf{p}_{2m} and \mathbf{q}_{2m} is expressed by the following equations shown in (4):

CHECK_H =
$$\frac{\text{HEAVE DAMPING} * (A_H^2 + B_H^2)}{\frac{1}{2} b^2 \pi^2} - 1.0$$
 [75]

CHECK_S =
$$\frac{\text{SWAY DAMPING} * (A_S^2 + B_S^2)}{\frac{1}{2} d^2 \pi^2} - 1.0$$
 [76]

CHECK_R =
$$\frac{\text{ROLL DAMPING} * (A_R^2 + B_R^2)}{\frac{1}{2} \pi^2 (d^2 - b^2)} - 1.0$$
 [77]

The closer these values are to zero, the better the fit. If any of these accuracies are greater than 2%, the number of terms used to describe $\mathbf{p_{2m}}$ and $\mathbf{q_{2m}}$ is increased by four for the next frequency calculation. The original number of terms in the $\mathbf{p_{2m}}$ and $\mathbf{q_{2m}}$ series is 4 and the maximum dimension is 24.

2. Close Fit Method

The close fit technique involves the determination of the two-dimensional hydrodynamic pressure on a section's contour using a method of distributing source singularities over the submerged portion of the hull. Each of the sources has a density which can be determined from the kinematic boundary condition. The hydrodynamic pressures are obtained by substituting the velocity potential, described by these piece-wise sources, into the linearized Bernoulli equation.

$$p^{(m)}(x_i, y_i, \omega_{jt}) = -\rho \phi_t^{(m)}(x_i, y_i, \omega_{jt})$$
 [78]

or

$$P^{(m)}(x_i, y_i, \omega_{jt}) = P_a^{(m)}(x_i, y_i, \omega) \cos \omega t + P_v^{(m)}(x_i, y_i, \omega) \sin \omega t$$
[79]

Each ship's section is described by N+l offset pairs (x_i, y_i) whose midpoint (x_i, y_i) can be determined from plane geometry.

In order to determine the pressure, the velocity potential $\boldsymbol{\varphi}_t^{~(m)}$ is defined:

$$\phi^{(m)}(x, y; t) = R_e \int_{C_0} Q(s) G(z, \zeta) e^{-i\omega t} ds$$
 [80]

or as shown in (7) for point i:

$$\phi_{i}^{(m)} = \left[\frac{1}{2^{\pi}} \sum_{j=1}^{N} Q_{j} R_{e} \left\{ G_{lij} \right\} - \sum_{j=1}^{N} Q_{N+j} R_{e} \left\{ G_{2ij} \right\} \right] \cos \omega t$$

$$+ \left[\frac{1}{2^{\pi}} \sum_{j=1}^{N} Q_{N+j} R_{e} \left\{ G_{lij} \right\} + \sum_{j=1}^{N} Q_{j} R_{e} \left\{ G_{2ij} \right\} \right] \sin \omega t$$
[81]

where Q_j is the density of the pulsating source at point j, G_{ij} is the point potential at i due to point j.

A detailed explanation of the point potential is given in the appendices of (7). The density of the source potential is determined by applying the kinematic boundary condition which can be summarized as follows:

$$\sum_{j=1}^{N} Q_{j}^{(m)} I_{ij}^{(m)} + \sum_{j=1}^{N} Q_{N+j}^{(m)} J_{ij}^{(m)} = 0$$
[82]

$$-\sum_{j=1}^{N} Q_{j}^{(m)} J_{ij}^{(m)} + \sum_{j=1}^{N} Q_{N+j}^{(m)} I_{ij}^{(m)} = \omega A^{(m)} \eta_{i}^{(m)}$$

where $I_{ij}^{(m)}$ is the influence coefficient in phase with displacement of the i^{th} midpoint due to the j^{th} segment in the m^{th} mode of motion; $J_{ij}^{(m)}$ is the same as $I_{ij}^{(m)}$ but in phase with velocity, $M_{i}^{(m)}$ is the direction cosine of the normal velocity at i^{th} midpoint for the m^{th} mode of oscillation; $Q_{ij}^{(m)}$ is the source strength in phase with displacement along j^{th} segment for the m^{th} mode of oscillation; $Q_{j+N}^{(m)}$ is the same as $Q_{j}^{(m)}$ but in phase with velocity; and $A_{j}^{(m)}$ is the oscillation of amplitude in the m^{th} mode.

The influence coefficients are defined in Appendix B of (7). Equation [82] can be solved for source density, Q_j , by solving the two simultaneous equations. The solution for the pressures and their added mass and damping is relatively straightforward.

The ship is described in a cartesian coordinate system with the origin at the forward perpendicular at its intersection with the ship's centerline and baseline (see Figure 3.1). The x-axis is positive aft from this point, the yaxis positive to starboard and z-axis positive vertically. Planes parallel to the x-y plane at different heights on the z-axis are referred to as waterplanes, whether they are in the water or not, and are usually symmetric about the ship's centerline. These half-waterplanes are shown graphical in the half breadth plan (Figure 3.2a). Planes that are parallel to the y-z plane at various distances from the forward perpendicular are called transverse sections or stations, and like the waterplanes are symmetric port and starboard. The half stations are shown in the body plan (Figure 3.2b) with the forward half of the ship on the right side and aft half on the left side. The final view, obtained by passing planes parallel to the x-z plane at certain distances from the centerline, gives us a picture of the ship's buttock lines. The sheer plan (Figure 3.2c) illustrates these lines.

III. DESCRIPTION OF INPUT SCHEME

There are three separate data files used in running program STATIC:

- 1) an offset data file
- 2) a weight distribution data file and
- 3) a job control data file.

An offset data file describes the ship geometry by means of coordinate points on the surface of the ship's hull. The weight data, a description of the loading along the length of the ship, determines where the vessel will float (i.e., drafts forward and aft). The job control file directs the execution of the program.

A. Physical Description of the Ship

A.1 Ship Geometry Input

A ship, like any other body, can be shown graphically in three views, the top view, the side view and the end view; or in naval architectural terms, the half breadth plan, the sheer plan and the body plan, respectively.


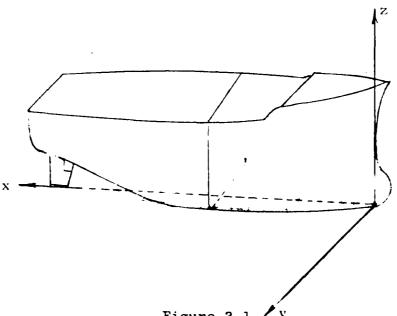


Figure 3.1



Taken from (!)

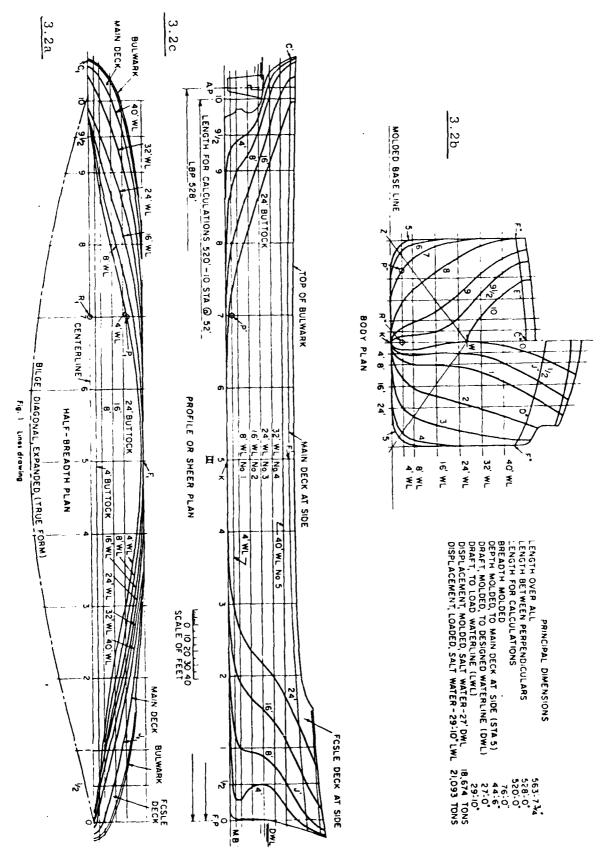

The geometric description used in program STATIC is obtained from the ship's body plan. The input is given for each transverse section commencing with the forward perpendicular and proceeding aft. These sections are given numbers with the forward perpendicular (F.P.) as station 0.0 and aft perpendicular (A.P.) as station 20.0. A length scale of 20 is thus established and all sections are located according to the base dimension of 20. More or less than 21 stations may be used in defining the ship but the total number of stations cannot exceed 41. Stations forward of the F.P. and aft of the A.P. are allowed with stations forward of the F.P. being at a negative distance.

Any station spacing may be used in program STATIC. It is common to have more stations at the ends of the ship due to the rapid change of shape and various appendages. For the hydrodynamic computations there is a limit of 21 stations and it is preferable to have primarily equal station spacing. For this reason the program has a capability to generate a 21 station description at equal distances from any inputed station arrangement.

Each station represents a section (or cylinder) of uniform cross-section. The shape of a section is approximated by a polygon (see Figure 3.3) with corners at the offset points with up to 29 points for each station.

Selection of the offset points requires only one consideration; the points and the straight lines between them should provide a good geometric description of the station shape. Therefore, bow and stern sections typically use twice as many points as a midship section for the same accuracy.

The offsets begin at the intersection of the centerline with the section and proceed to the main deck as shown by points 1 to N in Figure 3.3.

The geometric properties of a station to a given waterline, such as area and centroids, are obtained using a

*Note: When digitizing care should be taken in following this procedure.

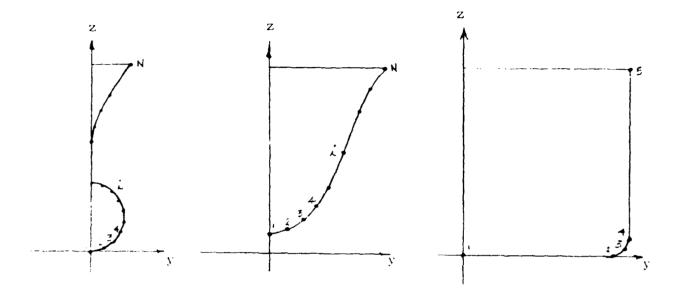


Figure 3.3

linear (i.e., straight line) integration of the offset points.

For the calculation of section added mass and damping for the hydrodynamic calculations, it is preferable to have equi-spaced offset points along the underwater contour. Again, rather than modifying the input offset description, program STATIC has the capability of inserting equi-spaced points (maximum of 21) along the underwater contour of a station. The offset geometry data format will be described in Section C.1.

A.2 Weight Description

The ship will float in a position such that it is in equilibrium, that is, the upward force (buoyancy) is equal and opposite to the downward force (weight).

The buoyancy force is a force caused by the ship displacing fluid and is equal to the product of the underwater volume of the ship and the density of the fluid in which the vessel is floating. The location of this force is given in the ship's coordinate system and has three dimensions:

- 1) distance from the forward perpendicular called the longitudinal center of buoyancy (LCB or XCB)
- 2) the distance above the keel called the vertical center of buoyancy (KB or ZCB) and
- 3) the distance from the ship's centerline called the horizontal center of buoyancy (HCB or YCB).

The center of buoyancy is the centroid of the underwater portion of the ship and is determined by the position of the ship in the water. If we displace a ship downward its displacement will increase and the KB will also increase. If we trim the stern down the LCB will move further aft. Heeling the ship to starboard will cause the HCB to move in that direction.

The weight force and its location must be given so that the ship can adjust itself (sink, trim and heel) so that it is in equilibrium. The location of the weight force is similar to buoyancy force:

- longitudinal center of gravity (LCG or XCG), distance aft of forward perpendicular
- 2) vertical center of gravity (KG or ZCG), distance above the keel and
- horizontal center of gravity (HCG or YCG), distance to the starboard of centerline.

In order to determine how the ship will float the weight, LCG, KG and HCG must be given. The following

describes how each of these may be specified:

(1) WEIGHT

The ship weight can be specified directly or in two alternate ways. The first is to specify the ship's drafts forward and aft which enables the program to calculate the ship's buoyancy and hence due to the principle of equilibrium, its weight. The second is to give a longitudinal weight curve which describes the ship loading with the area under this curve being the ship's weight. This concept will be described later.

(2) LCB

LCB can either be given directly or by two other means. Agaih, if the drafts forward and aft are given, the ship's longitudinal center of buoyancy (LCB) can be determined. Due to our principle of equilibrium we can determine our LCG from the LCB. The final method of finding the LCG is to determine the centroid of the longitudinal weight curve.

(3) KG must be given.

(4) HCG

HCG can either be given or by specifying the ship's heel. By knowing the ship's heel, the center of buoyancy can be found and therefore the HCG can be determined.

All the different methods of describing the weight and centroid other than the longitudinal weight curve are specified in the control data file which will be described in Section C.3. The weight curve, which is of the standard USCG type, will be described now and the data format in Section C.2.

The weight curve is a graphic representation of the

weight of the ship plotted as tons per foot (or any other desired units) on a vertical scale and the length of the ship on a horizontal scale (see Figure 3.4).

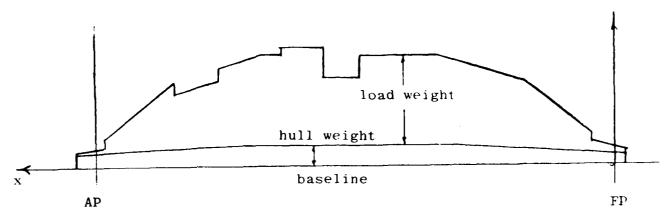


Figure 3.4

As mentioned above, the area under the curve represents the ship's weight and the longitudinal centroid is the LCG. The weight curve is usually calculated for both the light ship and full load conditions.

In order to calculate a weight curve, we generally take all the weights along a specified length of a vessel, usually a hold or station, and calculate the weight and centroid of this part of the ship. Knowing the weight, w its location, lcg, and the limits of this weight, x_1 and x_2 , we can determine a trapazoidal weight block to represent this load (see Figure 3.5).

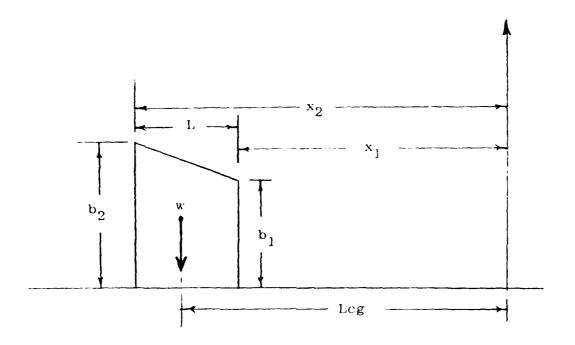


Figure 3.5

From statics it can be seen that

$$b_1 = 2w (2L - 3Lcg) / L^2$$

$$b_2 = 2w (3Lcg - L) / L^2$$

A given hold might have several of these blocks superimposed to give a final weight curve such as that shown in Figure 3.4. The ballast, lightship and cargo weights could be treated separately and the b_1 's and b_2 's added together for the final weight block. The input into program STATIC will be w, Lcg, x_1 and x_2 for various lengths of the ship and categories of load. These will be stored in a data file whose format will be described in Section C.2.

B. Program Control

B.1 Introduction

Practically all programs require some input data. A typical small program may do a short preliminary calculation, read a programmed amount of data, perform some calculation with the data, and terminate with the output of some useful information. A slightly more sophisticated program may read some miscellaneous constants, numerical values describing the lengths of input data tables, flag values that may control the execution of the program or its input and output scheduling, as well as tables of data. Usually these various data items must be furnished by the program user according to some rigid format scheme. The miscellaneous data items such as constants, lengths and control flags are often intermixed with the tables of data. The input setups of many programs become very complicated when the lengths of data tables may be varied, or the order of processing may be changed by control flags in the input deck. Often used constants must be supplied by the user although the program should be able to assume some default value.

The "Program Input and Control SYstem (PICSY)" (17) described here is intended to allow a great deal of flexibility in the execution of a FORTRAN program, while simplifying the input setup.

B.2 Control of Program Execution

Program STATIC consists of eight subprograms, each dealing with a particular step in the overall procedure. Some examples of these steps are: the definition of units whether English or Metric; reading in offset information; hydrostatic calculations; output definition; and so forth. The order in which you call each of these subprograms is flexible to a certain degree. The program control statement* is used to control the program execution.

^{*}Underlining is used to indicated defined terms.

The program control statements form part or all of the input to a program using the PICSY. This control statement consists of a job name and an optional parameter list. The job name directs the main program to execute an associated subprogram. The parameter list is used to input data items and to control subprogram execution. The program control statements are lines (or cards) of Hollerith data (BCD characters) to be read by the program. The first line of data read by the program is usually a program control statement. Other lines of information may be program statements, other data, or a mixture of control statements and data depending on the nature of the program, the subprogram specified by the preceding program control statement and any parameters.

B.3 Syntax of Program Control Statement

The following definitions shall apply for the purpose of describing the structure of the <u>program control statement:</u>

Program control statement: This is alphanumeric data read

- by the program to allow the user to logically control the program execution. The program control statement may take any of the following forms:
 - 1) The character (*) in column 1 of the first line of the statement; followed by a job name; and followed by a terminator.
 - 2) The character (*) in column 1 of the first line of the statement; followed by a job name; followed by a separator; followed by a parameter list; followed by a terminator.
- Job name: This name requests the main program to call a subprogram for execution. The job name must be one of the job names defined for use by the main program. A list of STATIC job names may be found in Section C.3. Blanks or spaces are ignored.

- Parameter list: This is a list of one or more parameters.

 A parameter list may be a single parameter, or it may be several parameters separated by separators. The parameter list may not consist of more than 20 parameters.
- Parameter: The parameter may take one of two forms: it may be a parameter name, or it may be a parameter name followed by the character (=) followed by a parameter value.
- Parameter name: This name is used to control the execution of the subprogram corresponding to the given job name. The parameter name must be one defined for use by the particular subprogram. The list of valid parameters accompanies the description of each subprogram in Section C.3. A parameter name may consist of 1 to 10 alphanumeric characters. Blanks or spaces are ignored.
- Parameter value: This value is a character string which may be associated with certain parameter names. The character string is used to input values into the program. Depending on the parameter name, the value may be of several types, viz. a real value, an integer value or alphanumeric value for identification or control purposes. The type of the value depends on the parameter name and job name. The subprogram descriptions specify the type of parameter value to be associated with each parameter name. A parameter value may consist of 1 to 20 alphanumeric characters. Blanks or spaces are being ignored.
- Alphanumeric value: This is a parameter value used by the program for identification purposes or a data file name. It may consist of 1 to 20 alphanumeric characters. Here "alphanumeric" characters refers to the BCD characters in use within the particular computer operating system. They are the alphabetic

characters A through Z, the numeric characters 0 and 1 through 9 and the set of punctuation and mathematical characters understood by the system.

Real value: This is a parameter value to be converted by the program into a REAL number. It must follow the syntax for FORTRAN real constants or FORTRAN integer constants. It is represented by a string of digits (numeric characters), preceded optionally by a sign character (+ or -); it may contain a decimal point; and it may be followed by an "exponent representation" indicating a power of 10. The "exponent representation" consists of the character (E) followed optionally by a (+) or a (-) followed by digits indicating the power of 10. The parameter value syntax limits the number of non-blank characters to 20.


- Integer value: This is a parameter value to be converted by the program into an INTEGER number. The syntax is the same as for a real value.
- Separator: This is a character used to separate the job

 name from the parameter list and to separate parameters
 within the parameter list. A separator is either the
 character (,) or the character (().
- Terminator: This is a character used to indicate the logical end of a program control statement. The character (() will always terminate the statement. The character (.) will terminate the program control statement if it occurs following a job name, a parameter name or a separator. The character (.) is not a terminator if it occurs following a parameter value. (In the last case the (.) is considered part of the parameter value).

A few additional remarks regarding the physical structure of the program control statement are in order at this point. The program reads the program control statement components from column 1 through 80 of each line. The job name must be completed on the first line of the control statement. The parameter list may be continued on more than one line, but the terminator must appear on or before the fifth line of the statement. Any characters following the terminator, and on the same line as the terminator, will be ignored.

Some examples of the program control statement follow.

Parameter List

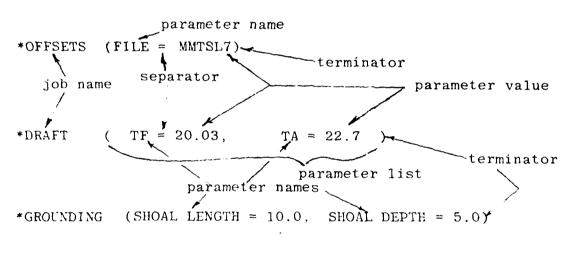

*UNITS (RHO = 1.9905, FORCE = LB)

*UNITS .

The complete lists of job names, parameter names and parameter values will be given in Section C.3.

C. Data Card or Data File Input Description

C.l Offset Data File

The offset data file is a geometric description of the ship following the SHCP "cook book" format. This information will be loaded into the computer core and stored as a file with a seven letter descriptive name. The convention that has been established requires that the first three letters of the file name be "MMT" with the remaining four letters being the users choice. A description of the card (or line) format for this file is given below.

1) TITLE CARD

Columns	Format	Entry
1-40	А	Any alphanumerica title information used to label job output, such as ship name

2) LENGTH CARD

Columns	Format	Entry
1-10	Real	Station or frame spacing in length units (feet, inches, meters, etc.)
11-20	Real	Vertical scale. If the off- sets are in the desired units, vertical scale should be set equal to 0.005. If offsets are lifted from a body plan via Telecorder, submit scale factors as the scale of the drawing in inches per foot, adjusted for distortion as required. For ex- ample, if scale of drawing is 1/4 inch per foot, submit 0.25 for vertical scale.
21-30	Real	Horizontal scale. Same definition as vertical scale but for horizontal direction.
31-40	Real	Ship's length between perpendiculars.
41-50	Real	Scale to be used in plotting of body plan (this is not used in program STATIC).

3) OFFSET CARDS

Columns	Format	Entry
1-6	Real	Station distance (or number) from the FP as described below. Stations should be carefully selected to give an accurate representation of the hull form. Neither evenly-spaced stations nor integer station numbers are required.
7-13	Real	Half beam measured from the ves- sel's centerline for a given offset point.
14-20	Real	Waterline height, measured from the vessel's baseline for a given offset point.
21-26	Integer	Control integer which signifies end of station or end of ship. If: +88888, this represents last point for station If: +99999, this represents last point of last station on ship (or end of data).

Card 3 is repeated for every offset point and every station.

The station spacing is multiplied by the station number on card 3 to obtain each station's distance from the FP. As long as this product gives the distance from the FP, the data may be any representation of the station's location. The following are valid combinations:

Card 2, Cols. 1-10	Card 3, Cols. 1-6	
a. frame spacing b. 1.0	a. frame numberb. distance from FP (feet)	
c. LBP (feet)	c. %LBP	
d. station spacing	d station number	

The following rules apply to station selection, (Columns 1-6, Card 3):

- a. A minimum of three and a maximum of forty-one stations can be specified.
- b. Each station must have a non-zero sectional area when entirely immersed.

- c. The sequence of stations submitted must be from the bow aft. The tip of the bow and the stern should be included to define overall ship length (LOA). Since station distance from the FP is obtained by multiplying station number by station spacing, a station forward of the FP will have a negative number.
- d. The minimum station must have a half-breadth of at least .01 feet, and an incremental height of at least .01 feet.
- e. Regions of rapid change in station size or shape require many closely spaced stations (e.g., half and/or quarter stations should be submitted near the bow and stern).
- f. Longitudinal breakpoints (end of raised forecastle, end of skeg, etc.) are represented by closely spaced stations. Do not confuse a station's position in the input sequence with its station number.
- g. Only two stations need be specified for the parallel midbody.

The following rules must be observed for points on each station (columns 7-13 and 14-20 on card 3):

- a) A minimum of two points and a maximum of twentynine points per station can be processed.
- b) The points on each station must be submitted in a specific order. The first offset point is at the intersection of the station and the centerline, and the last point is the deck and can be at either the side or centerline.
- c) The station is represented as a polygon. Therefore straight lines between two adjacent offset points should describe the section fairly accurately. There will be more points in areas of rapid curvature. Two points are required to describe a straight line, one at the beginning of the segment and one at the end.

An example of an offset file using the SL-7 follows.

```
SEA-LAND 7 CONTAINERSHIP
                        0.0050
                                 880.5000
                                              0.2500
  44.0250
             0.0050
0.
      0.
              0.
              .8202
0.
      3.0349
0.
      4.4801 1.6404
0.
      6.0699 3.2808
      6.6479 4.9213
0.
0.
      7.0237 6.5617
0.
      7.0815 8.2021
0.
      6.7347 9.8425
0.
      6.214411.4829
0.
      5.491813.1234
0.
      3.815316.4042
0.
      2.341219.6850
0.
      1.156222.9659
       .289026.2467
0.
0.
      0.
             29.5276
0.
             32.8084
      0.
0.
      1.011639.3701
                                             Note:
0.
      2.514745.9318
0.
      4.277852.4934
                                      Offsets were updated September 1980
0.
      6.272259.0551
                                      to correct data point.
      8.237765.1247+88888
0.
 .250 0.
              0.
             .8202
 .250 3.1795
 .250 4.6247 1.6404
 .250 6.2144 3.2808
 .250 6.9948 4.9213
 .250 7.2260 6.5617
 .250 7.2260 8.2021
 .250 6.9948 9.8425
 .250 6.590111.4829
 .250 5.838613.1234
 .250 4.277816.4042
 .250 2.890419.6850
 .250 1.792122.9659
 .250 1.156226.2467
 .250
       .867129.5276
 .250 1.098432.8084
 .250 2.023339.3701
 .250 3.613045.9318
 .250 5.838652.4934
 .250 8.382259.0551
 .25010.896865.0262+88888
 .500 0.
 .500 3.3240
              .8202
 .500 4.7692 1.6404
 .500 6.3589 3.2808
 .500 7.0815 4.9213
 .500 7.5151 6.5617
```

```
.500 7.5729 8.2021
.500 7.2838 9.8425
 .500 6.937011.4829
 .500 6.301113.1234
 .500 4.653616.4042
 .500 3.324019.6850
 .500 2.283422.9659
 .500 1.531926.2467
 .500 1.300729.5276
 .500 1.503032.8084
 .500 2.861539.3701
 .500 4.971545.9318
 .500 7.717452.4934
 .50010.607859.0551
 .50013.353764.9934+88888
             0.
1.000 0.
1.000 3.7575
             .8202
1.000 5.2027 1.6404
1.000 6.8792 3.2808
1.000 7.6596 4.9213
1.000 8.1510 6.5617
1.000 8.2377 8.2021
1.000 8.0932 9.8425
1.000 7.804111.4829
1.000 7.226013.1234
1.000 5.838616.4042
1.000 4.335619.6850
1.000 3.179522.9659
1.000 2.601426.2467
1.000 2.543629.5276
1.000 3.034932.8084
1.000 5.058239.3701
1.000 7.861945.9318
1.00011.272652.4934
1.00014.885659.0551
1.00018.007364.9606+88888
1.500 0.
              .8202
1.500 4.1911
1.500 5.5785 1.6404
1.500 7.3995 3.2808
1.500 8.5267 4.9213
1.500 8.6712 6.5617
1.500 8.9025 8.2021
1.500 8.8158 9.8425
1.500 8.526711.4829
1.500 8.093213.1234
1.500 6.647916.4042
1.500 5.347319.6850
1.500 4.393422.9659
1.500 4.133326.2467
```

```
1.500 4.335629.5276
1.500 5.000432.8084
1.500 7.601839.3701
1.50010.983645.9318
1.50011.908552.4934
1.50018.787759.0551
1.50022.545264.8950+88888
2.000 0.
             0.
2.000 4.6247
              .8202
2.000 6.1277 1.6404
2.000 8.0353 3.2808
2.000 9.1626 4.9213
2.000 9.4805 6.5617
2.000 9.7696 8.2021
2.000 9.6829 9.8425
2.000 9.336011.4829
2.000 8.960313.1234
2.000 7.948616.4042
2.000 6.937019.6850
2.000 6.214422.9659
2.000 6.214426.2467
2.000 6.879229.5276
2.000 8.006432.8084
2.00010.925839.3701
2.00014.452145.9318
2.00018.267452.4934
2.00023.065559.0551
2.00027.112164.7966+88888
2.500 0.
2.500 5.1449
             .8202
2.500 6.8792 1.6404
2.500 8.4689 3.2808
2.500 9.3938 4.9213
2.500 9.8274 6.5617
2.50010.2610 8.2021
2.50010.4055 9.8425
2.50010.203211.4829
2.50010.058613.1234
2.500 9.393816.4042
2.500 8.757919.6850
2.500 8.613422.9659
2.500 9.018126.2467
2.500 9.827429.5276
2.50011.041432.8084
2.50014.452139.3701
2.50018.267445.9318
2.50022.545252.4934
2.50027.112159.0551
2.50031.303264.6982+88888
3.000 0.
             0.
```

```
3.000 2.8904
              .0656
3.000 5.9253
              .8202
3.000 7.2260 1.6404
3.000 8.9603 3.2808
3.00010.0586 4.9213
3.00010.6656 6.5617
3.00010.7523 8.2021
3.00011.2726 9.8425
3.00011.330411.4829
3.00011.272613.1234
3.00011.128116.4042
3.00011.041419.6850
3.00011.330422.9659
3.00012.139726.2467
3.00013.151429.5276
3.00014.596632.8084
3.00018.094039.3701
3.00022.111645.9318
3.00026.302752.4934
3.00030.927459:0551
3.00034.974064.6325+88888
4.000 0.
             .1312
4.000 4.3356
4.000 6.9370
             .8202
4.000 8.7579 1.6404
4.00010.6945 3.2808
4,00011.9085 4.9213
4.00012.8623 6.5617
4.00013.5849 8.2021
4.00014.3075 9.8425
4.00014.741111.4829
4.00015.319213.1234
4.00016.330816.4042
4.00017.342519.6850
4.00018.354122.9659
4.00019.741526.2467
4.00021.042229.5276
4.00022.487432.8084
4.00025.782539.3701
4.00029.482245.9318
4.00033.528852.4934
4.00037.864459.0551
4.00041.911064.5341+88888
5.000 0.
             0.
5.000 4.3356 .1969
5.000 8.9603 .8202
5.00010.8390 1.6404
5.00013.2959 3.2808
5.00015.3192 4.9213
5.00016.9667 6.5617
```

```
5.00018.1518 8.2021
5.00019.3658 9.8425
5.00020.232911.4829
5.00021.157813.1234
5.00023.036616.4042
5.00024.568519.6850
5.00026.013722.9659
5.00027.458926.2467
5.00028.904129.5276
5.00030.349332.8084
5.00033.297539.3701
5.00036.708245.9318
5.00040.118952.4934
5.00043.789759.0551
5.00046.969264.3701+88888
6.000 0.
             0.
6.000 7.2260
             .2625
6.00012.2842
6.00014.7411 1.6404
6.00018.2096 3.2808
6.00020.6664 4.9213
6.00022.7764 6.5617
6.00024.2795 8.2021
6.00025.6668 9.8425
6.00026.736311.4829
6.00027.892513.1234
6.00030.002516.4042
6.00031.794519.6850
6.00033.297522.9659
6.00034.829526.2467
6.00036.187929.5276
6.00037.633232.8084
6.00040.176739.3701
6.00042.720345.9318
6.00045.379552.4934
6.00045.183259.0551
6.00050.351064.3373+88888
7.000 0.
             Ο.
              .3281
7.00011.5616
7.00017.1979
              .8202
7.00020.2329 1.6404
7.00024.4240 3.2808
             4.9213
7.00027.0253
7.00029.3377 6.5617
7.00031.2164 8.2021
7.00032.8062 9.8425
7.00034.106811.4829
7.00035.465313.1234
7.00037.488616.4042
7.00039.136219.6850
```

```
7,00040.407922.9659
7.00041.621926.2467
7.00042.720329.5276
7.00043.789732.8084
7.00045.697439.3701
7.00047.605145.9318
7.00049.223752.4934
7.00050.871259.0551
7.00052.027464.3045+88888
8.000 0.
             0.
8.00019.3658
              .3937
             .8202
8.00023.4123
8.00027.3144 1.6404
8.00031.5055 3.2808
8.00033.9623 4.9213
8.00036.5637 6.5617
8.00038.2979 8.2021
8.00039.8877 9.8425
8.00041.043811.4829
8.00042.142213.1234
8.00043.934216.4042
8.00045.234919.6850
8.00046.246622.9659
8.00047.171526.2467
8.00047.836329.5276
8.00048.558932.8084
8.00049.715139.3701
8.00050.640045.9318
8.00051.564952.4934
8.00052.258659.0551
8.00052.547764.3045+88888
9.000 0.
9.00026.3027
              .5906
9.00030.0603
               .8202
9.00033.9623 1.6404
9.00038.2979 3.2808
9.00040.6103 4.9213
9.00042.7781 6.5617
9.00044.3100 8.2021
9.00045.5240 9.8425
9.00046.477811.4829
9.00047.344913.1234
9.00048.703416.4042
9.00049.715119.6850
9.00050.351022.9659
9.00050.929026.2467
9.00051.304829.5276
9.00051.593832.8084
9.00052.027439.3701
9.00052.374245.9318
```

```
9.00052.605552.4934
9.00052.750059.0551
9.00052.750064.3045+88888
10.000 0.
10.00032.6616
               .6562
10.00034.6849
               .8202
10.00039.3096 1.6404
10.00043.2116 3.2808
10.00045.3795 4.9213
10.00047.1137 6.5617
10.00048.5589 8.2021
10.00049.5705 9.8425
10.00050.293211.4829
10.00050.957913.1234
10.00051.911816.4042
10.00052.374219.6850
10.00052.605522.9659
10.00052.663326.2467
10.00052.721129.5276
10.00052.750032.8084
10.00052.750064.3045+88888
11.000 0.
               .6562
11.00032.7514
               .8202
11.00035.6497
11.00040.8668 1.6404
11.00@44.6346 3.2808
11.00046 9533 4.9213
11.00048.6923 6.5617
11.00049.9096 8.2021
11.00050.7212 9.8425
11.00051.445711.4829
11.00052.025413.1234
11.00052.518116.4042
11.00052.750019.6850
11.00052.750022.9659
11.00052.750068.2415+88888
12.000 0.
12.00032.7514
                .6562
12.00033.9107
               .8202
12.00038.5481 1.6404
12.00042.7507 3.2808
12.00045.3592 4.9213
12.00047.1852 6.5617
12.00048.6923 8.2021
12,00049.6488 9.8425
12.00050.489311.4829
12.00051.213913.1234
12.00052.083416.4042
12.00052.605119.6850
12.00052.750022.9659
```

```
12.00052.750068.2415+88888
13.000 0.
              0.
13.00024.6360
               .4921
13.00028.6937
               .8202
13.00033.6209 1.6404
13.00038.5481 3.2808
13.00041.5044 4.9213
13.00043.9100 6.5617
13.00045.7940 8.2021
13.00047.2431 9.8425
13.00048.547411.4829
13.00049.561813.1234
13.00051.011016.4042
13.00051.880519.6850
13.00052.402222.9659
13.00052.692026.2467
13.00052.750029.5276
13.00052.750068.2415+88888
              0.
14.000 0.
              .3281
14.00015.9409
               .8202
14.00020.8681
14.00026.0852 1.6404
14.00031.5920 3.2808
14.00035.5048 4.9213
14.00038.5481 6.5617
14.00041.0696 8.2021
14.00042.9536 9.8425
14.00044.779511.4829
14.00046.141813.1234
14.00048.547416.4042
14.00050.141519.6850
14.00051.242922.9659
14.00051.938526.2467
14.00052.460229.5276
14.00052.750032.8084
14.00052.750068.2415+88888
15.000 0.
15.000 3.1882 0.
              .8202
15.00011.5934
15.00016.0279 1.6404
15.00022.3173 3.2808
15.00024.2012 4.9213
15.00031.3022 6.5617
15.00034.2295 8.2021
15.00036.8670 9.8425
15.00039.040811.4829
15.00040.924713.1234
15.00044.112916.4042
15.00046.634519.6850
15.00048.402522.9659
```

```
15.00049.706726.2467
15.00050.750129.5276
15.00051.619632.8084
15.00052.199339.3701
15.00052.750045.9318
15.00052.750052.4934
15.00052.750068.2415+88888
16.000 0.
              0.
16.000 2.8114 0.
16.000 4.8982
               .8202
16.000 8.2023 1.6404
16.00013.1875 3.2808
16.00017.2452 4.9213
16.00021.3898 6.5617
16.00024.6940 8.2021
16.00028.0850 9.8425
16.00030.664611.4829
16.00033.215113.1234
16.00037.040916.4042
16.00040.229119.6850
16.00042.605822.9659
16.00044.663626.2467
16.00046.373629.5276
16.00047.764832.8084
16.00049.851639.3701
16.00051.387845.9318
16.00052.605152.4934
16.00052.750068.2415+88888
17.000 0.
              0.
17.000 2.4636 0.
17.000 3.2462
               .8202
17.000 4.2896 1.6404
17.000 6.7242 3.2808
17.000 9.4196 4.9213
17.00012.3760 6.5617
17.00014.9845 8.2021
17.00017.9698 9.8425
17.00020.288511.4829
17.00022.781013.1234
17.00027.099616.4042
17.00030.925419.6850
17.00034.200522.9659
17.00037.098926.2467
17.00039.562529.5276
17.00041.823232.8084
17.00045.504139.3701
17.00048.692345.9318
17.00051.300852.4934
17.00052.025454.6260
17.00052.025468.2415+88888
```

```
17.500 0.
17.500 2.1738 0.
              .8202
17.500 2.6085
17.500 3.1882 1.6404
17.500 4.6374 3.2808
17.500 6.5213 4.9213
17.500 8.8400 6.5617
17.50010.8688 8.2021
17.50013.2745 9.8425
17.50015.245311.4829
17.50017.622013.1234
17.50021.766616.4042
17.50025.592419.6850
17.50028.983522.9659
17.50032.287626.2467
17.50035.128029.5276
17.50037.678632.8084
17.50042.171039.3701
17.50045.504145.9318
17.50048.692352.4934
17.50051.358854.6260
17.50052.083468.4055+88888
18.000 0.
              0.
18.000 2.0288 0.
               .8202
18.000 2.1738
18.000 2.5216 1.6404
18.000 3.3331 3.2808
18.000 4.3475 4.9213
18.000 5.7967 6.5617
18.000 7.2749 8.2021
18.000 9.0139 9.8425
18.00010.665911.4829
18.00012.549913.1234
18.00016.694516.4042
18.00019.824719.6850
18.00023.476622.9659
18.00026.809826.2467
18.00030.258829.5276
18.00030.374732.8084
18.00038.432139.3701
 18.00042.924645.9318
 18.00047.069252.4934
 18.00048.344554.6260
 18.00048.344568.4383+88888
               0.
 18.500 0.
 18.500 1.5941 0.
               .8202
 18.500 1.7390
 18.500 1.9709 1.6404
 18.500 2.5216 3.2808
 18.500 3.1302 4.9213
```

```
18.500 3.9997 6.5617
18.500 4.7823 8.2021
18.500 5.8837 9.8425
18.500 6.956011.4829
18.500 8.289313.1234
18.50011.158716.4042
18.50014.317919.6850
18.50017.535022.9659
18.50021.013026.2467
18.50024.491129.5276
18.50028.027132.8084
18.50033.910739.3701
18.50039.272745.9318
18.50044.054952.4934
18.50045.301254.6260
18.50045.301268.5367+88888
             11.0236
19.000 0.
19.000 3.072311.0236
19.000 3.622911.4829
19.000 4.492413.1234
19.000 6.376416.4042
19.000 8.840019.6850
19.00011.535422.9659
19.00014.955526.2467
19.00018.549529.5276
19.00022.317332.8084
19.00029.041539.3701
19.00034.780245.9318
19.00036.693152.4934
19.00041.475454.6260
19.00041.475468.6352+88888
19.500 0.
            16.4042
19.500 2.753416.4042
19.500 3.738919.6850
19.500 5.506922.9659
19.500 8.463226.2467
19.50012.028229.5276
19.50016.172832.8084
19.50023.766539.3701
19.50029.997945.9318
19.50035.446852.4634
19.50037.098954.6260
19.50037.098968.8976+88888
19.750 0.
             22.9659
19.750 2.753422.9659
19.750 5.506926.2467
19.750 8.897929.5276
19.75012.955632.8084
19.75020.607339.3701
19.75027.302545.9318
```

```
19.75033.012252.4934 19.75034.780254.6260
19.75034.780268.8976+88888
20.000 0.
              26.2467
20.000 2.057826.2467
20.000 5.651829.5276
20.000 9.390732.8084
20.00017.390139.3701
20.00024.346245.9318
20.00030.374752.4934
20.00032.084854.6260
20.00032.084868.8976+88888
20.500 0. 30.5118
20.500 2.840432.8084
20.50010.810939.3701
20.50018.114745.9318
20.50024.780952.4934
20.50026.664854.6260
20.50026.664868.8976+99999
```

C.2 Weight Data File

The weight data file is the input weight description of the vessel following a standard format used by the U.S.C.G. This information is loaded into the computer core and stored as a file with a seven letter descriptive name. The convention which has been established requires that the first two letters of the file name be "DW" with the remaining five letters being a description of the vessel and condition.

The weight curve may be described by an unlimited number (500) of weight "segments". These segments are defined by their associated weight, the fore and aft limits between which this weight acts (measured from the F.P.) and the center of gravity of the weight, also measured from the F.P. The position of the center of gravity of the segment (LCG) is constrained in that it must fall within the middle one-third of the segment (i.e., the weight distribution of each segment must be linear).

Segments may be submitted in any order. If desired, an integer code may be specified with each segment. The purpose of the code is to allow the submitted segments to be sorted on the basis of the code, followed by a computation of the total weight and associated LCG of all segments of the same code. Up to 10 different integer codes are permitted ("0" is not a possible I.D.) allowing the user to specify 10 separate weight classes for examination. A description of the card (or line) format for this file is given below.

1) WEIGHT CLASS CARD

Column	Format	Entry
5	Integer	Always a 2. Not used in
		present program.

2) LENGTH CARD

Columns	Format	Entry
1-10	Real	Ship's length between perpendiculars in length units.
11-15	Integer	Number of weight blocks for output weight curve (21 is used for ship motion program)

The data from cards 1 and 2 are not used in program STATIC but are used in other U.S.C.G. programs but must be included so that data files between programs can be used interchangeably.

3) WEIGHT CARDS (refer to figure 3.5, page 30 for definition of symbols)

Columns	Format	Entry
1-10	Real	Forward end of weight segment measured from the forward perpendicular $(F.P.)_1x$.
11-20	Real	The weight of this segment in force units (i.e., L. tons, pounds, etc.) ₁ w.
21-30	Real	Aft end of weight segment measured from the $F.P{1}x_{2}$.
31-40	Real	Center of gravity of the weight segment measured from the F.P., Lcg.
41-43	Integer	Integer code to specify dif- ferent weight classes (i.e., lightship and deadweight could be two weight classes). These codes are used to subtotal weight classes.

If the forward end of the weight segment (columns 1-10) is greater than or equal to 999999, the reading of this file is terminated.

Examples of weight data files for the SL-7 full load, SL-7 light load and a 290 ft. by 52.5 ft. box barge are given:

Data file "DW428FU" - weight curve for 290 ft. by 52.5 ft. barge

2				
290.	21			
.01	147.4	60.	30.	1
60.	55.9	82.75	71.4	1
82.75	132.56	136.75	109.75	1
136.75	127.04	188.5	162.6	1
188.5	127.04	240.25	214.4	1
240.25	122.6	290.00	265.13	1
8.0	622.5	68.	38.	2
68.	764.8	128.	98.	2
128.	758.8	188.	158.	2
188.	609.8	248.	218.	2
248.	295.8	282.	265.	2
9999999.				
•				

```
880.5000
             22
 -20.0000
            765.2000
                        42.0000
                                    19.0000
                                              1
                       115.2500
   42.0000 1847.7000
                                   84.3200
                                             1
                       167.7500
                                  143.1800
                                              1
  115.2500 1205.7000
  167.7500 1613.4000
                       207.7500
                                  185.5200
                                              1
 207.7500 1943.6000
                       247.7500
                                  225.5000
 247.7500 2379.2000
                       287.7500
                                  265.5400
                                              1
 287.7500 2305.6000
                       327.7500
                                  305.5300
                                              1
  327.7500 2610.8000
                       367.7500
                                  345.5300
                                              1
  367.7500 3148.7000
                       407.7500
                                  385.5200
                                  425.5100
                       447.7500
                                              1
  407.7500 3343.7000
                                  467.9900
                                              1
  447.7500 3299.0000
                       492.7500
                                  512.9900
  492.7500 3179.2000
                       537.7500
                       562.7500
  537.7500 3293.3000
                                  550.0000
                                              1
  562.7500 3039.8000
                       612.7500
                                  587.5000
                                              1
                                  635.0000
 612.7500 2661.3000
                       652.7500
                                              1
 652.7500 2898.7000
                       697.7500
                                  674.3500
                                              1
                       737.7500
 697.7500 2116.1000
                                  716.1000
 737.7500 1678.3000
                                  756.4000
                       777.7500
                                             1
 777.7500 1597.2000
                       817.7500
                                  795.5500
                                              1
                       852.5000
                                             1
 817.7500 1244.5000
                                  835.5000
                                  869.5000
  852.5000
            897.7000
                       880.5000
                                             1
  880.5000
            691.3000
                       920.5000
                                  900.5000
                                             1
9999999.
```

Data file "DWSL7BA" - Ballast weight curve for SL-7

```
880.5000
             22
 -20.0000
            777.4000
                        42.0000
                                   19.0000
  42.0000 1859.9000
                       115.2500
                                   84.3200
                                             1
 115.2500 1217.9000
                       167.7500
                                  143.1800
                                             1
 167.7500 1151.8000
                       207.7500
                                  185.5200
                                             1
 207.7500 1379.2000
                       247.7500
                                  225.5000
 247.7500 1844.3000
                       287.7500
                                 265.5400
 287.7500 1990.6000
                       327.7500
                                  305.5300
                                             1
                       367.7500
 327.7500 2429.0000
                                  345.5300
 367.7500 2547.5000
                       407.7500
                                  385.5200
                                             1
                       447.7500
 407.7500 2707.6000
                                  425.5100
 447.7500 2714.9000
                      492.7500
                                  467.9900
 492.7500 2697.9000
                       537.7500
                                  512.9900
 537.7500 3284.9000
                       562.7500
                                  550.0000
 562.7500 3031.4000
                       612.7500
                                  587.5000
                                             1
 612.7500 2726.3000
                       652.7500
                                  635.0000
                                             1
 652.7500 2757.4000
                      697.7500
                                  674.3500
                                             1
                      737.7500
 697.7500 1631.3000
                                  716.1000
                                             1
 737.7500 1217.7000
                      777.7500
                                 756.4000
                                             1
 777.7500
           982.5000
                      817.7500
                                 795.5500
                                             1
 817.7500
            901.2000
                      852.5000
                                 835.5000
                                             1
 852.5000
            889.3000
                      880.5000
                                 869.5000
 880.5000
            682.9000
                      920.5000
                                 900.5000
9999999.0
```

C.3 Data Input

Program STATIC has eight operational jobs as follows:

Job Name and Subprogram Name

*TERMINAL TERMINAL sets the type of terminal used for output and the maximum

line length for this output device.

*UNITS UNITS sets the physical units of

length, force, and time. The mass density & viscosity of water and acceleration of gravity may also be changed.

_ 7. * ...

*OFFSETS OFFSETS reads the ship's geometric

description from a file that is

described in Section C.1

*DRAFT is one of the main subprograms.

It calculates the vessel's equilibrium position and hydrostatic properties associated with it. Bending moments and shear forces are also calculated. Data preparation for both the "Springing" and "Ship

Motion" programs.

*GROUNDING GROUNDING is a specialized subprogram

that calculates the drafts and bending moments and shear forces asso-

ciated with a grounded vessel.

*INTACT STABILITY INTACT STABILITY calculates the

cross curves of stability for the

vessel.

*COFFFICIENTS This subprogram calculates the two-

dimensional added mass and damping for vertical and lateral motions, using either the conformal mapping technique or Frank close fit method.

*FINISH This command will STOP program

execution.

The order of execution of these subprograms is logical. Generally, TERMINAL and UNITS are the first two called if there is to be a change in the assumed default values of these subprograms. Next OFFSETS must be called to obtain the geometric description of the vessel. Subprograms DRAFT, GROUNDING, and INTACT STABILITY may be called in any order and as many times as desired. COEFFICIENT must follow the call to DRAFT but can be called numerous times. The last

job called is subprogram FINISH which terminates the program execution.

On the following pages will be a description of the parameter names and values which control the execution in each subprogram. The explanation of the terminology used is found in Section B.2.

C.3.a Subprogram TERMINAL

This subprogram specifies what type of terminal is being used for the output of results from the program. The output can be printed at a high speed terminal (usually at the data center) or a 30 character per second terminal. In addition many terminals have only 80 columns for printouts rather than 132. This subprogram will specify which of the above terminals is being used. If output is being sent to a high speed, 132 column printer, this subprogram need not be called, for these are the default output devices.

(1) Output Parameter

Definition

Output Parameter	Delinition
TERMINAL TYPE = n	This parameter specifies the typ of terminal being used
Default:	01 001m1m2 001mg 0000
$\overline{\text{TERMINAL}}$ $\overline{\text{TYPE}} = 0$	n = 0 High speed terminal
	n = 1 30 cps terminal
LINE LENGTH = n	This parameter specifies the
Default:	number of output columns avail-
LINE LENGTH = 132	able on a printer. Usually it will be either 80 or 132

- (2) Examples of use of *TERMINAL
 - (a) *TERMINAL (TERMINAL TYPE = 1, LINE LENGTH = 80)

Action:

The program will assume a terminal that works at a 30 cps rate without a form feed and has only 80 column width paper.

(b) *TERMINAL (LINE LENGTH = 80)

Action:

The program will output to a high speed terminal only using 80 columns.

C.3.b Subprogram UNITS

This subprogram presets the units to be used in all processing. It allows the user to use any combination of units within the allowable parameters. The values of the mass density of sea water and gravity are changed to match the units used. Gravity is initialized at $32.174 \, \mathrm{ft/sec^2}$, the mass density of sea water is $8.8880 \, \mathrm{x} \, 10^{-4} \, \mathrm{ton} \, \mathrm{sec^2/ft^4}$, and the kinematic viscosity of sea water is $1.1057 \, \mathrm{x} \, 10^{-5} \, \mathrm{ft^2/sec}$, since the initial units are: Length - feet

Force - long tons
Time - seconds

If these initial values are acceptable, subprogram UNITS need not be called.

(1) Output Parameter

LIST

Default: LIST OFF If LIST is specified, a list of units, mass density, viscosity and acceleration of gravity will be printed.

(2) Processing Parameters

LENGTH = name

Initial Value: LENGTH = FT Length units are specified. The allowable length units are:

FT : feet
IN : inches
M : meters
CM : centimeters

MM: millimeters
If the length unit is changed, the physical constants are reset to the correct numerical values by

the program.

FORCE = name

Initial value: FORCE = LT

Force units are specified. The allowable force units are:

LT : long tons
ST : short tons
LB : pounds
MT : metric tons
KG : kilograms

Values are treated as forces, and the physical constants are adjusted accordingly.

RHO = n

 $\frac{\text{Initial value:}}{\text{RHO} = 8.8880E}.$ $10^{-4} \text{ ton sec}^2/$ ft^4

The program's assumed value for mass density of water is overridden by the given value, n. "n" is given in force - sec²/length⁴ units. It is also Y/G where Y is the density

of sea water in weight/volume. The initial value is for salt water at 70°F.

G = n

Initial value:
G = 32.174 ft/sec²

VISCOSITY = n

Initial value: $\overline{\text{VISCOSITY}} = 1.1057 \text{ x}$ $10^{-5} \text{ ft}^2/\text{sec}$

RESTORE

The gravitational constant is overriden by the indicated n. "n" is given in length/sec² units.

The initial value of kinematic viscosity for salt water at 70°F is overridden by the given value n. "n" is given in length squared per time units.

The length and force units will be restored to feet and long tons respectively. The value of gravity, viscosity and density will also be changed accordingly.

- (3) Examples of use of UNITS
 - (a) *UNITS (FORCE = LB, LIST, RHO = 1.93945)

Action:

The program will use pounds for the force unit. It will reset the value of the mass density of water to 1.93945 lbs-sec²/ft⁴ which is the value for fresh water and then print a table of current units and constants.

(b) *UNITS (FORCE = MT, LENGTH = M)

Action:

The program will use metric tons as a force unit, meters as a length unit and reset the acceleration of gravity and mass density and viscosity of salt water to the appropriate units.

C.3.c Subprogram OFFSETS

This subprogram reads the ship geometry data from a data file which was explained in C.1. The ship hull is defined by offsets in a format compatible with the Navy's Ship Hull Characteristics Program.

(1) Input/Output Parameters

(a) FILE = MMTXXXX

Specifies the name of the offset data file describing the ship's geometry. The file name is "MMT" followed by four letters of the user's choice.

(b) LIST

Default: LIST OFF If LIST is specified then a list of the station offsets and the forward and aft profiles will be given.

(2) Example of use of OFFSETS

*OFFSET (FILE = MMTSL7 LIST)

Action:

The program will read the offset information from data file MMTSL7 which is stored on the system. It will also list the offsets for each station.

C.3.d Subprogram DRAFT

This subprogram determines the equilibrium position of the ship so that various calculations and tasks may be performed. As mentioned in A.2, the ship's weight and center of gravity must be determined so that an equilibrium floating position may be found. Subprogram DRAFT can only be called after subprogram OFFSETS has been called since the geometric description of the vessel is needed to establish equilibrium. To determine where the vessel will float one of three options must be given:

- 1) Input a weight curve from a data file as explained in A.2 and C.2; or
- 2) Input weight and the centers of gravity; or
- 3) Input the drafts forward and aft

Once the ship's equilibrium condition is determined, that is trim, heel and draft, various tasks can be performed:

- 1) Hydrostatics volumes, centroids, trim and stability data
- 2) Strength shear forces and bending moments at different longitudinal locations
- 3) Springing preparation of offset data files for USCG springing program (3)
- 4) Motions Preparation of ship motion data file for modified SCORES program (1)

In addition to the still water condition, the hydrostatics and strength calculations can be performed in waves.

The different control parameters for this subprogram are listed below:

(1) Input/Output Parameters

(a) NOLIST

Default: NOLIST OFF If NOLIST is specified, the printed output of balancing, hydrostatics and bending moment are suppressed.

(b) LIST

Default: LIST OFF If LIST is specified, the table of wetted offsets for each station is printed.

(c) SPRING = SPGXXXX

If SPRING is specified the offset data file for the SPRINGING program is prepared and written to a file and assigned the name of SPGXXXX. The filename is "SPG" followed by four letters of the user's choice.

(d) OUTPUT = DMXXXXX

If OUTPUT is specified, a ship motion data file is prepared for the modified SCORES program, written to a file and assigned the name "DMXXXXX". The file name is "DM" followed by five letters of the user's choice.

(e) TITLE

Default: TITLE off If TITLE is specified a new descriptive name of up to 40 letters will be read from the next line following the *DRAFT command.

(f) WTDIST = DWXXXXX

If WTDIST is specified a weight curve, as explained in 3.A.3 and 3.C.2, will be read from a file whose name is "DWXXXXX". The file name is "DW" followed by five letters of the user's choice.

(2) Processing Parameters

(a) XF = n

Default: XF = first station distance from the FP "n" is the distance from the forward perpendicular along the x-axis to the forward draft marks of the vessel.

(b) XA = n

Default: XA = last station distance from the FP "n" is the distance from the forward perpendicular, along the x-axis, to the aft draft marks of this vessel

(c) TF = n

"n" is the draft at the forward marks, which is at XF from the forward perpendicular

(d) TA = n

"n" is the draft at the aft marks which is at XA from the forward perpendicular

(e) DRAFT = n

"n" is the even keel draft the vessel is floating. Same as saying TF = TA = DRAFT

(f) WEIGHT = n or WT = n

"n" is the ship's weight in force units $\ensuremath{\text{units}}$

(g) LCG = n or XCG = n

"n" is the distance from the forward perpendicular to the ship's longitudinal center of gravity

Default: LCG = Length/2

(i) HCG = n or "n" is the distance from the center-YCG = n line to the horizontal center of gravity (positive starboard)

Befault: HCG = 0.0

(j) TRIM = n "n" is the ship's trim in length units with bow up defined as positive $\frac{\text{Default:}}{\text{TRIM} = 0.0}$

(k) HEEL = n "n" is the ship's heel in degrees with starboard down defined as positive

(1) WAVE = n

Default:
WAVE OFF

n=0 trochoidal wave
n=1 sinusoidal wave
n=2,3,..9 irregular waves
(sum of n sine waves)
The format for inputting the wave
data will be described at the end
of this section

(m) EQUAL STATIONS = n $\frac{\text{Default:}}{\text{EQUAL STATIONS}}$ is the number of equal stations that the wetted hull will be interpolated to for use in ship motion and/or springing program input data

(n) POINTS = n If EQUAL STATIONS is specified, "n" equally spaced points will describe each wetted contour

If WAVE is given, the ship will be analyzed for a quasistatic condition. A wave is described by giving the height location of the crest from the forward perpendicular, the wave length and the angle of the wave relative to the ship's centerline. 0° is stern seas, 180° head seas and 90° port beam seas.

The input of the wave data is on cards (or lines) following the *DRAFT job parameter list and the TITLE line (only TITLE is specified on DRAFT card). The format of these cards are as follows:

Line 1 to number of waves

Variable	Columns	Definition
HEIGHT	1-10	Height of wave crest to trough
WAVLEN	11-20	Wave length
CREST	21-30	Location of CREST of wave measured from the forward perpendicular
HEAD	31-40	Heading of wave relative to centerline. 0 ^o following seas, 180 ^o head seas and 90 ^o port beam seas.

Line 1 is repeated for each sine wave if irregular wave input is specified.

(3) Examples of Use of DRAFT

(a) *DRAFT (XCG = 350., WEIGHT = 40000., KG = 15. LIST)

Action:

The program will set the ship's weight to 40000, longitudinal center of gravity 350. from the forward perpendicular and the vertical center of gravity 15 from the baseline. The ship will be balanced and the hydrostatic properties of the equilibrium conditions will be printed. Since LIST is specified, a list of the wetted offsets will be printed.

(b) *DRAFT (WTDIST = DWMAR, ZCG = 29.0, NWAVE = 1, TITLE)
MARINER - FULL LOAD DEPARTURE IN WAVES

5,2000 520.000 260.0000 0.0000

Action:

The program will read the longitudinal weight curve from a file named "DWMAR" which was explained in Sections A.2 and C.2. The vertical center of gravity is 29.0 feet above the keel. The title that is printed on the top of each page of output will be "MARINER FULL LOAD DEPARTURE IN WAVES". The ship will be balanced in a sinusoidal wave of 5.2 feet length, crest at midships (260 ft. from FP) from the following seas. The hydrostatics and shear force and bending moment will be printed for this condition.

(c) *DRAFT (WTDIST = DWWOL2, ZCG = 20.0, OUTPUT = DMWOL2, SPRING = SPGWOL2, EQUAL STATIONS = 21, POINTS = 18)

Action:

The program will read the longitudinal weight curve from a file named "DWWOL2" and assigns the value of 20.0 to the ship's KG. The ship can now be balanced, that is, an equilibrium position can be found (i.e., drafts, trim and heel). Since equal stations was stipulated the wetted hull will be interpolated to 21 equally spaced stations with 18 points on each station. A ship motion data file, "DMWOL2", for the modified SCORES program and a springing offset data file, "SPGWOL2", are created.

C.3.e Subprogram GROUNDING

This subprogram determines the equilibrium position of a ship that has run aground. As explained in A.2, the ship's weight and LCG must be determined so that the equilibrium position can be found. As in subprogram DRAFT, subprogram GROUNDING can be executed only after OFFSETS has been called. The vessel's pre-grounding equilibrium condition is found using one of three options

- (1) Input a weight curve from a data file as explained in A.2 and C.2
- (2) Input ship's weight and centers of gravity
- (3) Input the drafts forward and aft.

Once this condition has been determined the grounding force acting on the vessel can be calculated. Three parameters describe grounding; the shoal water depth, the shoal length and the location of the grounding point on the ship. (See Figure 3.6)

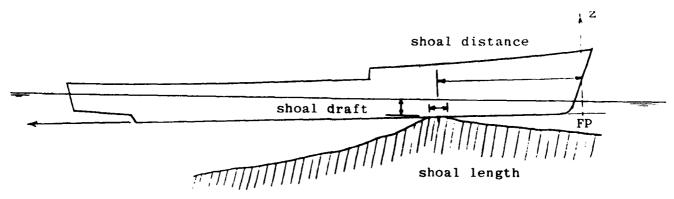


Figure 3.6

The hydrostatic properties are printed for the grounded condition. If the weight curve was used as input, a bending moment and shear force are also outputed.

The different control parameters for this subprogram are listed below.

(1) Input/Output Parameters

(a) TITLE

Default: TITLE off If TITLE is specified a new descriptive name, up to 40 letters will be read immediately following the *GROUNDING parameter list.

(b) WTDIST = DWXXXXX

If WTDIST is specified a weight curve, as explained in A.2 and C.2, it will be read from a file named DWXXXXX. The file name is "DW" followed by five letters of the user's choice.

(2) Processing Parameters

(a) XF = n

Same as subprogram DRAFT

(b) XA = n

Same as subprogram DRAFT

(c) TF = n

Same as subprogram DRAFT

(d) TA = n

Same as subprogram DRAFT

(e) DRAFT = n

Same as subprogram DRAFT

(f) WEIGHT = n

Same as subprogram DRAFT

(g) LCG = n

Same as subprogram DRAFT

(8) ---

Same as subprogram DRAFT

(h) KG = n

(i) TRIM = n

Same as subprogram DRAFT

(j) SHOAL DRAFT = n

"n" is the depth of water at the

Default: SHOAL DRAFT = 0.0 point where the ship has run aground

(k) SHOAL LOCATION = n
 Default:
 SHOAL LOCATION =
 5% of ship's
 length

"n" is the point where the vessel has run aground measured from the F.P. in the ship's coordinate system

(1) SHOAL LENGTH = n

length

Default: SHOAL LENGTH = 1% of ship's "n" is the length of shoal which the ship's bottom is aground on. This is used for distributing the grounding load

(3) Examples of use of GROUNDING

(a) *GROUNDING (XCG = 350.0, WT = 40000., KG = 15.0, SHOAL LOCATION = 30.0)

Action:

The program will set the ship's weight to 40,000, the longitudinal center of gravity 350.0 from the forward perpendicular and the vertical center of gravity 15.0 from the baseline. The ship will be balanced to establish the equilibrium condition.

The ship runs aground 30.0 from the forward perpendicular on a shoal of 0.0 depth. The hydrostatic properties will be printed for the grounded condition.

(b) *GROUNDING (WTDIST = DWMAR, SHOAL DRAFT = 5.0, ZCG = 29.0)

Action:

The program will read the longitudinal weight curve from a file named "DWMAR" and set the vertical center of gravity to 29.0 feet above the keel. The shoal depth is 5.0 feet, the shoal location 5% of the vessel's length aft of the F.P. and the length of the shoal touching the bottom will be assumed 1% of the vessel's length. First, the before grounding condition is found then the equilibrium condition for the grounded vessel is determined. Hydrostatic properties and shear forces and bending moments will be printed for the grounded vessel.

C.3.f Subprogram INTACT STABILITY

This subprogram calculates the cross curves of stability for a vessel. The cross curves of stability are a calculation of righting arm versus the angle of heel versus displacement. (See figure 3.7).

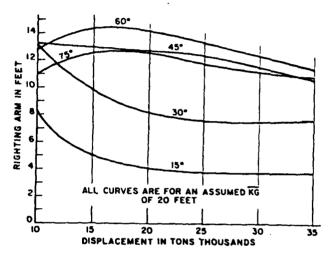


Figure 3.7 From (9)

The vessel's trim, vertical center of gravity and horizontal center of gravity are also needed.

The different control parameters for this subprogram are listed below:

(1) Input Parameter

TITLE

Default: TITLE off If TITLE is specified, a new descriptive name of up to 40 letters will be read from a line immediately following the *INTACT STABILITY control statement.

(2) Processing Parameters

(a) TRIM = n

 $\frac{\text{Default:}}{\text{TRIM} = 0.0}$

(b) XF = n

Default: XF = first station distance from the F.P. "n" is the ship's trim in length units with positive defined as bow up. This is also defined as the difference between the aft and forward draft

"n" is the distance to the forward mark measured from the forward perpendicular in length units. Needed only if TRIM is not zero

(c) XA = n

Default: XA = last station distance from A.P. "n" is the distance to the aft mark measured from the forward perpendicular in length units. Needed only if TRIM is not zero.

(d) KG = n or VCG = n or ZCG = n

Default:
KG = ½ ship's
depth

"n" is the distance from the baseline to the ship's vertical center of gravity following the *INTACT STABILITY parameter list.

(e) HCG = n or YCG = n

 $\frac{\text{Default:}}{\text{HCG}} = 0.0$

"n" is the distance from the centerline to the horizontal center of gravity (positive to starboard)

(f) HEEL1 = n $\frac{\text{Default:}}{\text{HEEL1}} = 10.0$

"n" is the initial heel angle in degrees for the cross curves of stability

(g) HEEL2 = n

Default:
HEEL2 = 80.0

"n" is the final angle in degrees for the cross curves of stability

(h) HEELINC = n

Default:
HEELINC = 10.0

"n" is the heel increment in degrees used to go from HEEL1 to HEEL2 in the cross curves of stability

(i) DISP1 = n

Default:
DISP1 = 0.1 *
L*B*Depth*Density

"n" is the initial displacement in force units for the cross curves of stability

(j) DISP2 = n

Default:
DISP2 = 10.0 *
Default DISP1

"n" is the final displacement, in force units, for the cross curves of stability

(k) DISPINC = n

Default:
DISPINC = Default
DISP1

"n" is the increment of displacement used to go from DISP1 to DISP2 in the cross curves of stability

(1) WAVE = n

Same description as in subprogram DRAFT so that cross curves of stability can be performed for quasi-static conditions

(3) Examples of use of INTACT STABILITY

(a) *INTACT STABILITY (DISP1 = 2000., DISP2 = 30000.,
DISPINC = 2000., KG = 28.0, TITLE, WAVE = 1)
MARINER - SINE WAVE - CREST MIDSHIPS
5.2000 520.0000 260.0000 0.0000

Action:

The program will calculate the cross curves of stability for a Mariner in a sinusoidal wave whose crest is at midships and amplitude of 5.2 feet. The KG is 28.0 feet, the displacements used will be 2000 to 30000 in steps of 2000 tons, and the heel angles will be 10 degrees to 80 degrees in steps of 10 degrees.

(b) *INTACT STABILITY.

Action:

The program will perform the calculations for 10° to 80° in steps of 10° with an assumed KG of half the ship's depth. The default values for the displacement range will also be used.

C.3.g Subprogram COEFFICIENTS

The subprogram generates the two-dimensional pressures and added mass and damping coefficients for 25 frequencies. The pressures for heave, sway and roll and the added mass and damping for heave, sway, roll, sway-roll, cross-coupling and roll-away-coupling are calculated. The pressures are calculated at the midpoints of line segments described by consecutive offset points.

These values are calculated using conformal mapping or close-fit techniques. The accuracy obtained using the conformal mapping technique improves as more coefficients are added. Likewise, with the close-fit method, the more offset pairs used, the greater the accuracy. Using Frank, the offset pairs should be evenly spaced for best results, therefore, a midship section might need extra points for the side and bottom. This is automatically done by the program by specifying the maximum distance between points so that extra offset pairs can be inserted.

Subprograms OFFSETS and DRAFT must be called before calling this subprogram.

(1) Output Parameters

(a) NOLIST

Default: NOLIST off

(b) LIST

Default: LIST off

(c) OUTPUT = TDXXXXX

If NOLIST is specified, the printing of the two-dimensional hydrodynamic properties is suppressed

If LIST is specified, the mapping coefficients and the OFFSETS are listed

If OUTPUT is specified, two-dimensional hydrodynamic properties written to TAPE 3 are saved under a file name TDXXXXX. The file name is "TD" followed by five letters of the user's choice.

(2) Processing Parameters

(a) DMAX = n

Maximum distance between adjacent offset points. If distance greater than n, then additional offset pairs are inserted by the program.

(b) YMAX = n

Maximum horizontal distance between adjacent offset pairs, otherwise same as DMAX.

(c) ZMAX = n

Maximum vertical distance between adjacent offset pairs otherwise same as DMAX.

(d) FIRST STATION = nDefault: FIRST STATION = 1

Specifies first station for which the two-dimensional hydrodynamic coefficients will be calculated.

(e) LAST STATION = nDefault: LAST STATION = Maximum station

Specifies last station for which two-dimensional hydrodynamic coefficients will be calculated.

(f) MAPPING ERROR = n Default: MAPPING ERROR = 2.0%

Specifies the mapping error tolerance percent for determining if section is mapped accurately.

Default: NUMBER COEFFI-CIENTS = 9

(g) NUMBER COEFFICIENTS Specifies maximum number of mapping coefficients to be used. Maximum value is 9. If "n"is defined as 2 or less, then a Lewis form is assumed.

(h) MAXPOINTS = nDefault: $\overline{MAXPOINTS} = 20$ Specifies the maximum number of points to be used in Frank close fit method. Maximum is 20 points.

(i) MAPPING

Default: MAPPING ON

If MAPPING is specified, all sections from FIRST STATION to LAST STATION will attempt to be mapped and two-dimensional coefficients will be calculated. If a section cannot be mapped, FRANK will be used.

(j) FRANK

Default: FRANK off

If FRANK is specified hydrodynamic, properties of all sections from FIRST STATION to LAST STATION will be performed using the FRANK close fit method

(3) Example of use of COEFFICIENTS

(a) *COEFFICIENTS (DMAX = 1.0, OUTPUT = TDWOL2)

The program will calculate added mass and damping for heave, sway, roll and sway-roll cross couplings. The maximum distance between adjacent offset points is 1.0 (but a maximum of 20 points). The hydrodynamic results will be written to a file called TDWOL2.

IV. DESCRIPTION OF OUTPUT SCHEME

A description of the output format will be given with a sample run shown in Appendix A, using the input file given below:

```
*TERMINAL(LINE LENGTH=80)
*UNITS(LIST)
*OFFSETS(FILE=MMTSL7,LIST)
*DRAFT(DRAFT=20.0)
*DRAFT(TF=25.0.TA=25.0)
*DRAFT(WT=47760.0000, LCG=478.8632, KG=42.31, TITLE)
SL-7 FULL LOAD EXAMPLE
*GROUNDING(WTDIST=DWSL7FU, SHOAL LENGTH=5.0, SHOAL LOCATION=50.0,
 SHOAL DRAFT=5.0, KG=42.31, TITLE)
SL-7 FULL LOAD GROUNDING EXAMPLE
*INTACTSTABILITY(DISP1=15000,DISP2=50000,DISPINC=5000,KG=30.,
TITLE)
SL-7 INTACT STABILITY EXAMPLE
*DRAFT(WTDIST=DWSL7BA, KG=40.26, WAVE=1, TITLE)
SL-7 BALLAST-L/20 WAVE TROUGH AMIDSHIPS
   44.0250 880.5000
                        0.0000
                                   0.0000
*DRAFT(WTDIST=DWSL7FU,KG=42.31,TITLE,EQUALSTATION=21,
POINTS=19, LIST)
SL-7 - NORMAL FULL LOAD DEPARTURE
*COEFFICIENT(FIRSTSTATION=1, LASTSTATION=1)
*COEFFICIENT(FIRSTSTATION=11, LASTSTATION=11, LIST)
*COEFFICIENT(FIRSTSTATION=11, LASTSTATION=11, FRANK)
*FINISH.
```

The *TERMINAL commands sets the output format to 80 columns per line. *UNITS indicates that the default units for the program will be used and will be printed (page A-2). The *OFFSETS job name reads the ship geometric data from file MMTSL7 and then lists the offsets (pg A-4 to A-10).

The *DRAFT job name runs the hydrostatic properties of the SL-7 for a 20 ft. draft (pgs A-12 to A-13). The next line uses a slightly different input for the same type of results for a 25 ft. draft (pg A-15 to A-16). The third call to *DRAFT involves the balancing of the vessel. The weight properties of the SL-7 are given and the ship will adjust itself until it is in equilibrium (page A-17). For this

equilibrium condition the hydrostatic properties are printed (page A-18 to A-19). A title is read in for these calculations and is printed at the top of each page (pg A-17 to A-19).

The *GROUNDING job name indicates the ship has run aground on a shoal of 5.0 ft. in length and a water depth of 5.0 ft. at a point 50 ft. from the ship's forward perpendicular. Before the ship ran aground the weight conditions are found from data file DWSL7FU, which corresponds to a full load condition. This weight curve and weight summary (pg A-21) is used to determine the ship's drafts before running aground (pg. A-22). The shoal is an external force on the vessel which causes it to balance differently (pg A-23) and to have a considerable effect on shear force and bending moment (pg A-24). The hydrostatic properties are printed for this grounded condition (pg A-25 to A-26). Again a new title is read for the output and is printed at the top of each page (pg A-21 to A-26)

The *INTACT STABILITY command runs the calculation. The cross curves of stability are calculated for displacements of 15000 long tons to 50000 long tons in increments of 5000 long tons and angles of heel of 10 degrees to 80 degrees in steps of 10 degrees. The heel angles are program default values and were left unchanged. The cross curves of stability are righting arms and their tangents for various displacements and angles of heel (pg. A-28 to A-31). Again, a title is specified for the top of each page of output.

The next command, *DRAFT, reads the weight curve for a ballast condition of the SL-7 (pg A-33). The vessel will be balanced in a sinusoidal wave of amplitude 22 ft., wave length 880.5 ft. and trough amidships (pg A-34 to A-35). The shear force and bending moment for this condition (pg A-36) and hydrostatics (pg A-37 to A-38) are given. Again a new title is specififed for this job.

The final *DRAFT command is for a full load condition of the SL-7 whose weight curve is read from file DWSL7FU (pg A-40). The vessel is balanced for this condition and shear force and bending moments calculated (pg A-41 to A-42). The station arrangement for the vessel is changed to 21 equal stations with 19 points per station for subsequent calls of hydrodynamic calculations and for the hydrostatic properties (pg A-43 to A-47).

Rather than calculating the added mass and damping for all 21 stations, three stations were run. The first call to *COEFFICIENT calculates the added mass and damping for station 1 (pg A-49). Since it was a bulbous bow, the Frank close fit procedure was chosen. The nomenclature for the added mass and damping is given below:

Frequency	$\omega^2 D$	Dimensions
Parameter	$\frac{\omega^2 D}{g}$	Non-Dimensional
A' ₃₃	heave added mass	$F-\sec^2/L^2$
$N_{\mathbf{z}}^{\prime}$	heave damping	F-sec/ \mathtt{L}^2
M _s	sway added mass	$F-\sec^2/L^2$
Ns	sway damping	${ t F-sec/L}^2$
M _{s.r.}	added mass for sway-roll cross coupling	$F-\sec^2/L^2$
^N s.r.	damping for sway-roll cross coupling	F-sec/L ² F-sec ²
$^{\mathtt{I}}\mathbf{r}$	added moment of inertia in roll	F-sec ²
$^{\mathtt{N}}\mathbf{r}$	roll damping	F-sec

where

- F is force units
- L is length units
- D is station draft
- ω is frequency (radians/second)
- g is acceleration of gravity

The second call to *COEFFICIENTS is for station 11 which is midships. Since the section can be handled by conformal mapping and LIST is specified, the mapping coefficients are calculated (pg A-51). The added mass and damping are then outputted (pg A-52).

The final call to *COEFFICIENTS is again for station 11 but this time FRANK is specified. The Frank close fit method is used to calculate the added mass and damping (pg A-54) and corresponds fairly well to the conformal mapping technique.

The final call of this job is to *FINISH which terminates the execution of the program.

V. TIMING AND ERROR MESSAGES

The compilation time required for program STATIC is 6 CPU, with about 44K of core needed to load the program and 36K for execution. The job file needed for the compilation is shown in Table 1, Appendix B. The compiled (binary) version of STATIC is stored in a file called STATBIN and can be used for subsequent runs therefore saving the compilation costs. Table 2, Appendix B shows the job sequence needed for the execution of program STATIC using the compiled program.

The computation time for running STATIC varies tremendously and is a function of many variables. The number of stations and number of points per station effect the running time. Each subprogram requires various running times associated with it's task. The SL-7 is a representative ship whose computation times will be discussed. The example run shown in Chapter IV had running times as shown in the following Table.

LIST OF STATIME

```
TOTAL CPU =
                                                 .371 SEC.
 CPU LAST JOB =
                  .371 SEC.
*TERMINAL(LINELENGTH=80, TERMINAL TYPE=-1)
                                                .382 SEC.
                  .011 SEC.
                                 TOTAL CPU =
 CPU LAST JOB =
*UNITS(LIST)
                                 TOTAL CPU =
                                                .416 SEC.
 CPU LAST JOB =
                  .034 SEC.
*OFFSETS(FILE=MMTSL7,LIST)
                                 TOTAL CPU =
                                               1.047 SEC.
CPU LAST JOB =
                  .631 SEC.
*DRAFT(DRAFT=20.0)
                                               1.414 SEC.
                                 TOTAL CPU =
                  .367 SEC.
 CPU LAST JOB =
*DRAFT(TF=25.0,TA=25.0)
                                 TOTAL CPU =
                                               1.794 SEC.
 CPU LAST JOB =
                  .380 SEC.
*DRAFT(WT=47760.0000.LCG=478.8632.KG=42.31.TITLE)
                                 TOTAL CPU =
                                               3.224 SEC.
 CPU LAST JOB = 1.430 SEC.
#GROUNDING(WTDIST=DWSL7FU,SHOAL LENGTH=5.0,SHOAL LOCATION=50.0,
 SHOAL DRAFT=5.0, KG=42.31, TITLE)
CPU LAST JOB = 29.612 SEC.
                                 TOTAL CPU =
                                              32.836 SEC.
INTACTSTABILITY(DISP1=15000,DISP2=50000,DISPINC=5000,KG=30.,
TITLE)
CPU LAST JOB = 40.375 SEC.
                                 TOTAL CPU =
                                              73.211 SEC.
#DRAFT(WTDIST=DWSL7BA, KG=40.26, WAVE=1, TITLE)
 CPU LAST JOB = 5.129 SEC.
                                 TOTAL CPU =
                                              78.340 SEC.
*DRAFT(WTDIST=DWSL7FU, KG=42.31, TITLE, EQUALSTATION=21,
POINTS=19, LIST)
CPU LAST JOB =
                1.593 SEC.
                                 TOTAL CPU =
                                              79.933 SEC.
*COEFFICIENT(FIRSTSTATION=1,LASTSTATION=1)
CPU LAST JOB = 13.042 SEC.
                                 TOTAL CPU =
                                              92.975 SEC.
*COEFFICIENT(FIRSTSTATION=11,LASTSTATION=11,LIST)
CPU LAST JOB = 3.468 SEC.
                                 TOTAL CPU = 96.443 SEC.
*COEFFICIENT(FIRSTSTATION=11, LASTSTATION=11, FRANK)
CPU LAST JOB = 16.049 SEC.
                                TOTAL CPU = 112.492 SEC.
*FINISH.
```

The total time for running *TERMINAL, *UNITS, and *OFFSETS is around one computational unit (CPU). This is fairly constant for all types of ships. The *DRAFT sub-program can have various tasks and the times are all relatively small. If the vessel's position is given, that is the drafts and/or heel, the hydrostatic calculations will require about 1/2 CPU. If balancing of the vessel is performed, the typical running time is from 1 to 2 CPU provided there is no heel. As the heel angle becomes larger the computation time will increase. The *DRAFT examples in Chapter 1V are for a zero heel condition.

The *GROUNDING routine requires substantial computations since it is an excessive trim condition. The running time can typically take from 20 to 40 CPU depending upon shoal location and shoal draft. The time in the above examples was 29.3 CPU.

The *INTACT STABILITY is a lengthy calculation because 64 points were computed for the Cross Curves of Stability (8 displacements with 8 heel angles) and required about 41 CPU. The small heel angles (10° to 30°) require about half the CPU time as the larger heel angles (60° to 80°). With this in mind, care should be exercised in choosing the range of heel angles which are necessary for a particular vessel.

The *COEFFICIENT sub-program is the most costly of all the subprograms in STATIC. This sub-program calculates the added mass and damping of each station at twenty-five specific frequencies. Hydrostatic conditions of the vessel should be checked thoroughly before executing this program, since it is expensive. The time of computation for one station is 10 to 20 CPU for the Frank close fit method. The conformal mapping approach can take from 3 to 30 CPU and is a function of the number of mapping coefficients needed to describe a station adequately. As seen in our example, Station 11 required 3.5 CPU using conformal mapping (3 mapping coefficients) but required 16 CPU using the close fit technique.

The error messages are printed by the program at the time of error and are self-explanatory. The three types of errors that might be incurred while running STATIC are:

- 1) File
- 2) Variable name or value
- 3) Array exceedence

If a file is to be used by STATIC, it must be saved on your user number. An error message will tell you if the program cannot find a file. The most probable reason for this error is a misspelling of the file name. The second problem associated with file manipulation involves an output file. It is not possible to save a file, such as a SPRINGING or MOTION file, if one already exists on the system with the same name.

An error message will occur if a variable name does not match one specified by the program. For instance, *UNITS (LENGHT=M) would produce an error message indicating that LENGHT was not found as a permitted variable name. This is a logical conclusion since the spelling should be LENGTH. Likewise, if *UNITS (LENGTH=METERS) were given, an error message would also result. METER is not a permitted variable value, while M would be the desired value.

Array exceedance is caused by inputting more data than permitted. The following is a list of maximum numbers used by STATIC, and is repeated from Chapter III.

Stations	41
Points per station	29
Weight elements	200
Number of manning coefficients	9

If any of these numbers are exceeded, an error message will be provided to indicate the problem area.

VI. REFERENCES

- 1. Hoffman, D. and Zielinski, T.E., "Integrated Seakeeping Analysis (ISA) Computer Program", Hoffman Maritime Consultant, Inc., HMC Report 7660H, Oct. 1976.
- 2. Aughey, M., "Ship Hull Characteristics Calculations", SNAME Local Section Paper at Hampton Roads, September 1968.

 $H_{i} = i$

- 3. Zielinski, T. E., "Further Developments in the Theory of Springing Applied to a Great Lakes Bulk Carrier", Appendices A-F, Webb Institute Report prepared for the U. S. Coast Guard February 1974.
- 4. Hoffman, D., "Distribution of Wave Cuased Hydrodynamic Pressures and Forces on a Ship Hull", NSMET, publication #92, Norwegian Ship Model Experimental Tank, 1966.
- 5. Hoffman, D., and Zielinski, T.E., "A New Approach to the Ship Hull Form Characteristics Problem", Metropolitan Section SNAME, January 1974.
- 6. Van Hooff, R., "Sectional Hydrodynamic Coefficients for Heave, Sway and Roll", Report to American Bureau of Shipping, New York, January 1975.
- 7. Frank, W., "Oscillation of Cylinders In or Below the Free Surface of Deep Fluids", Hydrodynamic Laboratory Research and Development Report 2375, October 1967.
- 8. Bedel, J.W. and Lee, C.M., "Numerical Calculation of the Added Mass and Damping Coefficients of Cylinders Oscillating in or Below a Free Surface", Ship Performance Department Research and Development Report 3551, March 1971.
- 9. Comstock, J.P., ed., <u>Principles of Naval Architecture</u>, SNAME, New York, 1967.
- Rawson, K.J. and Tupper, E.C., "Basic Ship Theory", Vols. 1 and 2, Longman, New York, 1976.
- 11. Paulling, J.R., "The Transverse Stability of a Ship in a Longitudinal Seaway", Journal of Ship Research, Vol. 4, No. 4, March 1961.
- 12. Zielinski, T.E., "The Use of Conformal Mapping in Ship Design", Senior Thesis, Webb Institute Report, June 1972.
- 13. Lewis, F.M., "The Inertia of Water Surrounding a Vibrating Ship", SNAME Transactions, 1929.

- 14. Porter, W.R., "Pressure Distribution, Added Mass and Damping Coefficients for Cylinders Oscillating in a Free Surface", University of California, I.E.R. Report Series 82, Issue 16, July 1960.
- 15. Ursell, F., "On the Bearing Motion of a Circular Cylinder on the Surface of a Fluid", Quarterly Journal of Mechanics and Applied Mathematics 2, 1949.
- 16. Zielinski, T.E., "Program HYDRO2D Two Dimensional Hydrodynamic Properties of Ship Sections", Webb Institute Report to the American Bureau of Shipping, November 1976.
- 17. Wood, P., "Program Input and Control System "PICSY", Internal report at University of California at Berkeley, 1971.
- 18. Kaplan P., Sargent, T.P., and Cilmi, J., "Theoretical Estimates of Wave Loads on the SL-7 Container Ship in Regular and Irregular Seas", Ship Structure Committee Report SSC-246, 1974. (used for weight description)

APPENDIX A

PROGRAM STATIC (05/79)

DEVELOPED FOR U.S. COAST GUARD BY:

HOFFMAN MARITIME CONSULTANTS GLENHEAD (516)676-8499 NEW YORK

07/10/79 10.50.30

PROGRAM STATIC (05/79) 07/10/79 1.50.30 PAGE 2

-LIST OF UNITS AND PHYSICAL CONSTANTS..

LENGTH UNIT FEET TIME UNIT SECOND FORCE UNIT L.TONS

-PHYSICAL CONSTANTS..

GRAVITATIONAL ACCELERATION, G = 32.1740
VISCOSITY OF WATER, NU = .1106E-04
DENSITY OF WATER, RHO = .8880E-03

Note:

A mistake in the SL-7 offsets will result in slightly different values.

PROGRAM STATIC (05/79) 07/10/79 10.50.30 PAGE 3

*OFFSETS(FILE=MMTSL7,LIST)

.867

2.023 17

5.839 19

8.382 20

1.098

3.613

15

16

1.8

STATION 4 21 POINTS X = 44.025

0.000 15

0.000 16

1.012 17

2.515 18

4.278 19

6.272 20

8.238 21

29.528

32.808

39.370

45.932

52.493

59.055

65.125

ς,

6

8

a

10

- 1

• 3

14

15

16

1.7

18

1-3

2:0

21

STATION 5
21 POINTS
X = 66.037

65.026 10.897 21

29.528

32.808

39.370

45.932

52.493

59.055

STATION 6 21 POINTS X = 88.050

1.301

1.503

7.717

10.608

13.354

29.528

32.808

39.370

45.932

52.493

59.055

64.993

:

	X = 11.023		x - 00	x = 00.037			x = 00.090	
	HEIGHT Z	H-B Y		HEIGHT Z	H-B Y		HEIGHT Z	H-B Y
1	0.000	0.000	1	0.000	0.000	1	0.000	0.000
)	.820	3.757	2	.820	4.191	2	.820	4.625
3	1.640	5.203	3	1.640	5.578	3	1.640	6.128
4	3.281	6.879	ц	3.281	7.399	ų	3.281	8.035
5	4.921	7.660	5	4.921	8.527	5	4.921	9.163
6	6.562	8.151	6	6.562	8.671	6	6.562	9.481
7	8.202	8.238	7	8.202	8.902	7	8.202	9.770
ઠ	9.842	8.093	. 8	9.842	8.816	8	9.842	9.683
9	11.483	7.804	9	11.483	8.527	9	11.483	9.336
10	13.123	7.226	10	13.123	8.093	10	13.123	8.960
1.1	16.404	5.839	11	16.404	6.648	11	16.404	7.949
1.2	19.685	4.336	12	19.685	5.347	12	19.685	6.937
13	22.966	3.180	13	22.966	4.393	13	22.966	6.214
1.4	26.247	2.601	14	26.247	4.133	14	26.247	6.214
15	29.528	2.544	15	29.528	4.336	15	29.528	6.879
15	32.808	3.035	16	32.808	5.000	16	32.808	8.006
1.7	39.370	5.058	17	39.370	7.602	17	39.370	10.926
18	45.932	7.862	18	45.932	10.984	18	45.932	14.452
13	52.493	11.273	19	52.493	11.909	19	52.493	18.267
20	59.055	14.886	20	59.055	18.788	20	59.055	23.066
21	64.961	18.007	21	64.895	22.545	21	64.797	27.112

10.50.30


ORIG.OFF	SETS TABL	E (FEET)	SEA-LAND	7 C	NTAINERSHIP	
LENGTH	= 880.50	0	BEAM	= 105.500		DEPTH =	64.305
STATION 21 POINT X = 110	-		STATIO 22 POI X = 1	NTS		STATION 22 POINT X = 176	
HEIGHT Z	H-B Y		HEIGHT Z	H-B Y		HEIGHT Z	H-B Y
0.000	0.000 5.145	1 2	0.000	0.000 2.890	1 2 3	0.000 .131 .820	0.000 4.336 6.937

3 1.640 6.879 .820 8.758 1.640 1.640 7.226 4 3.281 8.469 10.695 3.281 8.960 3.281 5 4.921 9.394 5 11.909 4.921 4.921 10.059 6 6.562 9.827 6 6 6.562 12.862 8.202 10.261 6.562 10.666 7 13.585 8 8.202 8 8.202 10.752 10.406 8 9.842 9 9.842 14.308 9.842 11.273 11.483 10.203 9 9 10 11.483 14.741 11.483 11.330 10.059 13.123 10 10 13.123 15.319 16.404 9.394 13.123 11.273 11 11 11 16.404 16.331 19.685 8.758 12 16.404 11.128 12 12 17.342 19.685 13 22.966 8.613 13 19.685 11.041 13 14 22.966 18.354 22.966 11.330 9.018 26.247 14 14 19.741 26.247 12.140 15 26.247 9.827 15 15 29.528 21.042 29.528 32.808 11.041 29.528 13.151 16 16 16 32.808 22.487 17 14.597 17 39.370 14.452 17 32.808 39.370 25.783 18.094 18 18.267 39.370 18 18 45.932 29.482 45.932 22.112 19 45.932 19 22.545 19 52.493 33.529 52.493 20 59.055 27.112 20 52.493 26.303 20 37.864 21 59.055 30.927 21 64.698 31.303 21 59.055 41.911 64.633 34.974 22 64.534 22

	LENGTI	H = 880.5	00	BEAM =	= 105.500		DEPTH =	64.305
	STATION 22 POINT X = 220	TS		STATION 22 POINT X = 261			STATION 22 POIN X = 30	
	HEIGHT Z	H-B Y		HEIGHT Z	H-B Y		HEIGHT Z	H-B Y
1 2	0.000	0.000 4.336	1 2	0.000	0.000 7.226	1 2	0.000 .328	0.000 11.562
3 4	.820 1.640	8.960 10.839	3 4	.820 1.640	12.284 14.741	3	.820 1.640	17.198 20.233
5 6	3.281 4.921	13.296 15.319	5 6	3.281 4.921	18.210 20.666	5 6	3.281 4.921	24.424 27.025
7 8	6.562 8.202	16.967 18.152	7 8	6.562 8.202	22.776 24.279	7 8	6.562 8.202	29.338 31.216
9	9.842 11.483	19.366	9 10	9.842	25.667 26.736	9 10	9.842 11.483	32.806
11 12 13	13.123 . 16.404 19.685	21.158 23.037 24.568	11	13.123 16.404 19.685	27.893 30.003 31.794	11 12 13	13.123 16.404 19.685	35.465 37.489 39.136
14 15	22.966 26.247	26.014 27.459	13 14 15	22.966 26.247	33.297 34.830	14	22.966	40.408
16 17	29.528	28.904	16	29.528 32.808	36.188 37.633	16 17	29.528 32.808	42.720 43.790
18	39.370 45.932	33.297 36.708	18	39.370 45.932	40.177	18	39.370 45.932	45.697 47.605
20	52.493 59. 055	40.119	20	52.493 59.055	45.380 45.183	20 -21	52.493 59.055	49.224
22	64.370	46.969	22	64.337	50.351	22	64.305	52.027

	ORIG.OFF	SEIS IND	LE (reel)	SER-CAND	, , , , ,	MININGROUII	•	
	LENGT	H = 880.5	00	BEAM =	: 105.500		DEPTH =	64.305	
	STATION	13		STATION	14		STATION	15	
	22 POINT	•		22 POINT			18 POINT	rs	
	X = 352	2.200		X = 396	.225		X = 440.250		
	HEIGHT Z	H-B Y		HEIGHT Z	H-B Y		HEIGHT Z	H-B Y	
12345678901123456789011234567890123	45.932 52.493 59.055	0.000 19.366 23.412 27.314 31.505 33.962 36.564 38.298 39.888 41.042 43.934 45.235 46.247 47.171 47.8369 49.640 50.5659	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 10 10 10 10 10 10 10 10 10 10 10 10 10	0.000 .591 .820 1.640 3.281 4.921 6.562 8.202 9.842 11.483 13.123 16.404 19.685 22.966 26.247 29.528 32.808 39.370 45.932 52.493		1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 17 	0.000 .656 .820 1.640 3.281 4.921 6.562 8.202 9.842 11.483 13.123 16.404 19.685 22.966 26.247 29.528 32.808 64.305	0.000 32.662 34.685 39.310 43.212 45.380 47.114 48.559 49.571 50.293 50.9958 51.912 52.6663 52.721 52.750	
22	64.305 STATION	52.548	22	64.305 STATION			STATION	18	
	15 POINT	rs		15 POINT	rs		17 POINT		
	X = 481	4.275		X = 528	3.300		X = 572	2.325	
	HEIGHT Z	H-B Y		HEIGHT Z	H-B Y		HEIGHT Z	H-B Y	
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	0.000 .656 .820 1.640 3.281 4.921 6.562 8.202 9.842 11.483 13.123 16.404 19.685 22.966 68.242	0.000 32.751 35.650 40.867 44.635 46.953 48.692 49.910 50.721 51.446 52.025 52.750 52.750 52.750	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	0.000 .656 .820 1.640 3.281 4.921 6.562 8.202 9.842 11.483 13.123 16.404 19.685 22.966 68.242	0.000 32.751 33.911 38.548 42.751 45.359 47.185 48.692 49.649 50.489 51.214 52.083 52.750 52.750	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17	0.000 .492 .820 1.640 3.281 4.921 6.562 8.202 9.842 11.483 13.123 16.404 19.685 22.966 26.247 29.528 68.242	0.000 24.636 28.694 33.621 38.548 41.504 43.910 45.794 47.243 48.547 49.562 51.011 51.880 52.402 52.692 52.750 52.750	

	ORIG.OF	SETS TAB	LE (reer)	SEA-LAND	7 01	DNTAINERSHI		
	LENGT	H = 880.5	00	BEAM =	= 105. 500		DEPTH =	64.305	
	STATION 19			STATION	20		STATION	21	
	18 POINT			21 POINTS			21 POINTS		
	X = 616	5.350		X = 660	375		$X = 70^{1}$	1.400	
	HEIGHT Z	H-B Y		HEIGHT Z	H-B Y		HEIGHT Z	H-B Y	
1	0.000	0.000	1	0.000	0.000	1	0.000	0.000	
2	.328	15.941	2	0.000	3.188	2	0.000	2.811	
3 4	.820	20.868	3	.820	11.593	3	.820	4.898	
5	1.640 3.281	26.085 31.592	4 5	1.640 3.281	16.028 22.317	ц 5	1.640 3.281	8.202 13.187	
6	4.921	35.505	6	4.921	24.201	6	4.921	17.245	
7	6.562	38.548	7	6.562	31.302	7	6.562	21.390	
8	8.202	41.070	8	8.202	34.229	8	8.202	24.694	
9	9.842	42.954	9	9.842	36.867	9	9.842	28.085	
10	11.483 13.123	44.780 46.142	10 11	11.483 13.123	39.041	10 11.	11.483 13.123	30.665	
12	16.404	48.547	12	16.404	40.925 44.113	12	16.404	33.215 37.041	
13	19.685	50.141	13	19.685	46.634	13	19.685	40.229	
14	22.966	51.243	14	22.966	48.402	14	22.966	42.606	
15	26.247	51.938	15	26.247	49.707	15	26.247	44.664	
16 17	29.528 32.808	52.460	16	29.528	50.750	16	29.528	46.374	
18	68.242	52.750 52.750	17 18	32.808 39.370	51.620 52.199	17 18	32.808 39.370	47.765 49.852	
	00.2.2	72.130	19	45.932	52.750	19	45.932	51.388	
			20	52.493	52.750	20	52.493	52.605	
			21	68.242	52.750	21	68.242	52.750	
	STATION	22		STATION	23		STATION	24	
	22 POINT	-		22 POINT			22 POINT		
	X = 748	3.425		X = 770	0.437		X = 792	2.450	
	HEIGHT Z	H-B Y		HEIGHT Z	H – B Y		HEIGHT Z	H-B Y	
1	0.000	0.000	1	0.000	0.000	1	0.000	0.000	
2	0.000	2.464	2	0.000	2.174	2	0.000	2.029	
3 4	.820 1.640	3.246 4.290	3 4	.820 1.640	2.609 3.188	3 4	.820 1.640	2.174 2.522	
5	3.281	6.724	5	3.281	4.637	5	3.281	3.333	
6	4.921	9.420	6	4.921	6.521	6	4.921	4.347	
7	6.562	12.376	7	6.562	8.840	7	6.562	5.797	
8	8.202	14.985	8.	8.202	10.869	8	8.202	7.275	
9 10	9.842 11.483	17.970 20.288	9 10	9.842 11.483	13.274 15.245	9 10	9.842 11.483	9.014 10.666	
11	13.123	22.781	11	13.123	17.622	11	13.123	12.550	
12	16.404	27.100	12	16.404	21.767	12	16.404	16.694	
13	19.685	30.925	13	19.685	25.592	13	19.685	19.825	
1 4	22.966	34.200	14	22.966	28.984	14	22.966	23.477	
15 16	26.247 29.528	37.099 39.562	15 16	26.247 29.528	32.288 35.128	15 16	26.247 29.528	26.810 30.259	
17	32.808	41.823	17	32.808	37.679	17	32.808	30.239	
18	39.370	45.504	18	39.370	42.171	18	39.370	38.432	
19	45.932	48.692	19	45.932	45.504	19	45.932	42.925	
20	52.493	51.301	20	52.493	48.692	20	52.493	47.069	
21 22	54.626 68.242	52.025 52.025	21 22	54.626 68.405	51.359 52.083	21 22	54.626 68.438	48.344 48.344	
	00.272	72.027	۲ ۲	00.40)	J2.003		00.430	70.)77	

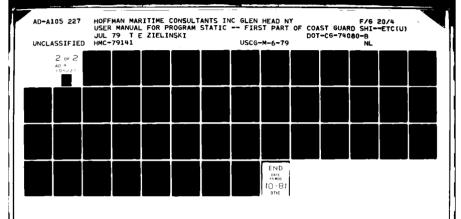

	LENGTI	H = 880.5	00	BEAM	= 105.500		DEPTH =	64.305	
	STATION	25		STATION	26		STATION	27	
	22 POIN	_		15 POIN			12 POINTS		
		4.463			6.475		X = 85	8.487	
				_					
	HEIGHT Z	H-B Y		HEIGHT 2	H-B Y		HEIGHT Z	H-B Y	
1	0.000	0.000	1	11.024	0.000	1	16.404	0.000	
2	0.000	1.594	2	11.024	3.072	2	16.404	2.753	
3	.820	1.739	3	11.483	3.623	3	19.685	3.739	
4	1.640	1.971	4	13.123	4.492	4	22.966	5.507	
5 6	3.281	2.522	5	16.404	6.376	5	26.247	8.463	
6	4.921	3.130	6	19.685	8.840	6	29.528	12.028	
7	6.562	4.000	7	22.966	11.535	7	32.808	16.173	
8	8.202	4.782	8	26.247	14.955	8	39.370	23.766	
9	9.842	5.884	9	29.528	18.549	9	45.932	29.998	
10	11.483	6.956	10	32.808	22.317	10	52.463	35.447	
11	13.123.	8.289	11	39.370	29.042	11	54.626	37.099	
12	16.404	11.159	12	45.932	34.780	12	68.898	37.099	
13	19.685	14.318	13	52.493	36.693				
14	22.966	17.535	14	54.626	41.475				
15	26.247	21.013	15	68.635	41.475				
16	29.528	24.491							
17	32.808	28.027							
18	39.370	33.911							
19	45.932	39.273							
20	52.493	44.055							
21	54.626	45.301							
22	68.537	45.301							
	STATION			STATION			STATION	_	
	10 POIN			9 POIN			7 POIN		
	X = 869	9.494		X = 88	0.500		X = 90	2.513	
	HEIGHT Z	H-B Y		HEIGHT Z	H-B Y		HEIGHT Z	H-B Y	
1	22.966	0.000	1	26.247	0.000	1	30.512	0.000	
2	22.966	2.753	2	26.247	2.058	2	32.808	2.840	
3	26.247	5.507	3	29.528	5.652	3	39.370	10.811	
4	29.528	8.898	4	32.808	9.391	4	45.932	18.115	
5 6	32.808	12.956	5	39.370	17.390	5	52.493	24.781	
6	39.370	20.607	6	45.932	24.346	6	54.626	26.665	
7	45.932	27.303	7.	52.493	30.375	7	68.898	26.665	
8	52.493	33.012	8	54.626	32.085				
9	54.626	34.780	9	68.898	32.085				
10	68.898	34.780							

PROGRAM STATIC (05/79) 07/10/79 10.50.30 PAGE 10

ORIG.OFFSETS TABLE (FEET) SEA-LAND 7 CONTAINERSHIP

LENGTH = 880.500 BEAM = 105.500 DEPTH = 64.305

FORWARD PROFILE AFTER PROFILE HEIGHT Z DIST X HEIGHT Z DIST X 1 0.000 0.000 2 68.898 0.000 1 0.000 814.463 2 11.024 836.475 16.404 3 858.487 4 22.966 869.494 5 26.247 880.500 30.512 902.513 68.898 7 902.513

PROGRAM STATIC (05/79) 07/10/79 10.50.30 PAGE 11

*DRAFT(DRAFT=20.0)

HYDROSTATICS

SEA-LAND 7 CONTAINERSHIP

STATION	MEAN DRAFT	BEAM	AREA	S.A. COEF.	VCB	HCB
FROM F.P.	(FEET)	(FEET)	(FEET **2)	1	(FEET)	(FEET)
0.0000	20.0000	4.4549	207.670	2.33082	9.3548	0.0000
11.0063	20.0000	5.5699	219.991	1.97482	9.5234	0.0000
22.0125	20.0000	6.4482	231.954	1.79860	9.6584	0.0000
44.0250	20.0000	8.4492	263.383	1.55863	9.9183	0.0000
66.0375	20.0000	10.5114	291.741	1.38773	10.0563	0.0000
88.0500	20.0000	13.7352	328.002	1.19402	10.2703	0.0000
110.0625	20.0000	17.4881	362.878	1.03750	10.5315	0.0000
132.0750	20.0000	22.1383	407.990	.92146	10.7333	0.0000
176.1000	20.0000	34.8792	542.206	.77726	11.2176	0.0000
220.1250	20.0000	49.4145	733.585	.74228	11.4575	0.0000
264.1500	20.0000	63.8776	971.500	.76044	11.3638	0.0000
308.1750	20.0000	78.5166	1242.447	.79120	11.2144	0.0000
352.2000	20.0000	90.6641	1510.813	.83319	10.9819	0.0000
396.2250	20.0000	99.5523	1730.167	.86897	10.8002	0.0000
440.2500	20.0000	104.7928	1886.066	.89990	10.6641	0.0000
484.2750	20.0000	105.5000	1928.614	.91404	10.6179	0.0000
528.3000	20.0000	105.2380	1886.784	.89644	10.6908	0.0000
572.3250	20.0000	103.8612	1788.635	.86107	10.8770	0.0000
616.3500	20.0000	100.4945	1615.585	.80382	11.1980	0.0000
660.3750	20.0000	93.6085	1351.018	.72163	11.7755	0.0000
704.4000	20.0000	80.9146	1038.220	.64155	12.3606	0.0000
748.4250	20.0000	62.4797	697.122	.55788	12.8934	0.0000
770.4375	20.0000	51.8360	538.484	.51941	13.1321	0.0000
792.4500	20.0000	40.3506	393.031	.48702	13.3202	0.0000
814.4625	20.0000	29.2535	268.595	.45908	13.2896	0.0000
836.4750	20.0000	18.1976	107.619	.65883	16.2240	0.0000
858.4875	20.0000	7.8173	23.709	.84345	18.3020	0.0000
869.4938	20.0000	0.0000	0.000	0.00000	20.0000	0.0000
880.5000	20.0000	0.0000	0.000	0.00000	20.0000	0.0000
902.5125	20.0000	0.0000	0.000	0.00000	20.0000	0.0000

HYDROSTATICS

SEA-LAND 7 CONTAINERSHIP

VOLUME (MLD.)	902813.2	FEET **3
DISPLACEMENT (MLD.)	25794.662	L.TONS
BLOCK COEFFICIENT (MLD.)	.489223	
HALF-AREA MIDSHIP SECTION	943.033	FEET **2
MIDSHIP SECTION COEFFICIENT	.899902	
PRISMATIC COEFFICIENT (MLD.),	.543640	
TRIM	0.000	FEET
HEEL	0.000	DEGREES
VCB (FROM B.L.)	11.154	FEET
HCB (FROM C.L.)	0.000	FEET
LCB (FROM F.P.)	464.483	FEET
BM, TRANSVERSE	40.351	FEET
BM, LONGITUDINAL	2037.155	FEET
MOMENT TO ALTER TRIM 0.1 FEET	5967.942	
L.TONS PER 0.1 FEET IMMERSION	160.571	
AREA OF WATERPLANE	56199.912	FEET **2
WATERPLANE COEFFICIENT (MLD.)	.609081	
L.C.F. FROM F.P.	485.146	FEET
CHANGE IN DISPL. FOR 1 FEET TRIM AFT		
WETTED SURFACE (MLD.)	74780.118	FEET **2

PROGRAM STATIC (05/79) 07/10/79 10.50.30 PAGE 14

*DRAFT(TF=25.0,TA=25.0)

HYDROSTATICS

SEA-LAND 7 CONTAINERSHIP

STATION	MEAN DRAFT	BEAM	AREA	S.A. COEF.	VCB	HCB
FROM F.P.	(FEET)	(FEET)	(FEET **2))	(FEET)	(FEET)
0.0000	25.0000	1.2371	221.315	7.15611	10.1345	0.0000
11.0063	25.0000	2.7957	240.054	3.43464	10.5834	0.0000
22.0125	25.0000	3.6349	256.630	2.82404	10.8701	0.0000
44.0250	25.0000	5.6422	297.549	2.10947	11.3428	0.0000
66.0375	25.0000	8.4643	337.905	1.59685	11.7431	0.0000
88.0500	25.0000	12.4288	392.083	1.26185	12.2616	0.0000
110.0625	25.0000	17.7286	449.910	1.01510	12.8474	0.0000
132.0750	25.0000	23.6643	521.539	.88156	13.3010	0.0000
176.1000	25.0000	38.4286	724.784	.75442	14.0698	0.0000
220.1250	25.0000	53.8195	991.670	.73703	14.3406	0.0000
264.1500	25.0000	68.4947	1302.378	.76057	14.2004	0.0000
308.1750	25.0000	82.3212	1644.647	.79914	13.9791	0.0000
352.2000	25.0000	93.6401	1971.733	.84226	13.6776	0.0000
396.2250	25.0000	101.4187	2232.701	.88059	13.4353	0.0000
440.2500	25.0000	105.2827	2411.574	.91623	13.2437.	0.0000
484.2750	25.0000	105.5000	2456.114	.93123	13.1698	0.0000
528.3000	25.0000	105.5000	2413.895	.91522	13.2698	0.0000
572.3250	25.0000	105.1638	2311.623	.87925	13.5079	0.0000
616.3500	25.0000	103.3483	2125.938	.82282	13.9140	0.0000
660.3750	25.0000	98.4222	1831.947	.74453	14.5965	0.0000
704.4000	25.0000	87.7633	1460.500	.66565	15.3021	0.0000
748.4250	25.0000	71.9950	1034.001	.57448	16.0425	0.0000
770.4375	25.0000	62.0641	823.393	.53067	16.3995	0.0000
792.4500	25.0000	51.0864	622.209	.48718	16.7375	0.0000
814.4625	25.0000	39.3827	439.705	.44660	16.9216	0.0000
836.4750	25.0000	27.3117	220.060	.57650	19.5161	0.0000
858.4875	25.0000	14.6796	77.766	.61629	21.3996	0.0000
869.4938	25.0000	8.9211	14.674	.80864	24.0632	0.0000
880.5000	25.0000	0.0000	0.000	0.00000	25.0000	0.0000
902.5125	25.0000	0.0000	0.000	0.00000	25.0000	0.0000

HYDROSTATICS

SEA-LAND 7 CONTAINERSHIP

NOT THE (MED.)	1101035 5	PPP ##3
VOLUME (MLD.)		FEET **3
DISPLACEMENT (MLD.)	34029.585	L.TONS
BLOCK COEFFICIENT (MLD.)	.513923	
HALF-AREA MIDSHIP SECTION	1205.787	FEET **2
MIDSHIP SECTION COEFFICIENT	.916228	
PRISMATIC COEFFICIENT (MLD.),	.560912	
TRIM	0.000	FEET
HEEL	0.000	DEGREES
VCB (FROM B.L.)	13.905	FEET
HCB (FROM C.L.)	0.000	FEET
LCB (FROM F.P.)	470.498	FEET
BM, TRANSVERSE	33.545	FEET
BM, LONGITUDINAL	1685.981	FEET
MOMENT TO ALTER TRIM 0.1 FEET	6515.985	
L.TONS PER O.1 FEET IMMERSION	168.859	
AREA OF WATERPLANE	59100.476	FEET **2
WATERPLANE COEFFICIENT (MLD.)	.637536	
L.C.F. FROM F.P.	492.738	FEET
CHANGE IN DISPL. FOR 1 FEET TRIM AFT	-100.658	L.TONS
WETTED SURFACE (MLD.)	84454.406	FEET ##2

PROGRAM STATIC (05/79) 07/10/79 10.50.30 PAGE

*DRAFT(WT=47760.0000, LCG=478.8632, KG=42.31, TITLE)

PROGRAM STATIC (05/79) 07/10/79 10.50.30 PAGE 17

BALANCING OF SHIP SL-7 FULL LOAD EXAMPLE

6 ITERATIONS TO BALANCE SHIP

TRIM (+	BOW IIP)	=	4170	FEET
HEEL (+		•			
DRAFT FOW			=		
DRAFT AFT				32.9913	
WEIGHT			=	47760.0000	L.TONS
BUOYANCY			=	47760.0009	L.TONS
LCG (FROM	F.P.)		=	478.8632	FEET
LCB (FROM	F.P.)		=	478.8743	FEET
VCG (FROM	B.L.)		=	42.3100	FEET
VCB (FROM	B.L.)		=	18.2314	FEET
HCG (FROM	C.L.)		=	0.0000	FEET
HCB (FROM	C t. Y		_	0.000	EEET

HYDROSTATICS

SL-7 FULL LOAD EXAMPLE

STATION	MEAN DRAFT	BEAM	AREA	S.A. COEF.	VCB	HCB
FROM F.P.	(FEET)	(FEET)	(FEET **2)		(FEET)	(FEET)
0.0000	32.5742	0.0000	223.395	1.00000	10.2856	0.0000
11.0063	32.5793	2.1645	255.826	3.62781	11.6946	0.0000
22.0125	32.5844	2.9784	278.628	2.87101	12.2759	0.0000
44.0250	32.5946	6.0058	338.200	1.72767	13.4474	0.0000
66.0375	32.6048	9.9183	404.721	1.25152	14.5780	0.0000
88.0500	32.6149	15.8799	496.289	.95823	15.7712	0.0000
110.0625	32.6251	21.9472	598.465	.83581	16.8453	0.0000
132.0750	32.6353	29.0407	720.398	.76011	17.6204	0.0000
176.1000	32.6556	44.8402	1043.108	.71237	18.6032	0.0000
220.1250	32.6760	50.5819	1430.740	.72275	18.8128	0.0000
264.1500	32.6963	75.1676	1855.258	.75487	18.5830	0.0000
308.1750	32.7166	87.5196	2300.360	.80338	18.2315	0.0000
352.2000	32.7370	97.0863	2709.943	.85264	17.8218	0.0000
396.2250	32.7573	103.1786	3027.153	.89565	17.4911	0.0000
440.2500	32.777 7	105.4995	3231.401	.93446	17.2134	0.0000
484.2750	32.7980	105.5000	3278.806	.94758	17.1165	0.0000
529.3000	32.8184	105.5000	3238.733	.93542	17.2528	0.0000
572.3250	32.8387	105.5000	3138.135	.90580	17.5673	0.0000
616.3500	32.8591	105.5000	2948.151	.85044	18.1054	0.000
660.3750	32.8794	103.2517	2628.041	.77412	18,9508	0.0000
704.4000	32.8997	95.5877	2187.151	.69548	19.8548	0.0000
748.4250	32.9201	83.7717	1653.008	.59940	20.9166	0.0000
770.4375	32.9303	75.5241	1371.574	.55149	21.4725	0.0000
792.4500	32.9404	61.0736	1081.683	.53767	21.9837	0.0000
814.4625	32.9506	56.3092	820.037	.44197	22.6211	0.0000
836.4750	32.9608	44.9469	506.557	.51375	25.0536	0.0000
858.4875	32.9709	32.7218	262.508	.48425	27.1063	0.0000
869.4938	32.9760	26.3021	150.434	.57137	29.1270	0.0000
880.5000	32.9811	19.2025	77.926	.60259	30.3446	0.0000
902.5125	32.9913	6.1251	7.603	.50061	32.1647	0.0000

HYDROSTATICS

SL-7 FULL LOAD EXAMPLE

VOLUME (MLD.)	1671600.0	FEET **3
DISPLACEMENT (MLD.)	47760.001	L.TONS
BLOCK COEFFICIENT (MLD.)	.549003	
HALF-AREA MIDSHIP SECTION	1615.701	FEET **2
MIDSHIP SECTION COEFFICIENT	.934464	
PRISMATIC COEFFICIENT (MLD.),	.587506	
TRIM	.417	FEET
HEEL	0.000	DEGREES
VCB (FROM B.L.)	18.231	FEET
HCB (FROM C.L.)	0.000	FEET
LCB (FROM F.P.)	478.874	FEET
BM, TRANSVERSE	26.815	FEET
BM, LONGITUDINAL	1456.157	FEET
	7898.471	
L.TONS PER 0.1 FEET IMMERSION	182.938	
AREA OF WATERPLANE	64028.258	FEET ##2
WATERPLANE COEFFICIENT (MLD.)	.689274	
L.C.F. FROM F.P.	500.766	FEET
CHANGE IN DISPL. FOR 1 FEET TRIM AFT	-125.731	L.TONS
WETTED SURFACE (MLD.)	99885.068	FEET ##2

PROGRAM STATIC (05/79)

07/10/79 10.50.30 PAGE 20

*GROUNDING(WTDIST=DWSL7FU, SHOAL LENGTH=5.0, SHOAL LOCATION=50.0, SHOAL DRAFT=5.0, KG=42.31, TITLE)

TOTAL 47760.00 478.86

WEIGHT BLOCK DATA SL-7 FULL LOAD GROUNDING EXAMPLE

WEIGHT TYPE	BLOCK WEIGHT (L.TONS)	BLOCK LCG (FEET)	FWD END BLOCK (FEET)	AFT END BLOCK (FEET)
1 1	765.20 1847.70	19.00 84.32	-20.00 42.00	42.00 115.25
1	1205.70	143.18	115.25	167.75
1	1613.40	185.52	167.75	207.75
1	1943.60	225.50	207.75	247.75
1	2379.20	265.54	247.75	287.75
1	2305.60	305.53	287.75	327.75
1	2610.80	345.53	327.75	367.75
1	3148.70	385.52	367.75	407.75
1	3343.70	425.51	407.75	447.75
1	3299.00	467.99	447.75	492.75
1	3179.20	512.99	492.75	537.75
1	3293.30	550.00	537.75	562.75
1	3039.80	587.50	562.75	612.75
1	2661.30	635.00	612.75	652.75
1	2898.70	674.35	652.75	697.75
1	2116.10	716.10	697.75	737.75
1	1678.30	756.40	737.75	777.75
1	1597.20	795.55	777.75	817.75
1	1244.50	835.50	817.75	852.50
1	897.70	869.50	852.50	880.50
1	691.30	900.50	880.50	920.50
BLOCK	SUMMARY WEIGHT	SUMMARY LCG		
TYPE	(L.TONS)	(FEET)		
1	47760.00	478.86		

BALANCING OF SHIP SL-7 FULL LOAD GROUNDING EXAMPLE

6 ITERATIONS TO BALANCE SHIP

TRIM (+	BOW UP)	=	.4170	FEET
HEEL (+	ST'BD. DOWN)	=	0.0000	DEGREES
DRAFT FOWA	ARD	=	32.5742	FEET
DRAFT AFT	•	=	32.9913	FEET
WEIGHT		z	47760.0000	L.TONS
BUOYANCY		=	47760.0009	L.TONS
LCG (FROM	F.P.)	=	478.8632	FEET
LCB (FROM	F.P.)	=	478.8743	FEET
VCG (FROM	B.L.)	=	42.3100	FEET
VCB (FROM	B.L.)	=	18.2314	FEET
HCG (FROM	C.L.)	Ξ	0.0000	FEET
HCB (FROM	C.L.)	=	0.0000	FEET

GROUNDING OF SHIP SL-7 FULL LOAD GROUNDING EXAMPLE

SHOAL LOCATION (FROM F.P.)	=	50.0000	FEET
SHOAL WATER DEPTH	=	5.0000	FEET
SHOAL LENGTH	=	5.0000	FEET
DRAFT FORWARD	=	2.4746	FEET
DRAFT AFT	=	48.1818	FEET
TRIM (+ BOW UP)	=	45.7072	FEET
HEEL (+ ST'BD. DOWN)	=	0.0000	DEGREES
EQUIVALENT SHOAL FORCE	=	7798.960	L.TONS
EQUIVALENT WEIGHT	=	39961.040	L.TONS
LCG (FROM F.P.)	=	562.5619	FEET
VCG (FROM B.L.)	=	50.5674	FEET
HCG (FROM C.L.)	=	0.0000	FEET
DISPLACEMENT	=	39961.065	L.TONS
LCB (FROM F.P.)	=	564.2012	FEET
VCB (FROM B.L.)	=	18.1991	FEET
HCB (FROM C.L.)	=	0.0000	FEET

SHEAR FORCE-BENDING MOMENT SL-7 FULL LOAD GROUNDING EXAMPLE

DISTANCE WEIGHT	BUOYANCY	SHEAR	WEIGHT	BUOYANCY	BENDING
FROM FP FORCE	FORCE	FORCE	MOMENT	MOMENT	MOMENT
(FEET)	(L.TONS)		(FEET -L.TO	NS)
-20.00 0.	0.	0.0	0.	0.	0.0
42.00 7.652E+0	2 4.043E+01	724.8	1.760E+04	7.280E+02	16871.6
47.50 8.441E+0	2 4.880E+01	795.3	2.202E+04	9.730E+02	21047.7
52.50 -6.875E+0	3 5.722E+01	-6932.0	6.941E+03	1.238E+03	5702.9
115.25 -5.186E+0	3 2.349E+02	-5420.9	-3.781E+05	9.664E+03	-387745.9
167.75 -3.980E+0	3 5.227E+02	-4503.1	-6.207E+05	2.882E+04	-649543.7
207.75 -2.367E+0	3 8.864E+02	- 3253.3	-7.441E+05	5.642E+04	-800494.0
247.75 -4.234E+0	2 1.458E+03	-1881.1	-7.955E+05	1.024E+05	-897913.6
287.75 1.956E+0	3 2.334E+03	-378.4	-7.596E+05	1.770E+05	-936645.6
327.75 4.261E+0	3 3.606E+03	655.6	-6.301E+05	2.944E+05	-924547.2
367.75 6.872E+0	3 5.332E+03	1540.0	-4.017E+05	4.716E+05	-873296.6
407.75 1.002E+0	4 7.519E+03	2502.3	-5.678E+04	7.271E+05	-783925.4
447.75 1.336E+0	4 1.013E+04	3234.4	4.184E+05	1.079E+06	-660363.2
492.75 1.666E+0	4 1.346E+04	3208.3	1.102E+06	1.608E+06	-506622.2
537.75 1.984E+0	4 1.707E+04	2776.9	1.930E+06	2.294E+06	-363864.5
562.75 2.314E+0	4 1.916E+04	3976.5	2.468E+06	2.747E+06	-278511.5
612.75 2.618E+0	4 2.346E+04	2719.1	3.702E+06	3.812E+06	-110029.4
652.75 2.884E+0	4 2.688E+04	1954.7	4.796E+06	4.819E+06	- 22860.5
697.75 3.174E+0	4 3.055E+04	1189.9	6.161E+06	6.112E+06	49330.0
737.75 3.385E+0	4 3.348E+04	375.4	7.477E+06	7.394E+06	82802.8
777.75 3.553E+0	4 3.597E+04	-442.9	8.867E+06	8.785E+06	82049.7
817.75 3.713E+0	4 3.792E+04	-792.9	1.032E+07	1.026E+07	59015.1
852.50 3.837E+0	4 3.910E+04	-724.3	1.163E+07	1.160E+07	30701.9
880.50 3.927E+0	4 3.969E+04	-418.4	1.272E+07	1.271E+07	11310.7
920.50 3.996E+0	4 4.007E+04	-104.5	1.430E+07	1.430E+07	-1292.4

HYDROSTATICS

SL-7 FULL LOAD GROUNDING EXAMPLE

STATION	MEAN DRAFT	BEAM	AREA S	S.A. COEF.	VCB	HCB
FROM F.P.	(FEET)	(FEET)	(FEET **2)		(FEET)	(FEET)
0.0000	2.4746	10.5772	16.802	.64193	1.5455	0.0000
11.0063	3.0320	11.9466	23.757	.65587	1.8670	0.0000
22.0125	3.5894	12.9897	31.586	.67744	2.1870	0.0000
44.0250	4.7042	15.1127	50.798	.71453	2.8087	0.0000
66.0375	5.8191	17.2116	74.247	.74132	3.4393	0.0000
88.0500	6.9339	19.0922	101.722	.76839	4.0388	0.0000
110.0625	8.0487	20.4409	129.904	.78958	4.5960	0.0000
132.0750	9.1635	22.1145	165.478	.81659	5.1256	0.0000
176.1000	11.3931	29.4347	264.977	.79014	6.4061	0.0000
220.1250	13.6227	42.8875	438.159	.74996	7.7974	0.0000
264.1500	15.8523	59.2952	715.762	.76148	9.0099	0.0000
308.1750	18.0820	76.6623	1093.569	.78889	10.1483	0.0000
352.2000	20.3116	90.8562	1539.092	.83400	11.1505	0.0000
396.2250	22.5412	100.5374	1984.400	.87564	12.1419	0.0000
440.2500	24.7708	105.2746	2387.445	.91552	13.1261	0.0000
484.2750	27.0004	105.5000	2667.159	.93632	14.1850	0.0000
528.3000	29.2300	105.5000	2860.165	.92749	15.4301	0.0000
572.3250	31.4597	105.5000	2992.646	.90167	16.8584	0.0000
616.3500	33.6893	105.5000	3035.741	.85412	18.5431	0.0000
660.3750	35.9189	103.7888	2942.692	.78935	20.6028	0.0000
704.4000	38.1485	98.9262	2697.632	.71481	22.8228	0.0000
748.4250	40.3781	91.9878	2308.908	.62163	25.4025	0.0000
770.4375	41.4929	86.4987	2067.665	.57610	26.8044	0.0000
792.4500	42.6078	81.2976	1781.167	.51421	28.2766	0.0000
814.4625	43.7226	74.9348	1529.136	.46672	30.0270	0.0000
836.4750	44.8374	67.6461	1180.431	.51606	33.1843	0.0000
858.4875	45.9522	60.0298	873.299	.49234	36.1865	0.0000
869.4938	46.5096	55.6105	712.498	.54419	38.1314	0.0000
880.5000	47.0670	50.7783	580.694	.54927	39.6283	0.0000
902.5125	48.1818	40.8011	372.560	.51676	42.2118	0.0000

HYDROSTATICS

SL-7 FULL LOAD GROUNDING EXAMPLE

VOLUME (MLD.)	1398637.3 FEET **3	
DISPLACEMENT (MLD.)	39961.065 L.TONS	
BLOCK COEFFICIENT (MLD.)	.609133	
HALF-AREA MIDSHIP SECTION	1193.722 FEET **2	
MIDSHIP SECTION COEFFICIENT	.915524	
PRISMATIC COEFFICIENT (MLD.),	.665338	
TRIM	45.707 FEET	
HEEL	0.000 DEGREES	
VCB (FROM B.L.)	18.199 FEET	
HCB (FROM C.L.)	O.OOO FEET	
LCB (FROM F.P.)	564.201 FEET	
BM, TRANSVERSE	32.087 FEET	
BM,LONGITUDINAL	1951.388 FEET	
MOMENT TO ALTER TRIM 0.1 FEET	8856.278	
L.TONS PER 0.1 FEET IMMERSION	186.313	
AREA OF WATERPLANE	65209.507 FEET **2	
WATERPLANE COEFFICIENT (MLD.)	.703490	
L.C.F. FROM F.P.	527.047 FEET	
CHANGE IN DISPL. FOR 1 FEET TRIM AFT	-183.662 L.TONS	
WETTED SURFACE (MLD.)	87031.130 FEET **2	

PROGRAM STATIC (05/79) 07/10/79 10.50.30

PAGE 27

*INTACTSTABILITY(DISP1=15000,DISP2=50000,DISPINC=5000,KG=30.,TITLE)

INTACT STABILITY SL-7 INTACT STABILITY EXAMPLE

HEEL = 10.00 DEGREES

CENTER OF GRAVITY FROM B.L. = 30.00 FEET ; FROM C.L. = 0.00 FEET

DISPLACEMENT (L.TONS)	CENTER OF FROM B.L. (FEET)	BUOYANCY FROM C.L. (FEET)	GZ RIGHTING ARM (FEET)	TANGENT TO CROSS CURVE (FEET /L.TONS)
15000.0	8.101	9.537	5.590	-2.7861E-04
20000.0	9.828	8.118	4.492	-1.7236E-04
25000.0	11.502	7.112	3.792	-1.1270E-04
30000.0	13.133	6.355	3.330	-7.4874E-05
35000.0	14.726	5.763	3.024	-4.9823E-05
40000.0	16.286	5.283	2.822	-3.1656E-05
45000.0	17.814	4.893	2.703	-1.6550E-05
50000.0	19.314	4.574	2.649	-5.4137E-06

HEEL = 20.00 DEGREES

DISPLACEMENT	CENTER OF FROM B.L.	BUOYANCY FROM C.L.	GZ RIGHTING ARM	TANGENT TO CROSS CURVE
(L.TONS)	(FEET)	(FEET)	(FEET)	(FEET /L.TONS)
15000.0	10.253	17.666	9.847	-3.6677E-04
20000.0	11.794	15.498	8.337	-2.4663E-04
25000.0	13.304	13.853	7.307	-1.6931E-04
30000.0	14.795	12.560	6.602	-1.1574E-04
35000.0	16.272	11.518	6.128	-7.5709E-05
40000.0	17.734	10.666	5.827	-4.6191E-05
45000.0	19.178	9.957	5.655	-2.3642E-05
50000.0	20.605	9.361	5.583	-5.8796E-06

INTACT STABILITY

SL-7 INTACT STABILITY EXAMPLE

HEEL = 30.00 DEGREES

CENTER OF GRAVITY FROM B.L. = 30.00 FEET ; FROM C.L. = 0.00 FEET

DISPLACEMENT (L.TONS)	CENTER OF FROM B.L. (FEET)	BUOYANCY FROM C.L. (FEET)	GZ RIGHTING ARM (FEET)	TANGENT TO CROSS CURVE (FEET /L.TONS)
15000.0	13.120	23.849	12.214	-3.1785E-04
20000.0	14.596	21.537	10.950	-2.0073E-04
25000.0	16.045	19.750	10.126	-1.3260E-04
30000.0	17.472	18.306	9.590	~8.5536E-05
35000.0	18.878	17.102	9.249	-5.2131E-05
40000.0	20.264	16.078	9.055	-2.6525E-05
45000.0	21.627	15.188	8.967	-9.5441E-06
50000.0	22.967	14.404	8.958	5.5012E-06

HEEL = 40.00 DEGREES

DISPLACEMENT (L.TONS)	CENTER OF FROM B.L. (FEET)	BUOYANCY FROM C.L. (FEET)	GZ RIGHTING ARM (FEET)	TANGENT TO CROSS CURVE (FEET /L.TONS)
15000.0	16.789	29.085	13.788	-2.3957E-04
20000.0	18.230	26.720	12.903	-1.2486E-04
25000.0	19.676	24.926	12.458	-5.8241E-05
30000.0	21.104	23.484	12.272	-1.9274E-05
35000.0	22.497	22.264	12.232	3.3706E-06
40000.0	23.844	21.188	12.274	1.0961E-05
45000.0	25.091	20.144	12.276	-1.3631E-05
50000.0	26.200	19.048	12.149	-3.6887E-05

-

INTACT STABILITY SL-7 INTACT STABILITY EXAMPLE

HEEL = 50.00 DEGREES

CENTER OF GRAVITY FROM B.L.= 30.00 FEET ; FROM C.L.= 0.00 FEET

DISPLACEMENT (L.TONS)	CENTER OF FROM B.L. (FEET)	BUOYANCY From C.L. (FEET)	GZ RIGHTING ARM (FEET)	TANGENT TO CROSS CURVE (FEET /L.TONS)
15000.0	21.520	33.811	15.237	1.0154E-05
20000.0	23.216	31.683	15.169	-1.4586E-05
25000.0	24.635	29.869	15.089	-1.1028E-05
30000.0	25.821	28.205	14.929	-5.1676E-05
35000.0	26.783	26.577	14.619	-6.6011E-05
40000.0	27.617	24.995	14.241	-8.1972E-05
45000.0	28.365	23.450	13.821	-8.2776E-05
50000.0	29.071	21.949	13.397	-8.5519E-05

HEEL = 60.00 DEGREES

DISPLACEMENT (L.TONS)	CENTER OF FROM B.L. (FEET)	BUOYANCY FROM C.L. (FEET)	GZ RIGHTING ARM (FEET)	TANGENT TO CROSS CURVE (FEET /L.TONS)
15000.0	27.080	37.701	16.322	1.9520E-04
20000.0	28.833	35.655	16.817	1.5126E-05
25000.0	29.764	33.498	16.544	-1.0495E-04
30000.0	30.284	31.354	15.923	-1.4521E-04
35000.0	30.626	29.289	15.187	-1.4519E-04
40000.0	30.944	27.341	14.488	-1.3586E-04
45000.0	31.251	25.484	13.825	-1.3010E-04
50000.0	31.561	23.705	13.204	-1.1881E-04

INTACT STABILITY SL-7 INTACT STABILITY EXAMPLE

HEEL = 70.00 DEGREES

CENTER OF GRAVITY FROM B.L. = 30.00 FEET ; FROM C.L. = 0.00 FEET

DISPLACEMENT (L.TONS)	CENTER OF FROM B.L. (FEET)	BUOYANCY FROM C.L. (FEET)	GZ RIGHTING ARM (FEET) (TANGENT TO CROSS CURVE FEET /L.TONS)
15000.0	32.311	40.164	15.909	6.7890E-05
20000.0	33.213	37.718	15.920	-4.6611E-05
25000.0	33.707	35.362	15.578	-8.3496E-05
30000.0	33.950	33.085	15.027	-1.2669E-04
35000.0	34.002	30.878	14.321	-1.5189E-04
40000.0	33.949	28.751	13.544	-1.5551E-04
45000.0	33.889	26.722	12.794	-1.4297E-04
50000.0	33.867	24.786	12.111	-1.2897E-04

HEEL = 80.00 DEGREES

DISPLACEMENT (L.TONS)	CENTER OF FROM B.L. (FEET)	BUOYANCY FROM C.L. (FEET)	GZ RIGHTING ARM (FEET) (TANGENT TO CROSS CURVE FEET /L.TONS)
15000.0	36.780	41.374	13.862	-4.8910E-05
20000.0	36.919	38.722	13.537	-7.8287E-05
25000.0	36.930	36.234	13.117	-9.0242E-05
30000.0	36.875	33.878	12.654	-9.5399E-05
35000.0	36.759	31.628	12.149	-1.0204E-04
40000.0	36.578	29.465	11.595	-1.1953E-04
45000.0	36.323	27.380	10.981	-1.2294E-04
50000.0	36.066	25.378	10.381	-1.1532E-04

PROGRAM STATIC (05/79) 07/10/79 10.50.30 PAGE 32

*DRAFT(WTDIST=DWSL7BA, KG=40.26, WAVE=1, TITLE)

TOTAL 41422.90 477.68

WEIGHT BLOCK DATA SL-7 BALLAST-L/20 WAVE TROUGH AMIDSHIPS

WEIGHT TYPE	BLOCK WEIGHT (L.TONS)	BLOCK LCG (FEET)	FWD END BLOCK (FEET)	AFT END BLOCK (FEET)
1	777.40	19.00 84.32	-20.00 42.00	42.00 115.25
1	1859.90			167.75
1	1217.90	143.18	115.25	
1	1151.80	185.52	167.75	207.75 247.75
1	1379.20	225.50 265.54	207.75	287.75
1	1844.30		247.75	
1	1990.60	305.53	287.75	327.75 367.75
1	2429.00	345.53	327.75	407.75
1	2547.50	385.52	367.75	
1	2707.60	425.51	407.75	447.75
I	2714.90	467.99	447.75	492.75
1	2697.90	512.99	492.75	537.75
1	3284.90	550.00	537.75	562.75
1	3031.40	587.50	562.75	612.75
1	2726.30	635.00	612.75	652.75
1	2757.40	674.35	652.75	697.75
1	1631.30	716.10	697.75	737.75
1	1217.70	756.40	737.75	777.75
1	982.50	795.55	777.75	817.75
1	901.20	835.50	817.75	852.50
1	889.30	869.50	852.50	880.50
1	682.90	900.50	880.50	920.50
BLOCK	SUMMARY WEIGHT	SUMMARY LCG		
TYPE	(L.TONS)	(FEET)		
1	41422.90	477.68		

BALANCING OF SHIP SL-7 BALLAST-L/20 WAVE TROUGH AMIDSHIPS

WAVE CHARACTERISTICS

SINUSOIDAL WAVE

CREST (FROM F.P.)(FEET)	0.00
WAVE LENGTH (FEET)	880.50
HEIGHT (CREST TO TROUGH)	44.0250
WAVE HEADING (BOW=0 DEGREES)	0.00

6 ITERATIONS TO BALANCE SHIP

TRIM (+ BOW UP) =	-18.5919	FEET
HEEL (+ ST'BD.	DOWN) =	0.0000	DEGREES
DRAFT FOWARD	=		FEET
DRAFT AFT	=	25.5610	FEET
WEIGHT	=	41422.9000	L.TONS
BUOYANCY	=	41422.9002	L.TONS
LCG (FROM F.P.)	=	477.6818	FEET
LCB (FROM F.P.)	=	477.2854	FEET
VCG (FROM B.L.)	=	40.2600	FEET
VCB (FROM B.L.)	=		FEET
HCG (FROM C.L.)	=	0.0000	FEET
HCB (FROM C.L.)	=	0.0000	FEET

BALANCING OF SH.: SL-7 BALLAST-L/20 WAVE TROUGH AMIDSHIPS

STATION FROM F.P.	MEAN Waterline	WAVE ELEVATION	DRAFT FROM B.L.
0.000	44.1528	22.0078	66.1607
11.006	43.9261	21.9344	65.8605
22.013	43.6994	21.7258	65.4251
44.025	43.2459	20.9093	64.1552
66.037	42.7925	19.5793	62.3718
88.050	42.3390	17.7691	60.1081
110.062	41.8855	15.5237	57.4092
132.075	41.4321	12.8985	54.3305
176.100	40.5252	6.7743	47.2995
220.125	39.6182	0073	39.6109
264.150	38.7113	-6.7882	31.9231
308.175	37.8044	-12.9103	24.8941
352.200	36.8975	-17.7778	19.1197
396.225	35.9905	-20.9139	15.0767
440.250	35.0836	-22.0079	13.0758
484.275	34.1767	-20.9467	13.2300
528.300	33.2698	-17.8282	15.4415
572.325	32.3629	-12.9543	19.4086
616.350	31.4559	-6.8021	24.6538
660.375	30.5490	.0221	30.5711
704.400	29.6421	6.8441	36.4862
748.425	28.7352	12.9899	41.7251
770.437	28.2817	15.6156	43.8974
792.450	27.8283	17.8541	45.6823
814.463	27.3748	19.6502	47.0250
836.475	26.9213	20.9601	47.8815
858.487	26.4679	21.7522	48.2201
869.494	26.2411	21.9477	48.1889
880.500	26.0144	22.0077	48.0221
902.513	25.5610	21.7211	47.2820

SHEAR FORCE-BENDING MOMENT SL-7 BALLAST-L/20 WAVE TROUGH AMIDSHIPS

DISTANCE	WEIGHT	BUOYANCY	SHEAR	WEIGHT	BUOYANCY	BENDING
FROM FP	FORCE	FORCE	FORCE	MOMENT	MOMENT	MOMENT
(FEET)		(L.TONS)		(FEET -L.TO	
-20.00	0.	0.	0.0	0.	0.	0.0
42.00	7.774E+02	8.191E+02	-41.7	1.788E+04	1.516E+04	
115.25	2.637E+03	3.372E+03	-735.1	1.324E+05	1.606E+05	-28228.4
167.75	3.855E+03	5.852E+03	-1996.8	3.007E+05	4.011E+05	-100357.7
207.75	5.007E+03	7.935E+03	-2928.0	4.805E+05	6.766E+05	-196015.9
247.75	6.386E+03	1.005E+04	-3667.3	7.115E+05	1.036E+06	-324959.7
287.75	8.230E+03	1.209E+04	-3857.1	1.008E+06	1.480E+06	-471810.3
327.75	1.022E+04	1.396E+04	-3736.9	1.381E+06	2.001E+06	-619896.7
367.75	1.265E+04	1.562E+04	-2974.0	1.844E+06	2.594E+06	-749407.2
407.75	1.520E+04	1.710E+04	-1901.1	2.407E+06	3.249E+06	-841798.0
447.75	1.791E+04	1.846E+04	-558.5	3.075E+06	3.960E+06	-885166.0
492.75	2.062E+04	2.001E+04	608.9	3.948E+06	4.826E+06	-877601.0
537.75	2.332E+04	2.175E+04	1568.1	4.943E+06	5.764E+06	-821514.3
562.75	2.660E+04	2.287E+04	3736.2	5.567E+06	6.322E+06	-754121.3
612.75	2.963E+04	2.551E+04	4123.0	6.974E+06	7.529E+06	-554452.4
652.75	3.236E+04	2.803E+04	4334.9	8.208E+06	8.598E+06	-390371.8
697.75	3.512E+04	3.116E+04	3957.3	9.729E+06	9.929E+06	-200535.8
737.75	3.675E+04	3.402E+04	2725.3	1.117E+07	1.123E+07	-64468.4
777.75	3.797E+04	3.673E+04	1239.3	1.266E+07	1.265E+07	15480.2
817.75	3.895E+04	3.899E+04	-44.4	1.421E+07	1.417E+07	39796.7
852.50	3.985E+04	4.041E+04	-560.7	1.557E+07	1.555E+07	27182.8
880.50	4.074E+04		-372.1	1.670E+07	1.669E+07	10529.9
920.50	4.142E+04		-84.4	1.834E+07	1.834E+07	-993.1

HYDROSTATICS

SL-7 BALLAST-L/20 WAVE TROUGH AMIDSHIPS

WAVE CHARACTERISTICS

SINUSOIDAL WAVE

CREST (FROM F.P.)(FEET)	0.00
WAVE LENGTH (FEET)	880.50
HEIGHT (CREST TO TROUGH)	44.0250
WAVE HEADING (BOW=0 DEGREES)	0.00

STATION	MEAN DRAFT	BEAM	AREA	S.A. COEF.	VCB	нсв
FROM F.P.	(FEET)	(FEET)	(FEET ##2)		(FEET)	(FEET)
0.0000	66.1607	0.0000	455.036	1.00000	33.1927	0.0000
11.0063	65.8605	0.0000	584.240	1.00000	35.5853	0.0000
22.0125	65.4251	0.0000	705.129	1.00000	37.4101	0.0000
44.0250	64.1552	35.1631	939.247	.41635	38.4499	0.0000
66.0375	62.3718	41.8434	1093.302	.41891	37.3076	0.0000
88.0500	60.1081	47.6153	1323.513	.46243	36.3746	0.0000
110.0625	57.4092	51.9332	1488.593	.49929	34.7062	0.0000
132.0750	54.3305	55.1950	1618.241	.53963	32.5902	0.0000
176.1000	47.2995	60.6513	1809.434	.63073	27.8044	0.0000
220.1250	39.6109	66.8454	1871.982	.70699	22.9102	0.0000
264.1500	31.9231	74.4864	1798.446	.75634	18.1492	0.0000
308.1750	24.8941	82.2428	1638.261	.80018	13.9363	0.0000
352.2000	19.1197	90.0216	1434.038	.83317	10.5217	0.0000
396.2250	15.0767	96.3074	1249.403	.86047	8.1981	0.0000
440.2500	13.0758	101.8772	1169.043	.87758	7.0501	0.0000
484.2750	13.2300	104.0828	1216.928	.88374	7.1095	0.0000
528.3000	15.4415	103.6565	1408.098	.87972	8.3024	0.0000
572.3250	19.4086	103.6145	1725.649	.85810	10.5551	0.0000
616.3500	24.6538	103.2015	2090.196	.82152	13.7274	0.0000
660.3750	30.5711	102.0533	2393.314	.76712	17.6966	0.0000
704.4000	36.4862	97.8689	2538.161	.71080	21.9106	0.0000
748.4250	41.7251	93.2967	2438.483	.62641	26.2354	0.0000
770.4375	43.8974	88.9414	2283.067	.58476	28.3065	0.0000
792.4500	45.6823	85.5076	2041.489	.52263	30.3046	0.0000
814.4625	47.0250	80.1389	1788.365	.47455	32.2570	0.0000
836.4750	47.8815	70.6972	1394.009	.53497	35.2064	0.0000
858.4875	48.2201	63.8138	1014.420	.49964	37.7052	0.0000
869.4938	48.1889	58.5331	808.518	.54764	39.2271	0.0000
880.5000	48.0221	52.5334	629.781	.54473	40.2453	0.0000
902.5125	47.2820	38.9729	335.873	.39676	41.6095	0.0000

HYDROSTATICS

SL-7 BALLAST-L/20 WAVE TROUGH AMIDSHIPS

VOLUME (MLD.)	1449801.5	FEET **3
DISPLACEMENT (MLD.)	41422.900	L.TONS
BLOCK COEFFICIENT (MLD.)	.460678	
HALF-AREA MIDSHIP SECTION		FEET **2
	.327076	
PRISMATIC COEFFICIENT (MLD.),	1.408473	
TRIM	-18.592	
HEEL		
		DEGREES
VCB (FROM B.L.)	21.020	FEET
HCB (FROM C.L.)	0.000	FEET
LCB (FROM F.P.)	477.285	FEET
BM, TRANSVERSE	32.536	FEET
BM, LONGITUDINAL	2442.681	
MOMENT TO ALTER TRIM 0.1 FEET	11491.531	
L.TONS PER 0.1 FEET IMMERSION	203.421	
AREA OF WATERPLANE	71197.454	
WATERPLANE COEFFICIENT (MLD.)	.793703	
L.C.F. FROM F.P.	497.118	FEET
CHANGE IN DISPL. FOR 1 FEET TRIM AFT		
WETTED SURFACE (MLD.)	108160.717	

PROGRAM STATIC (05/79)

07/10/79 10.50.30 PAGE 39

*DRAFT(WTDIST=DWSL7FU, KG=42.31, TITLE, EQUALSTATION=21, POINTS=19, LIST)

WEIGHT BLOCK DATA SL-7 - NORMAL FULL LOAD DEPARTURE

WEIGHT Type	BLOCK WEIGHT (L.TONS)	BLOCK LCG (FEET)	FWD END BLOCK (FEET)	AFT END BLOCK (FEET)
1	765.20	19.00	-20.00	42.00
i	1847.70	84.32	42.00	115.25
i	1205.70	143.18	115.25	167.75
i	1613.40	185.52	167.75	207.75
1	1943.60	225.50	207.75	247.75
1	2379.20	265.54	247.75	287.75
1	2305.60	305.53	287.75	327.75
1	2610.80	345.53	327.75	367.75
1	3148.70	385.52	367.75	407.75
1	3343.70	425.51	407.75	447.75
1	3299.00	467.99	447.75	492.75
1	3179.20	512.99	492.75	537.75
1	3293.30	550.00	537.75	562.75
1	3039.80	587.50	562.75	612.75
1	2661.30	635.00	612.75	652.75
1	2898.70	674.35	652.75	697.75
1	2116.10	716.10	697.75	737.75
1	1678.30	756.40	737.75	777.75
1	1597.20	795.55	777.75	817.75
1	1244.50	835.50	817.75	852.50
1	897.70	869.50	852.50	880.50
1	691.30	900.50	880.50	920.50
BLOCK TYPE	SUMMARY WEIGHT (L.TONS)	SUMMARY LCG (FEET)		
1	47760.00	478.86		
TOTAL	47760.00	478.86		

BALANCING OF SHIP SL-7 - NORMAL FULL LOAD DEPARTURE

6 ITERATIONS TO BALANCE SHIP

TRIM (+ BOW UP) =	.4170	FEET
HEEL (+ ST'BD.	DOWN) =	0.0000	DEGREES
DRAFT FOWARD	=	32.5742	FEET
DRAFT AFT	=	32.9913	FEET
WEIGHT	=	47760.0000	L.TONS
BUOYANCY	=	47760.0009	L.TONS
LCG (FROM F.P.)	=	478.8632	FEET
LCB (FROM F.P.)	=	478.8743	FEET
VCG (FROM B.L.)	=	42.3100	FEET
VCB (FROM B.L.)	=	18.2314	FEET
HCG (FROM C.L.)	=	0.0000	FEET
HCB (FROM C.L.)	=	0.0000	FEET

SHEAR FORCE-BENDING MOMENT SL-7 - NORMAL FULL LOAD DEPARTURE

DISTANCE FROM FP	WEIGHT FORCE	BUOYANCY FORCE	SHEAR FORCE	WEIGHT MOMENT	BUOYANCY MOMENT	BENDING MOMENT
(FEET)	101.00	(L.TONS)	1002	(FEET -L.TON	
~20.00	0.	0.	0.0	0.	0.	0.0
42.00	7.652E+02		431.2	1.760E+04		
115.25	2.613E+03	1.306E+03	1307.3	1.308E+05	6.285E+04	67950.8
167.75	3.819E+03	2.497E+03	1321.4	2.976E+05	1.603E+05	137305.2
207.75	5.432E+03	3.808E+03	1623.9	4.862E+05	2.851E+05	201125.6
247.75	7.376E+03	5.529E+03	1846.4	7.467E+05	4.704E+05	276344.3
287.75	9.755E+03	7.693E+03	2061.8	1.095E+06	7.333E+05	361279.6
327.75	1.206E+04	1.031E+04	1747.6	1.536E+06	1.092E+06	444065.9
367.75	1.467E+04	1.336E+04	1315.8	2.076E+06	1.564E+06	512438.9
407.75	1.782E+04	1.674E+04	1079.4	2.733E+06	2.165E+06	568383.4
447.75	2.116E+04	2.036E+04	799.2	3.520E+06	2.906E+06	614102.3
492.75	2.446E+04	2.456E+04	-96.0	4.555E+06	3.917E+06	637573.8
537.75	2.764E+04	2.874E+04	-1094.4	5.734E+06	5.116E+06	617744.9
562.75	3.094E+04	3.101E+04	-78.6	6.467E+06	5.863E+06	603821.2
612.75	3.397E+04	3.540E+04	-1424.0	8.091E+06	7.525E+06	565789.0
652.75	3.664E+04	3.863E+04	-1995.1	9.497E+06	9.006E+06	490320.0
697.75	3.953E+04	4.182E+04	-2281.4	1.121E+07	1.082E+07	394579.5
737-75	4.165E+04	4.413E+04	-2478.3	1.284E+07	1.254E+07	301052.0
777.75	4.333E∓04	4.588E+04	-2551.4	1.454E+07	1.434E+07	200788.0
817.75	4.493E+04	4.705E+04	-2121.8	1.631E+07	1.620E+07	108959.6
852.50	4.617E+04	4.758E+04	-1410.8	1.789E+07	1.785E+07	45830.1
880.50	4.707E+04	4.773E+04	-664.4	1.920E+07	1.918E+07	13610.5
920.50	4.776E+04	4.776E+04	-2.0	2.109E+07	2.109E+07	-24.4

HYDROSTATICS

SL-7 - NORMAL FULL LOAD DEPARTURE

STATION	MEAN DRAFT	BEAM	AREA	S.A. COEF.	VCB	HCB
FROM F.P.	(FEET)	(FEET)	(FEET **2)		(FEET)	(FEET)
0.0000	32.5742	0.0000	222.324	1.00000	10.3399	0.0000
44.0250	32.5946	6.0058	337.029	1.72169	13.5029	0.0000
88.0500	32.6149	15.8799	495.892	.95747	15.7963	0.0000
132.0750	32.6353	29.0407	719.110	.75875	17.6561	0.0000
176.1000	32.6556	44.8402	1042.186	.71174	18.6209	0.0000
220.1250	32.6760	60.5819	1429.338	.72204	18.8262	0.0000
264.1500	32.6963	75.1676	1853.956	.75434	18.5905	0.0000
308.1750	32.7166	87.5196	2298.444	.80271	18.2403	0.0000
352.2000	32.7370	97.0863	2706.108	.85143	17.8344	0.0000
396.2250	32.7573	103.1786	3023.046	.89443	17.5044	0.0000
440.2500	32.7777	105.4995	3226.899	.93316	17.2270	0.0000
484.2750	32.7980	105.5000	3273.375	.94601	17.1344	0.0000
528.3000	32.8184	105.5000	3235.228	.93441	17.2624	0.0000
572.3250	32.8387	105.5000	3134.283	.90469	17.5758	0.0000
616.3500	32.8591	105.5000	2944.349	.84934	18.1117	0.0000
660.3750	32.8794	103.2517	2625.787	.77346	18.9552	0.0000
704.4000	32.8997	95.5877	2185.048	.69481	19.8611	0.0000
748.4250	32.9201	83.7717	1651.807	.598 96	20.9230	0.0000
792.4500	32.9404	61.0736	1080.407	.53704	21.9932	0.0000
836.4750	32.9608	44.9469	506.188	.51337	25.0663	0.0000
880.5000	32.9811	19.2025	77.919	.60254	30.3453	0.0000

VOLUME (MLD.)	1670224.0	FEET **3
DISPLACEMENT (MLD.)	47720.685	L.TONS
BLOCK COEFFICIENT (MLD.)	.548551	
HALF-AREA MIDSHIP SECTION	1613.449	FEET **2
MIDSHIP SECTION COEFFICIENT	.933162	
PRISMATIC COEFFICIENT (MLD.),	.587841	
TRIM	.417	FEET
HEEL	0.000	DEGREES
VCB (FROM B.L.)	18.240	FEET
HCB (FROM C.L.)	0.000	FEET
LCB (FROM F.P.)	478.373	FEET
BM, TRANSVERSE	26.813	
BM, LONGITUDINAL	1456.486	FEET
MOMENT TO ALTER TRIM 0.1 FEET	7893.755	
L.TONS PER 0.1 FEET IMMERSION	182.368	
AREA OF WATERPLANE	63828.925	FEET **2
WATERPLANE COEFFICIENT (MLD.)	.687128	
L.C.F. FROM F.P.	496.493	FEET
CHANGE IN DISPL. FOR 1 FEET TRIM AFT	-116.490	L.TONS
WETTED SURFACE (MLD.)	99185.360	FEET **2
	•	

PAGE

44

WET OFFSETS TABLE (FEET) SL-7 - NORMAL FULL LOAD DEPARTURE 64.305 LENGTH = 880.500BEAM = 105.500DEPTH = STATION 2 STATION 3 STATION 1 19 POINTS 20 POINTS 20 POINTS 44.025 X = X = X = 88.050 0.000 HEIGHT Z HEIGHT Z HEIGHT Z H-B Y H-B Y H-B Y 0.000 0.000 0.000 0.000 0.000 -3.0472 -4.973 .170 0.000 3.003 2 0.000 7.940 2 3 -6.882 .435 -2.112 2.687 3 -2.069 7.229 3 2.564 4 4 -8.751.930 11 -4.237-4.1766.659 5 5 5 -10.5921.512 -6.3722.606 -6.3196.224 -8.506 6 -8.475 2.976 6.214 -12.4112.168 6 6 7 6.439 -14.189 7 -10.538 3.500 7 -10.669 2.925 8 -15.952 3.717 8 -12.552 4.210 8 -12.805 6.909 9 -17.6794.586 9 -14.506 5.067 9 -14.898 7.544 10 -19.401 5.466 10 -16.451 5.949 10 -16.988 8.188 11 -21.172 6.240 11 -18.4186.781 11 -19.079 8.833 -23.022 6.796 -20.407 7.556 9.351 12 12 12 -21.203 13 -24.925 7.062 13 -22.4798.045 13 -23.355 9.714 14 -26.8376.835 14 -24.604 8.227 14 ~25.523 9.574 15 -28.687 6.284 15 -26.708 7.949 15 -27.6739.167 16 -30.220 5.172 16 -28.692 7.175 -29.448 7.902 16 17 -31.397 3.664 17 -30.325 5.845 17 -30.875 6.244 18 -32.0701.866 18 -31.565 4.127 18 -31.851 4.308 19 -32.574 .000 19 -32.139 2.086 19 -32.233 2.154 20 -32.595 .000 20 .000 -32.615 STATION STATION STATION 20 POINTS 20 POINTS 20 POINTS X = 132.075X = 176.100X = 220.125HEIGHT Z H-B Y HEIGHT Z H-B Y HEIGHT Z H-B Y 1 0.000 0.000 1 0.000 0.000 0.000 0.000 14.520 0.000 2 0.000 22.420 0.000 2 2 30.291 -2.053 21.450 -2.458 3 13.616 3 -2.203 3 29.208 4 -4.150 12.830 и -4.426 4 20.527 -4.915 28,126 5 -6.294 12.169 5 -6.662 5 19.635 27.043 -7.3736 -8.47111.626 6 -8.879 18.697 6 -9.831 25.961 7 17.904 -10.67411.242 7 -11.149 7 -12.289 24.878 8 -12.909 11.045 8 -13.450 8 17.195 -14.729 23.757 9 -15.151 11.100 9 -15.75016.485 9 -17.12522.548 -17.393 10 11.179 10 -18.051 15.776 10 -19.45521.214 -19.634 11 11.277 -20.341 11 15.034 -21.803 19.910 11 -21.876 12 11.305 -22.647 14.351 -24.055 18.461 12 12 13 -24.057 10.872 -24.859 13.406 -26.214 16.867 13 13 12.331 -28.071 14 -26.267 10.594 14 -27.009 14 14.929 15 -28.296 9.669 15 -28.995 10.976 -29.719 12.811 15 16 -30.0218.256 16 -30.625 9.219 -31.161 10.551 16 -31.435 17 6.527 17 -31.756 7.113 17 -31.983 8.019 18 -32.1854.439 18 -32.4024.797 18 -32.341 5.357 19 -32.584 2.243 19 -32.5832.406 19 -32.554 2.683 20 -32.635 .000 20 -32.656 .000 .000

20

-32.676

WET OFFSET:	S TABLE (FEE	et) si	7 - NORMAL	FULL LOAD D	EPARTURE	
LENGTH =	880.500	BEAM =	105.500	DEPTH =	64.305	
STATION 7 20 POINTS		STATION 8	3	STATION 20 POINTS	9	
X = 264.150	0	X = 308.	175	X = 352.	200	
HEIGHT Z H	-B Y H	EIGHT Z	H-B Y	HEIGHT Z	H-B Y	
2 0.000 37 3 -2.776 36 4 -5.574 35 5 -8.339 33 6 -11.092 32 7 -13.820 31 8 -16.474 29 9 -19.025 28 10 -21.527 26 11 -23.961 24 12 -26.202 22 13 -28.036 20 14 -29.650 17 15 -30.947 14 16 -31.897 12 17 -32.229 9 18 -32.476 6	.361 3 .192 4 .947 5 .674 6 -3 .885 8 -3 .245 9 -3 .532 10 -3 .731 11 -3 .690 12 -3 .714 14 -3 .972 15 -3 .098 16 -3 .083 17 -3 .062 18 -3	-3.229 -6.450 -9.636 12.803 15.848 18.761 21.460 24.017 26.277 28.207 29.834 31.072 31.917 32.213 32.428 32.524 32.620	0.000 1 43.760 2 42.707 3 41.629 4 40.450 5 39.225 6 37.722 7 35.978 8 33.927 9 31.698 10 29.166 11 26.373 12 23.406 13 20.244 14 16.958 15 13.574 16 10.186 17 6.790 18 3.395 19	0.000 0.000 -3.656 -7.308 -10.901 -14.438 -17.828 -21.032 -23.949 -26.462 -28.485 -30.182 -31.350 -32.020 -32.357 -32.433 -32.509 -32.585 -32.661	0.000 48.543 47.746 46.941 45.898 44.685 43.117 41.192 38.866 36.108 32.960 29.650 26.107 22.430 18.705 14.964 11.223 7.482 3.741	
20 -32.696 STATION 10 20 POINTS	.000 20 ~	32.717 STATION 1 20 POINTS		-32.737 STATION 1 20 POINTS		
X = 396.22	5	X = 440.		X = 484.275		
HEIGHT Z H	-B Y H	EIGHT Z	H-B Y	HEIGHT Z	H-B Y	
2 0.000 51 3 -4.010 51 4 -7.998 50 5 -11.957 49 6 -15.835 48 7 -19.573 47 8 -23.082 45 9 -26.159 42 10 -28.565 39 11 -30.344 36 12 -31.496 32 13 -32.052 28 14 -32.215 24 15 -32.305 20 16 -32.396 16 17 -32.486 12 18 -32.577 8	1.667 4 1.931 5 1.863 6 1.400 8 1.400 8 1.812 9 1.583 10 1.159 12 1.159 12 1.181 13 1.158 14 1.158 14 1.105 16 1.0079 17 1.0053 18 1.006 19	-4.235 -8.470 12.699 16.880 20.902 24.645 27.688 29.990 31.360 32.023 32.182 32.267	0.000 1 52.750 3 52.750 4 552.762 5 52.462 5 51.765 6 7 8 498 8 9 10 11 13.558 12 25.409 10 133.875 12 29.643 13 29.643 13 225.409 16 12.704 15 16.939 16 12.704 18 4.235 19 .000 20	0.000 0.000 -4.300 -8.601 -12.901 -17.185 -21.354 -25.174 -28.216 -30.334 -31.505 -32.049 -32.195 -32.281 -32.367 -32.453 -32.540 -32.540 -32.798	0.000 52.750 52.750 52.750 52.750 52.399 51.428 49.481 46.474 42.758 38.656 34.394 30.097 25.798 21.498 17.198 12.899 4.300	

-32.900

-32.828

-32.879

.000

20

19

50

46

PAGE

.000

-32.920

.000

20

WET OFFSETS TABLE (FEET) SL-7 - NORMAL FULL LOAD DEPARTURE

	LENGT	H = 880.5	00	BEAM :	= 105.500		DEPTH =	64.305		
	STATION 19 20 POINTS X = 792.450			20 POINT	STATION 20 20 POINTS X = 836.475			STATION 21 20 POINTS X = 880.500		
	HEIGHT Z	H-B Y		HEIGHT Z	H-B Y		HEIGHT Z	H-B Y		
1 2 3 4 5 6 7 8 9 0 1 1 2 1 3 4 1 5 6 1 7 8 1 9	0.000 0.000 -2.521 -4.589 -6.380 -8.198 -10.019 -11.756 -13.513 -15.393 -17.169 -18.782 -20.429 -22.185 -23.992 -25.862 -27.805 -30.004 -32.379	0.000 30.537 30.290 29.022 27.139 25.282 23.427 21.494 19.579 17.785 15.895 13.857 11.847 9.933 8.066 6.263 4.537 3.163 2.128	1 2 3 4 5 6 7 8 9 10 11 2 13 14 15 16 17 18 19	0.000 0.000 -1.198 -2.388 -3.581 -4.802 -6.023 -7.258 -8.512 -9.765 -11.138 -12.537 -13.960 -15.408 -16.881 -18.452 -20.026 -21.585 -21.937	0.000 22.473 21.116 19.750 18.388 17.050 15.713 14.389 13.082 11.775 10.596 9.447 8.327 7.239 6.190 5.288 4.393 3.494 1.811	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 19 19 19 19 19 19 19 19 19 19 19 19	0.000 0.000 439 885 -1.331 -1.777 -2.223 -2.669 -3.115 -3.563 -4.019 -4.475 -4.931 -5.387 -5.842 -6.298 -6.734 -6.734	0.000 9.601 9.087 8.579 8.071 7.562 7.054 6.546 6.038 5.532 4.533 4.034 3.535 2.028 1.352 .676		
20	-32.940	.000	20	-21.937	.000	20	-6.734	.000		

-LONGITUDINAL LIMITS OF WETTED HULL..

WATERLINE FWD =	32.574	WATERLINE AFT =	32.991
WET HULL FWD =	0.000	WET HULL AFT =	902.513

PROGRAM STATIC (05/79) 07/10/79 10.50.30 PAGE 48

*COEFFICIENT(FIRSTSTATION=1, LASTSTATION=1)

SL-7 - NORMAL FULL LOAD DEPARTURE FRANK CLOSE FIT -19 POINTS

STATION 1 DRAFT = 32.574 FEET

ENDPOIN H-BRDTH	ITS OF SE I HEIGHT			ENT MIDPO BRDTH HE	INTS IGH T	SINE	COSINE	MOMEN
1.866 3.664 5.172 6.284 6.835 7.062 6.796 6.240 5.466 4.586 3.717	-32.574 -32.070 -31.397 -30.220 -28.687 -26.837 -24.925 -23.022 -21.172 -19.401 -17.679 -15.952 -14.189 -12.411 -10.592 -8.751 -6.882 -4.973 -3.047	1.933 1.919 1.914 1.894 1.930 1.925 1.932 1.933 1.933 1.933 1.933 1.933 1.933 1.933	2. 4. 5. 6. 6. 5. 4. 3. 2.	933 -32. 765 -31. 418 -30. 728 -27. 948 -25. 948 -25. 9518 -22. 853 -20. 152 -16. 321 -15. 547 -13. 840 -11. -9. 880 -27.	734 808 453 762 881 997 286 997 816 927	.2609 .3505 .6153 .8096 .9584 .9930 .9977 .9164 .8933 .9122 .9201 .9405 .9535 .9668 .9961	.9654 .9366 .7883 .5870 .2855 .1180 13879 4098 4550 4495 4098 3916 3397 2555 1379 0877	-7.532 -8.533 -15.474 -20.484 -24.733 -24.880 -24.7038 -20.933 -18.796 -16.887 -15.108 -13.235 -11.443 -9.590 -7.731 -5.912 -4.002
FREQ. PARAM.	A' 33	N' Z	M S	N S	M S.R	N S.R	I R	N R
.00 IN .01 .03 .06 .10 .15 .21 .28 .36 .45 .57 .82 1.01 1.25 1.55 1.95 2.45 3.05 3.80 4.70 5.80 7.10 8.70 10.70	134 .135 .135 .137 .138 .140 .141 .142 .143 .142 .143 .142 .140 .137 .132 .125 .118 .111 .107 .105 .106 .107 .110 .112 .113	0.000 000 000 .000 .000 .001 .003 .005 .008 .011 .016 .021 .027 .032 .035 .034 .029 .022 .014 .008 .001 .000	.731 .738 .7482 .7680 .825 .842 .835 .843 .7693 .8418 .528 .418 .3386 .418 .439	0.000 .000 .000 .001 .003 .007 .017 .034 .060 .098 .147 .208 .279 .349 .400 .422 .411 .373 .320 .259 .200 .148 .107 .073	13.09 13.11 13.22 13.41 13.66 13.98 14.67 14.93 15.03 14.81 13.50 12.17 10.64 9.21 8.06 7.38 7.11 7.32 7.59 7.87 8.12 9.17	0.00 .00 .01 .05 .14 .32 .62 1.11 1.79 2.67 3.76 5.00 6.17 6.97 7.21 6.83 5.93 4.92 3.77 1.93 1.31 .85 0.00	249.2 249.2 251.6 259.9 271.0 281.0 282.2 269.8 252.6 200.6 1756.5 145.5 145.5 155.7 165.3 181.6	0.0 .0 .0 .3 1.0 2.6 5.6 20.5 33.8 68.8 109.5 121.3 113.7 96.9 123.3 113.7 95.5 38.4 109.0

PROGRAM STATIC (05/79) 07/10/79 10.50.30 PAGE 50

*COEFFICIENT(FIRSTSTATION=11, LASTSTATION=11, LIST)

MAPPING STATION 11 SL-7 - NORMAL FULL LOAD DEPARTURE

VALUES PRINTED ARE FOR 8 ITERATIONS 3 MAPPING COEFFICIENTS

A(0) = 47.0731651A(1) = -10.1726039A(3) = -4.3511423

	ORIGINAL WETTED OFFSETS	MAPPED WETTED OFFSETS	MAPPED ANGLE
POINT	H-BRDTH HEIGHT	H-BRDTH HEIGHT	THETA
1	.0000 -32.7777	.0000 -32.5494	0.0000
2	2.1174 -32.7351	2.1060 -32.5504	.0300
3	4.2348 -32.6926	4.2200 -32.5533	.0601
4	6.3522 -32.6501	6.3346 -32.5578	.0904
5	8.4696 -32.6075	8.4602 -32.5632	.1211
6	10.5870 -32.5650	10.5908 - 32 <i>.</i> 5686	.1521
7	12.7043 -32.5224	12.7272 -32.5727	.1836
8	14.8217 -32.4799	14.8649 -32.5740	.2155
9	16.9391 -32.4374	17.0087 -32.5701	.2482
10	19.0565 -32.3948	19.1540 -32.5585	.2815
11	21.1739 -32.3523	21.2953 -32.5358	.3155
12	23.2913 -32.3097	23.4282 -32.4978	.3504
13	25.4087 -32.2672	25.5459 -32.4397	.3861
1 4	27.5261 -32.2247	27.6394 -32.3556	.4227
15	29.6435 -32.1821	29.6973 -32.2390	.4602
16	31.7590 -32.1026	31.7379 -32.0798	.4991
17	33.8745 -32.0232	33.7156 -31.8715	.5387
18	35.9647 -31.6915	35.8296 -31.5712	.5837
19	38.0549 -31.3598	37.8442 -31.1850	.6297
20	39.0511 -31.0173	38.9342 -30.9234	.6501
21	40.0472 -30.6747	39.9865 -30.6272	.6829
22	41.0434 -30.3322	40.9941 -30.2955	.7098
23	42.0395 -29.9896	41.9529 -29.9276	.7367
24	43.7987 -28.8386	43.9607 -28.9429	.7986
25	45.5579 -27.6876	45.6902 -27.7663	.8596
26	47.0279 -26.1662	47.2571 -26.2925	.9241
27	48.4980 -24.6447	48.5217 -24.6566	.9857
28	49.4752 -22.7734	49.5694 -22.8155	1.0468
29	50.4523 -20.9021	50.3902 -20.8760	1.1045
30	51.1084 -18.8910	51.0322 -18.8633	1.1594
31	51.7646 -16.8799	51.5321 -16.8046	1.2116
32	52.0833 -14.7892	51.9161 -14.7429	1.2608
33	52.4020 -12.6986	52.2150 -12.6546	1.3084
34	52.5156 -10.5845	52.4430 -10.5710	1.3540
35	52.6291 -8.4703	52.6160 -8.4687	1.3987
36	52.6664 -6.3528	52.7421 -6.3623	1.4423
37	52.7037 -4.2354	52.8281 -4.2470	1.4855
38	52.7267 -2.1177	52.8782 -2.1241	1.5282
39	52.7497 0.0000	52.89460000	1.5708

AVERAGE ERROR = STD. DEV. ERROR =

.41483 PERCENT OF DRAFT .22431 PERCENT OF DRAFT

STATION 11 SL-7 - NORMAL FULL LOAD DEPARTURE DRAFT = 32.778 FEET CONFORMAL MAPPING - 3 COEFFICIENTS

ENDPOINT H-BRDTH	S OF SEG HEIGHT	MENTS Length		ENT MIDP BRDTH H	OINTS EIGHT	SINE	COSINE	MOMEN
4.235 - 8.470 - 12.704 -	32.778 32.693 32.608 32.522 32.437	4.236 4.236 4.236 4.236 4.236	2.6 6.3 10.5 14.8	352 -32 587 -32 322 -32 557 -32	.735 .650 .565 .480	.0201 .0201 .0201 .0201 .0201	.9998 .9998 .9998 .9998	1.459 5.695 9.931 14.166 18.402
25.409 29.643 33.875 38.055	32.352 32.267 32.182 32.023 31.360	4.236 4.236 4.234 4.233 2.107	23.2 27.5 31.7 35.9	526 -32 759 -32 965 -31 051 -31	.310 .225 .103 .691	.0201 .0201 .0375 .1567 .3252	.9998 .9998 .9993 .9876 .9457	22.638 26.873 30.531 30.553 26.843 28.949
42.040 - 45.558 - 48.498 - 50.452 -	30.675 29.990 27.688 24.645 20.902	2.107 4.205 4.231 4.222 4.231 4.230	41.0 43.7 47.0 49.1 51.7	799 -28 028 -26 475 -22 108 -18	.332 .839 .166 .773 .891	.3252 .5475 .7192 .8864 .9507	.9497 .8368 .6949 .4629 .3102	20.862 13.860 2.714 -2.107 -6.771
	12.699 -8.470 -4.235 0.000	4.234 4.236 4.236	52.5 52.6 52.7	516 -10 566 -6 727 -2	.584 .353 .118	.9986 .9998 .9999	.0536 .0176 .0109	-7.752 -5.424 -1.545
FREQ. PARAM.	A' 33	N' Z	M S	и S	M S.R	N S.R	I R	N R
.01 .03 .06 .10 .15 .28 .36 .45 .67 .82 1.25 1.25 1.95 2.45 3.80 4.70 5.80	INITY 1.980 8.441 6.426 5.144 4.296 3.7369 3.153 3.047 3.022 3.153 3.737 4.1231 4.231 4.329 4.454	0.000 .893 1.362 1.670 1.850 1.927 1.922 1.849 1.765 1.383 1.176 .949 .717 .504 .184 .096 .047 .009	1.978 2.014 2.103 2.243 2.420 2.578 2.616 2.444 2.076 1.627 1.627 1.212 .858 .579 .379 .292 .197 .292 .346 .397	0.000 .0004 .022 .077 .207 .436 .744 1.051 1.403 1.445 1.445 1.3422 1.082 .917 .755 .606 .474 .364	-17.06 -17.40 -18.23 -19.51 -20.97 -21.39 -18.72 -14.50 -10.13 -4.25 -2.88 -2.88 -2.81 -3.65 -5.67 -6.51 -7.62 -7.92	0.00 05 87 -2.22 -4.42 -7.06 -9.23 -10.25 -9.38 -7.92 -6.13 -4.28 -2.61 -1.13 -3.8 .60 .51	829.2 832.7 841.0 853.3 865.7 870.3 857.7 824.9 781.7 743.3 705.3 709.1 729.6 739.4 749.0 750.8 754.4 755.7	0.0 .6 3.9 9.9 45.0 67.1 81.3 83.0 74.9 60.8 44.0 27.8 14.7 6.0 1.4 0.2 8.0 1.9
7.10	4.493	.002	.442	.209	-8.11	.39	756.6	. 7

PROGRAM STATIC (05/79) 07/10/79 10.50.30 PAGE 53

*COEFFICIENT(FIRSTSTATION=11,LASTSTATION=11,FRANK)

SL-7 - NORMAL FULL LOAD DEPARTURE FRANK CLOSE FIT -20 POINTS

STATION 11 DRAFT = 32.778 FEET

ENDPOI H-BRDT	NTS OF SE H HEIGHT			ENT MIDP BRDTH H	OINTS EIGHT	SINE	COSINE	MOMEN
.000 4.235 8.470 12.704 16.939 21.174 25.409 29.643	-32.778 -32.693 -32.608 -32.522 -32.437 -32.352 -32.267 -32.182	4.236 4.236 4.236 4.236 4.236 4.236 4.234	6. 10. 14. 19. 23. 27. 31.	352 -32 587 -32 822 -32 057 -32 291 -32 526 -32 759 -32	.735 .650 .565 .480 .395 .310 .225	.0201 .0201 .0201 .0201 .0201 .0201 .0201	.9998 .9998 .9998 .9998 .9998 .9998	1.459 5.695 9.931 14.166 18.402 22.638 26.873 30.531
33.875 38.055 42.040 45.558 48.498 50.452 51.765 52.402	-32.023 -31.360 -29.990 -27.688 -24.645 -20.902 -16.880 -12.699	4.233 4.214 4.205 4.231 4.222 4.231 4.230 4.234	35.0 40.0 43.0 47.0 51. 52.0	047 -30 799 -28 028 -26 475 -22 108 -18 083 -14	.691 .675 .839 .166 .773 .891 .789	.1567 .3252 .5475 .7192 .8864 .9507 .9886	.9876 .9457 .8368 .6949 .4629 .3102 .1507	30.553 27.896 20.862 13.860 2.714 -2.107 -6.771 -7.752
52.629 52.704 52.750 0.000 FREQ.	-8.470 -4.235 0.000 0.000	4.236 4.236 52.750	52.0 52.1 26.1	666 -6 727 - 2	.353 .118 .000	.9998 .9999 0.0000	.0176 .0109 -1.0000	-5.424 -1.545 -26.375
PARAM.	33	z	 S	 S	S.R	S.R	R	R
.01 .03 .06 .10 .15 .21 .28 .36 .45 .67 .82 1.25 1.25 1.95 2.45 3.80 4.70	NFINITY 12.004 8.497 6.487 5.206 4.357 3.796 3.209 3.103 3.130 3.241 3.606 3.815 4.0228 4.228 4.300 4.479	0.000 .878 1.347 1.655 1.836 1.913 1.907 1.834 1.709 1.546 1.361 1.151 .920 .684 .465 .286 .147 .032 .040 .012	2.034 2.039 2.128 2.270 2.448 2.606 2.470 2.101 1.651 1.234 .594 .200 .184 .205 .247 .286 .361	0.000 .000 .004 .022 .078 .209 .749 1.056 1.285 1.456 1.431 1.350 1.231 1.087 .921 .754 .602 .438	-17.19 -17.50 -18.32 -19.57 -20.98 -21.87 -21.26 -18.55 -14.34 -10.03 -6.63 -4.27 -2.63 -3.02 -3.87 -4.98 -6.94 -7.63 -8.06	0.00 00 05 25 -2.20 -4.37 -6.94 -9.99 -9.87 -8.93 -7.53 -1.91 47 .49 1.01 1.67	851.9 846.1 854.0 865.5 876.8 880.2 867.0 834.8 793.3 757.1 733.9 722.3 728.9 729.1 749.4 758.3 764.1 767.3 768.6 770.2	0.0 .0 .5 2.9 9.6 23.0 63.5 76.5 67.8 53.6 37.2 21.9 10.1 3.0
5.80 7.10 8.70	4.523 4.564 4.590 4.714	002 000 004	.411 .503 .398	.276 091 .091	-8.35 -8.34 -8.90 -8.95	.83 16 .21	771.1 770.7 771.0 775.4	2.7 1.6 1.9 0.0

APPENDIX B

JOB CONTROL FILES

TABLE 1

File COMSTAT 00100 JOB, CM10000, L15, T30. 00110 ACCOUNT, U707008, TED. 00120 GET, STATIC. 00130 RFL,100000. 00140 UNIFORE(-BATCH, LN=STATCOM, I=STATIC) 00150 PUT, LGO = STATBIN. 00160 LGO. 00170 PUT, OUTPUT = RESULTO. 00180 PUT, STATCOM. 00190 PUT, DAYO. 00200 DFD, DAYO, R. 00210 EXIT. 00215 NOEXIT. 00220 PUT, OUTPUT = RESULTO. 00230 PUT, DAYO. 00240 DFD, DAYO, R. 00250 EOR. 00260 \$D2SL7 00270 EOF.

TABLE 2

File RUNSTAT

00100 JOB, CM10000, L15, T400. 00110 ACCOUNT, U707008, TED. 00120 GET, LGO=STATBIN. 00130 RFL,100000. 00140 LGO. 00150 PUT, OUTPUT=RESULTO. 00160 PUT, DAYO. 00170 DFD, DAYO, R. 00180 EXIT. 00190 NOEXIT. 00200 PUT, OUTPUT = RESULTO. 00210 PUT, DAYO. 00220 DFD, DAYO, R. 00230 EOR. 00240 \$D2SL7 00250 EOF.

DATE ILME